


2012 - Mazda6 - General Information

TOWING

- Proper lifting and towing are necessary to prevent damage to the vehicle.
Government and local laws must be followed.
- A towed vehicle usually should have its drive wheels (front wheels) off the ground. If excessive damage or other conditions prevent this, use wheel dollies.
- When towing with the rear wheels on the ground, release the parking brake.

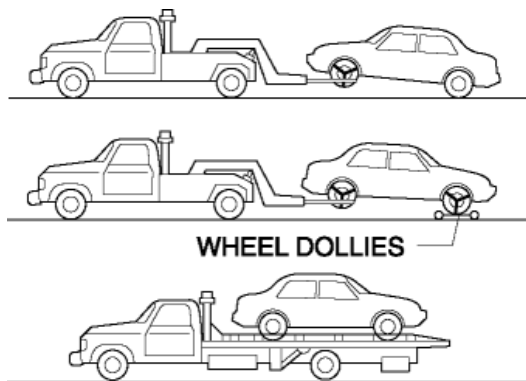


CAUTION:

- Do not tow the vehicle pointed backward with driving wheels on the ground. This may cause internal damage to the transaxle.



CAUTION:


- Do not tow with sling-type equipment. This could damage your vehicle. Use wheel-lift or flatbed equipment.

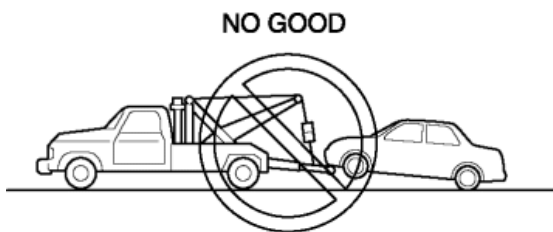

Vehicle Securing Position

- When transporting the vehicle by flat bed tow truck or trailer, secure the vehicle to the trailer using the holes and left tiedown loop shown in the figure.

FRONT
←

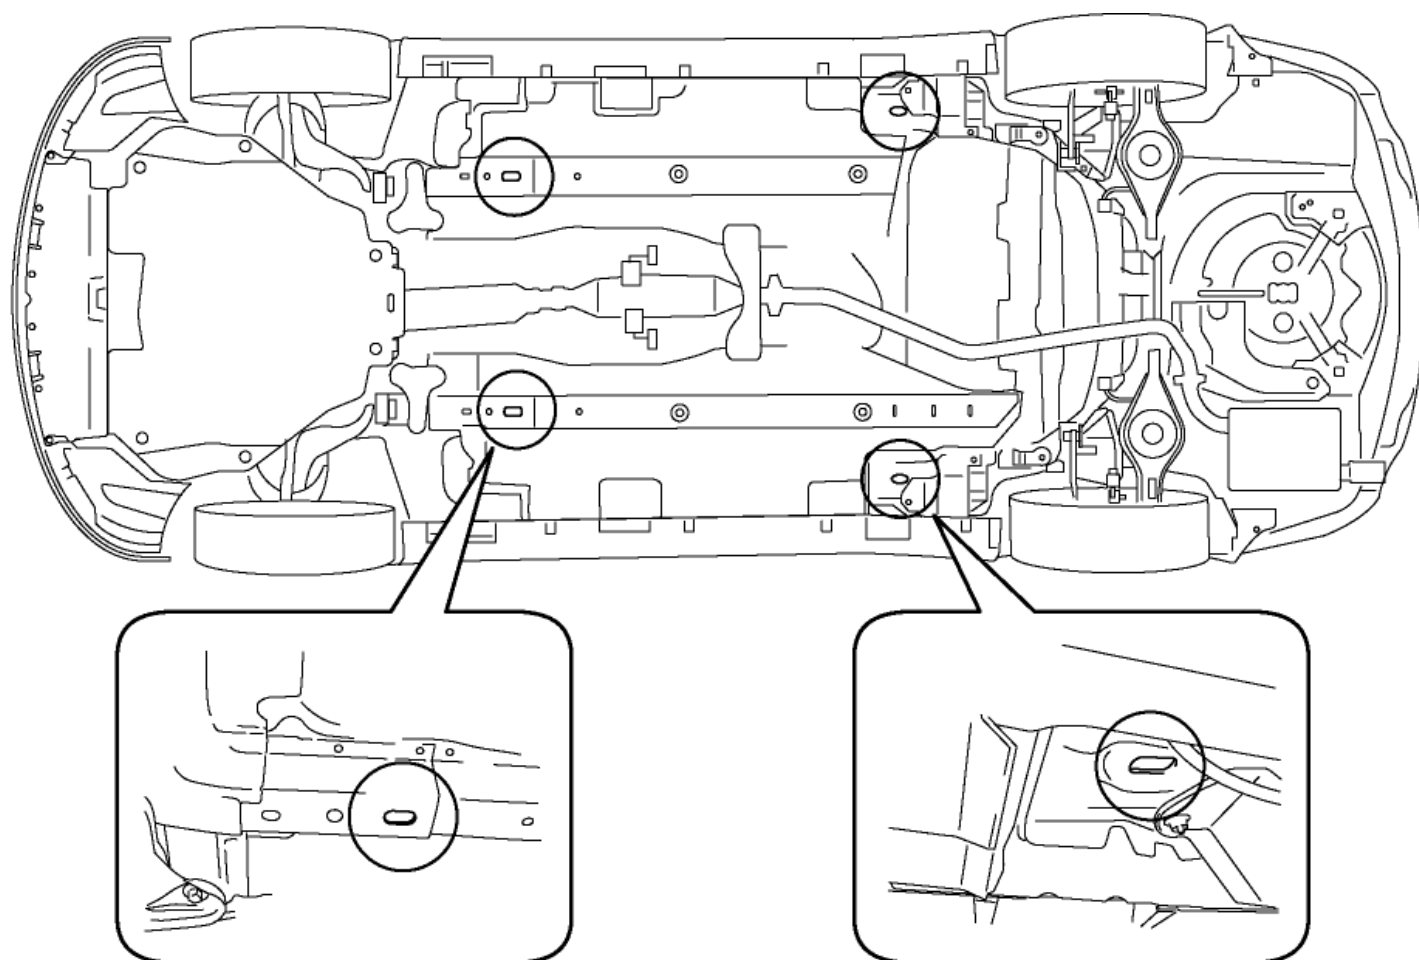

[< Previous](#) [Next >](#)


© 2011 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - General Information

TOWING

- Proper lifting and towing are necessary to prevent damage to the vehicle.
Government and local laws must be followed.
- A towed vehicle usually should have its drive wheels (front wheels) off the ground. If excessive damage or other conditions prevent this, use wheel dollies.
- When towing with the rear wheels on the ground, release the parking brake.

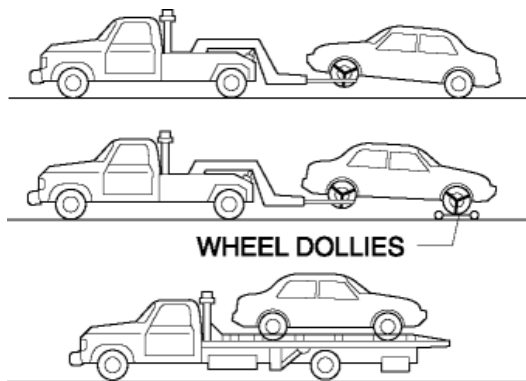


CAUTION:

- Do not tow the vehicle pointed backward with driving wheels on the ground. This may cause internal damage to the transaxle.



CAUTION:


- Do not tow with sling-type equipment. This could damage your vehicle. Use wheel-lift or flatbed equipment.

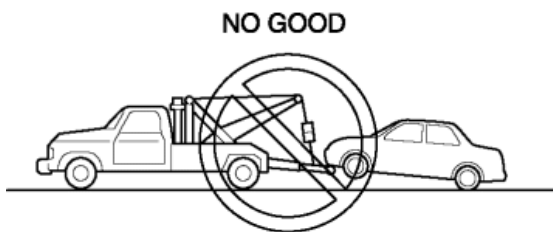

Vehicle Securing Position

- When transporting the vehicle by flat bed tow truck or trailer, secure the vehicle to the trailer using the holes and left tiedown loop shown in the figure.

FRONT
←

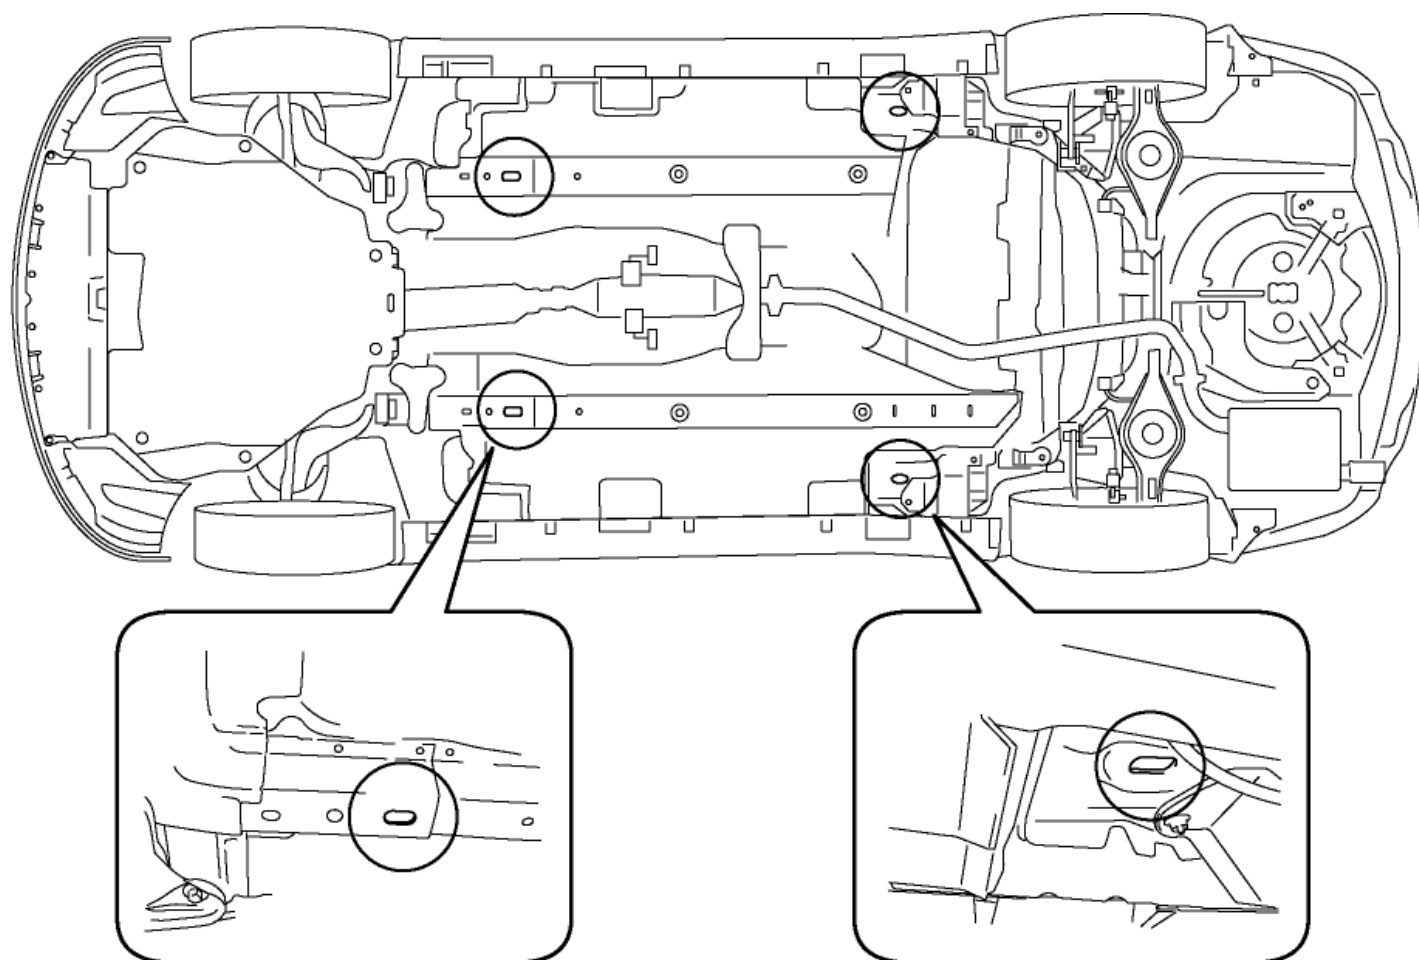

[< Previous](#) [Next >](#)

© 2011 Mazda North American Operations, U.S.A.

[Back to Top](#)