


2012 - Mazda6 - DriveLine/ Axle

JOINT SHAFT DISASSEMBLY [MZR 2.5]


1. Disassemble in the order indicated in the table.

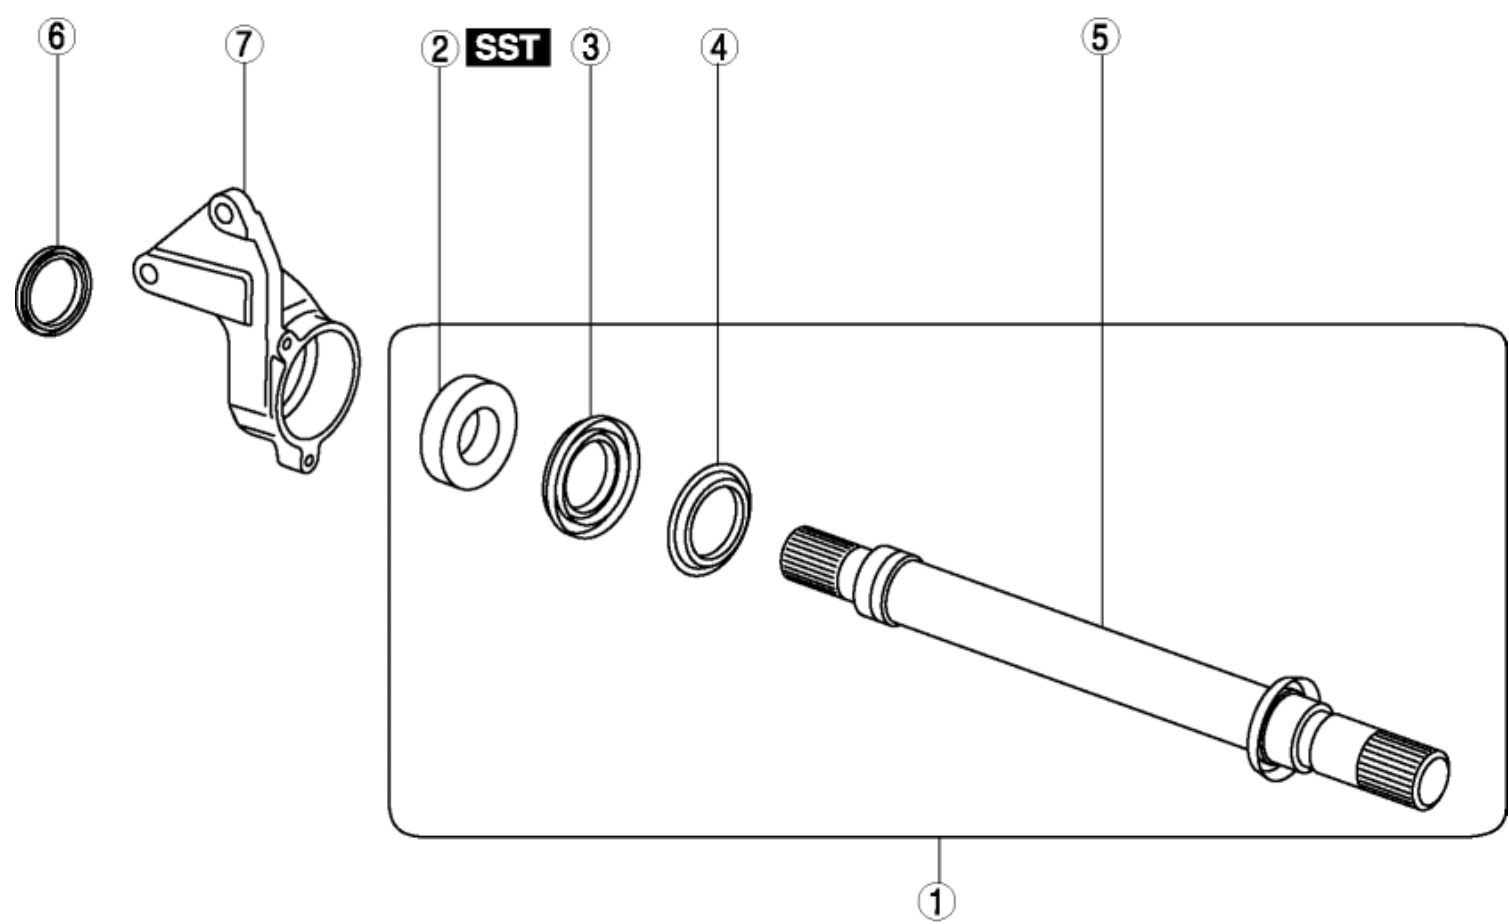


1	Joint shaft component (See Joint Shaft Component Disassembly Note.)
2	Bearing (See Bearing Disassembly Note.)
3	Dust seal (LH)
4	Dust cover
5	Joint shaft
6	Dust seal (RH)

Joint Shaft Component Disassembly Note

1. Secure the bracket to the vise at the position shown in the figure and remove the joint shaft component using the plastic hammer.

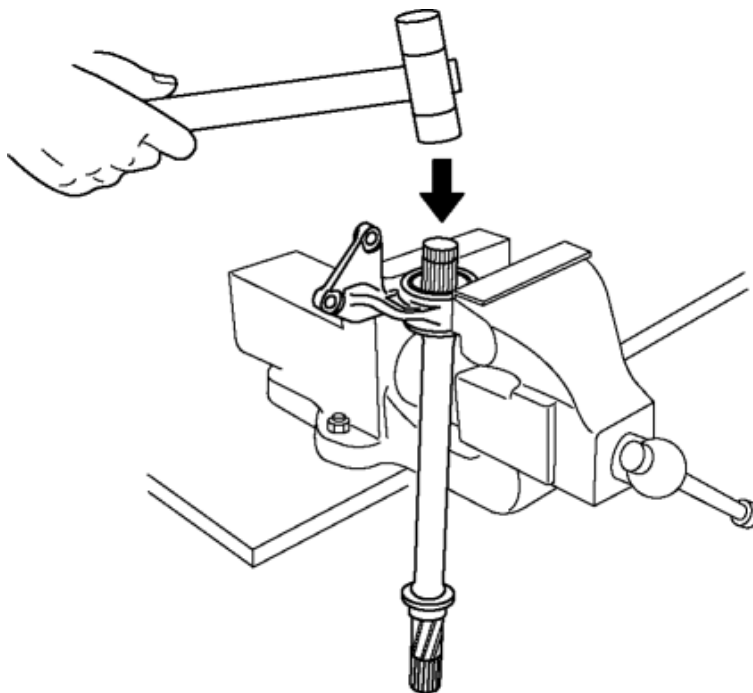**Bearing Disassembly Note**


1. Remove the bearing from the joint shaft using the **SST**.

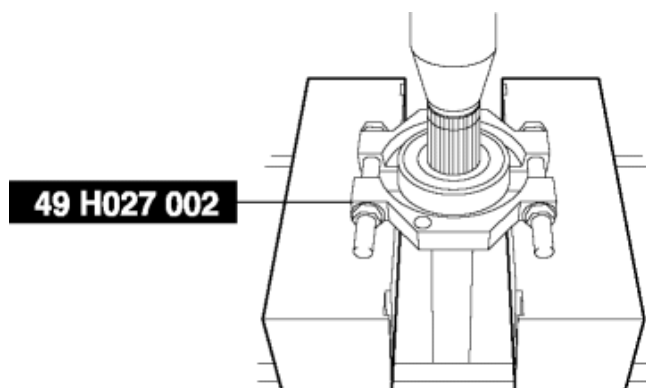

2012 - Mazda6 - DriveLine/ Axle

JOINT SHAFT DISASSEMBLY [MZR 2.5]


1. Disassemble in the order indicated in the table.

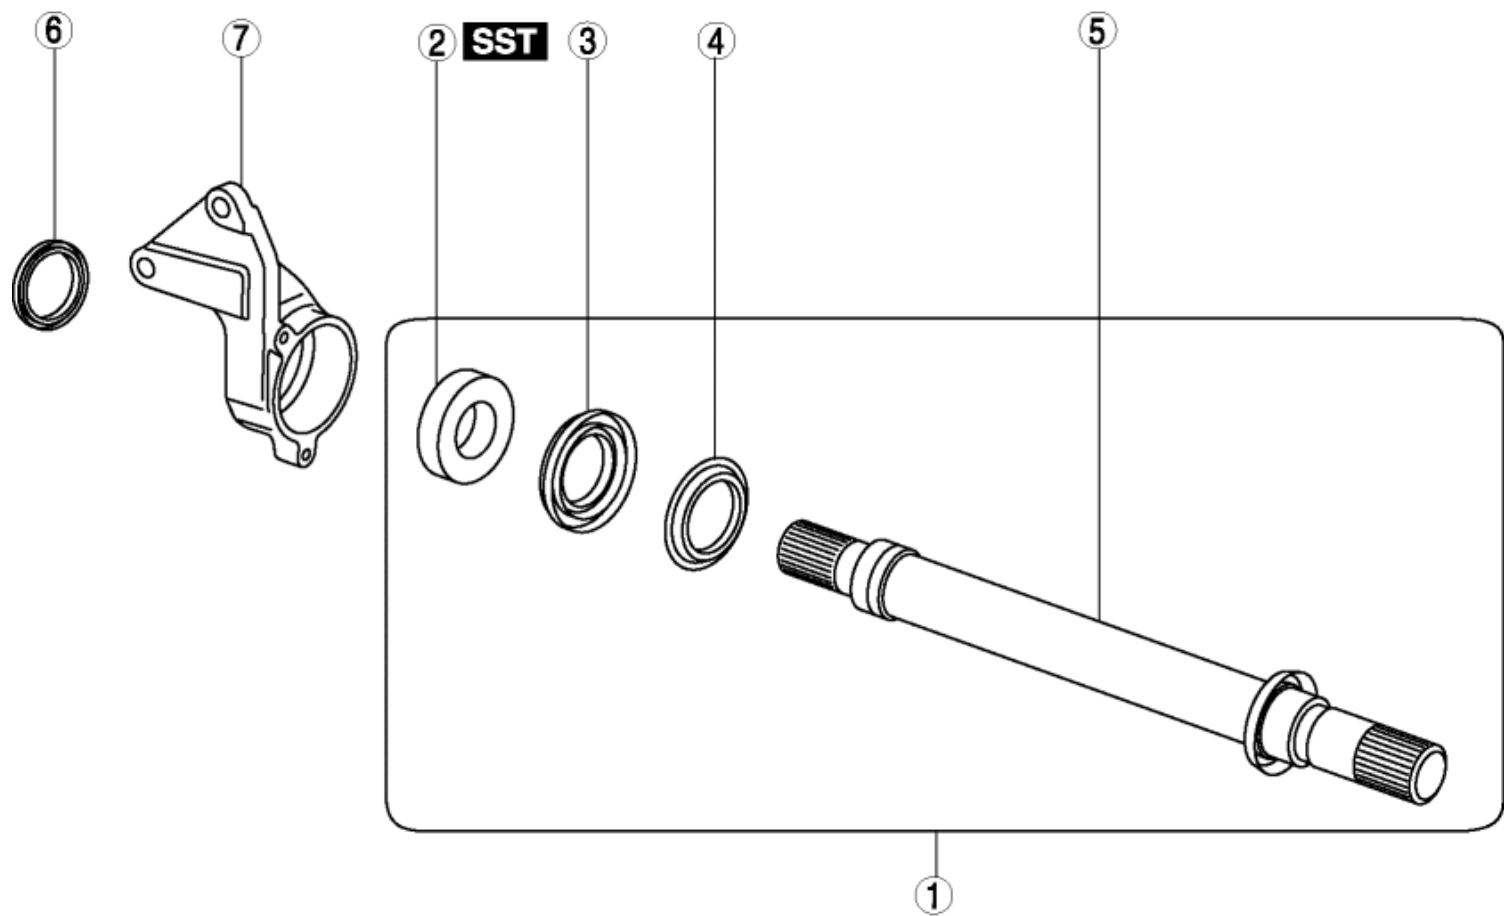

1	Joint shaft component (See Joint Shaft Component Disassembly Note.)
2	Bearing (See Bearing Disassembly Note.)
3	Dust seal (LH)
4	Dust cover
5	Joint shaft
6	Dust seal (RH)

Joint Shaft Component Disassembly Note

1. Secure the bracket to the vise at the position shown in the figure and remove the joint shaft component using the plastic hammer.

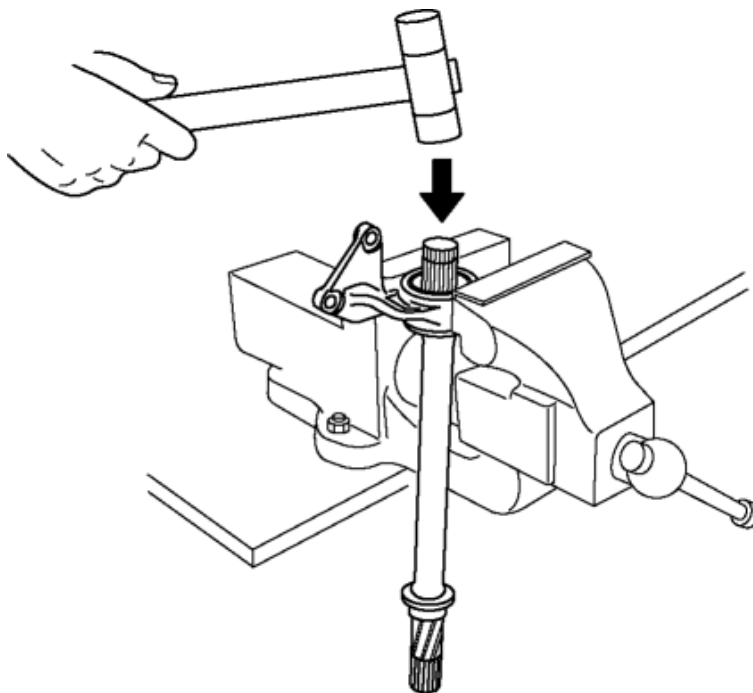**Bearing Disassembly Note**

1. Remove the bearing from the joint shaft using the **SST**.

