


2012 - Mazda6 - DriveLine/ Axle

JOINT SHAFT DISASSEMBLY [MZI 3.7 V6]

1. Disassemble in the order indicated in the table

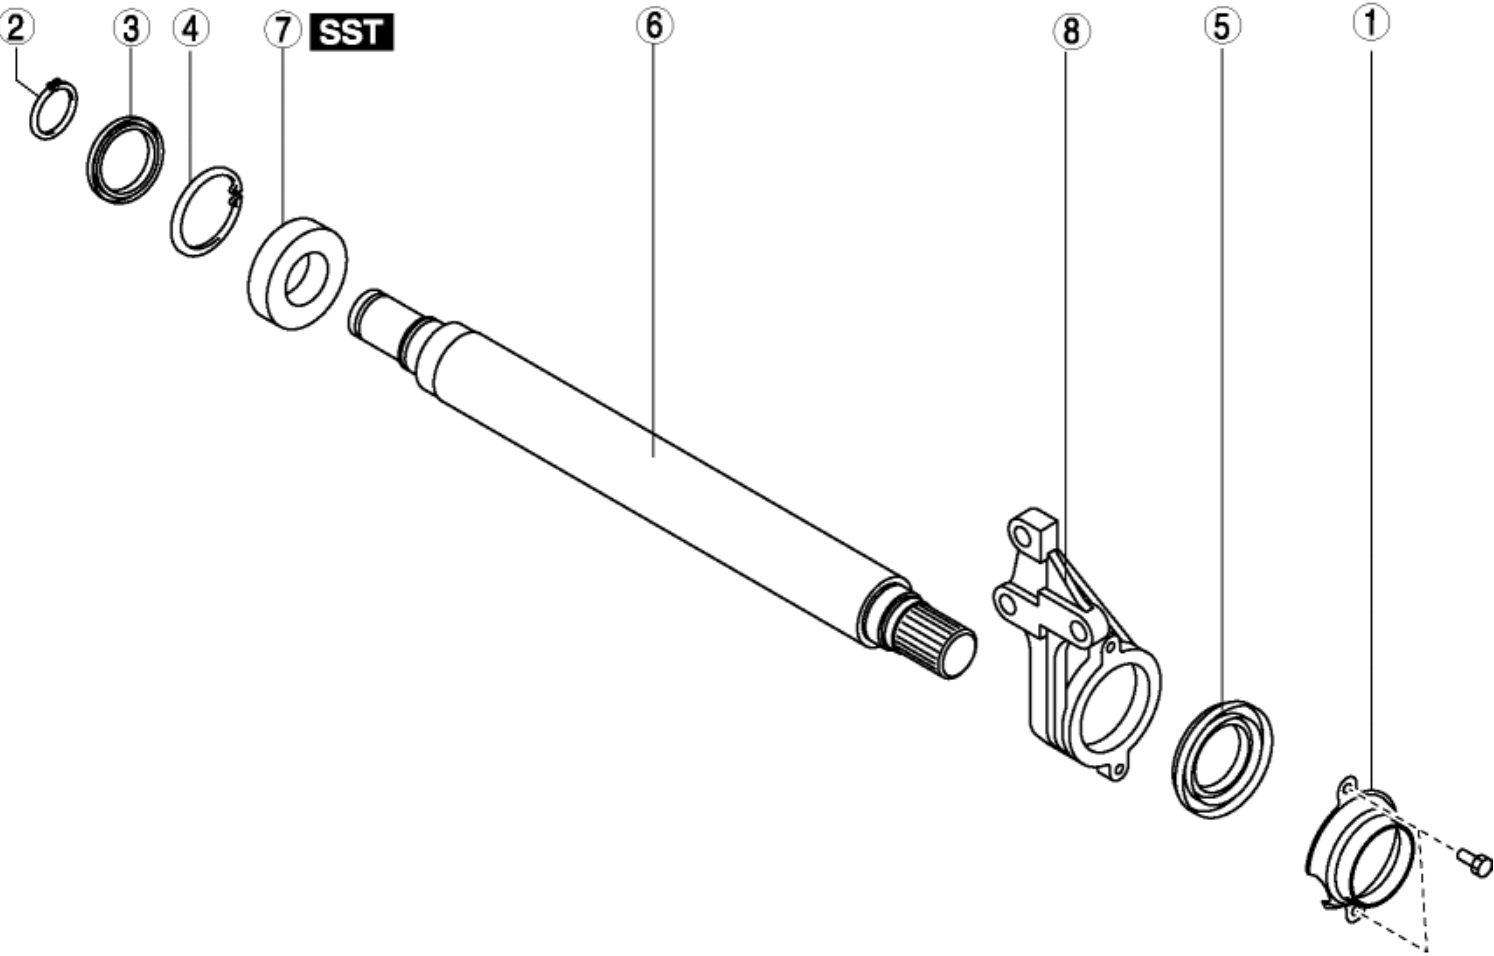


1	Dust cover
2	Clip A
3	Dust seal (RH)
4	Clip B
5	Dust seal (LH)
6	Joint shaft (See Joint Shaft Disassembly Note.)

7	Bearing
	(See Bearing Disassembly Note.)
8	Bracket


Joint Shaft Disassembly Note

1. Secure the bracket to the vise at the position shown in the figure and remove the joint shaft using the plastic hammer.

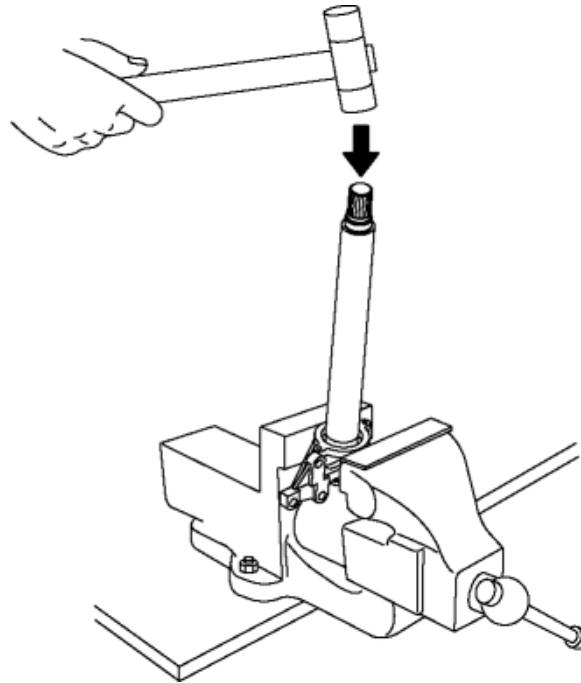

Bearing Disassembly Note


1. Remove the bearing from the joint shaft using the **SST** and a press.

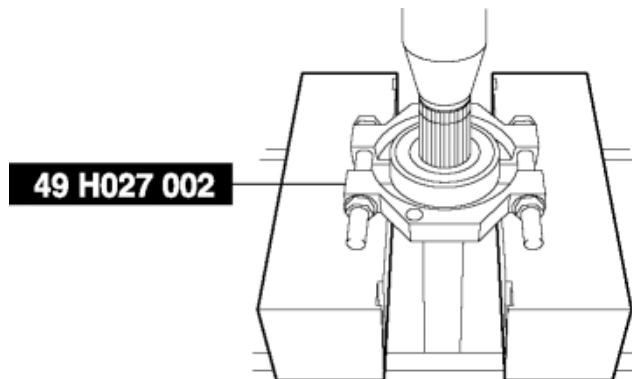

2012 - Mazda6 - DriveLine/ Axle

JOINT SHAFT DISASSEMBLY [MZI 3.7 V6]

1. Disassemble in the order indicated in the table

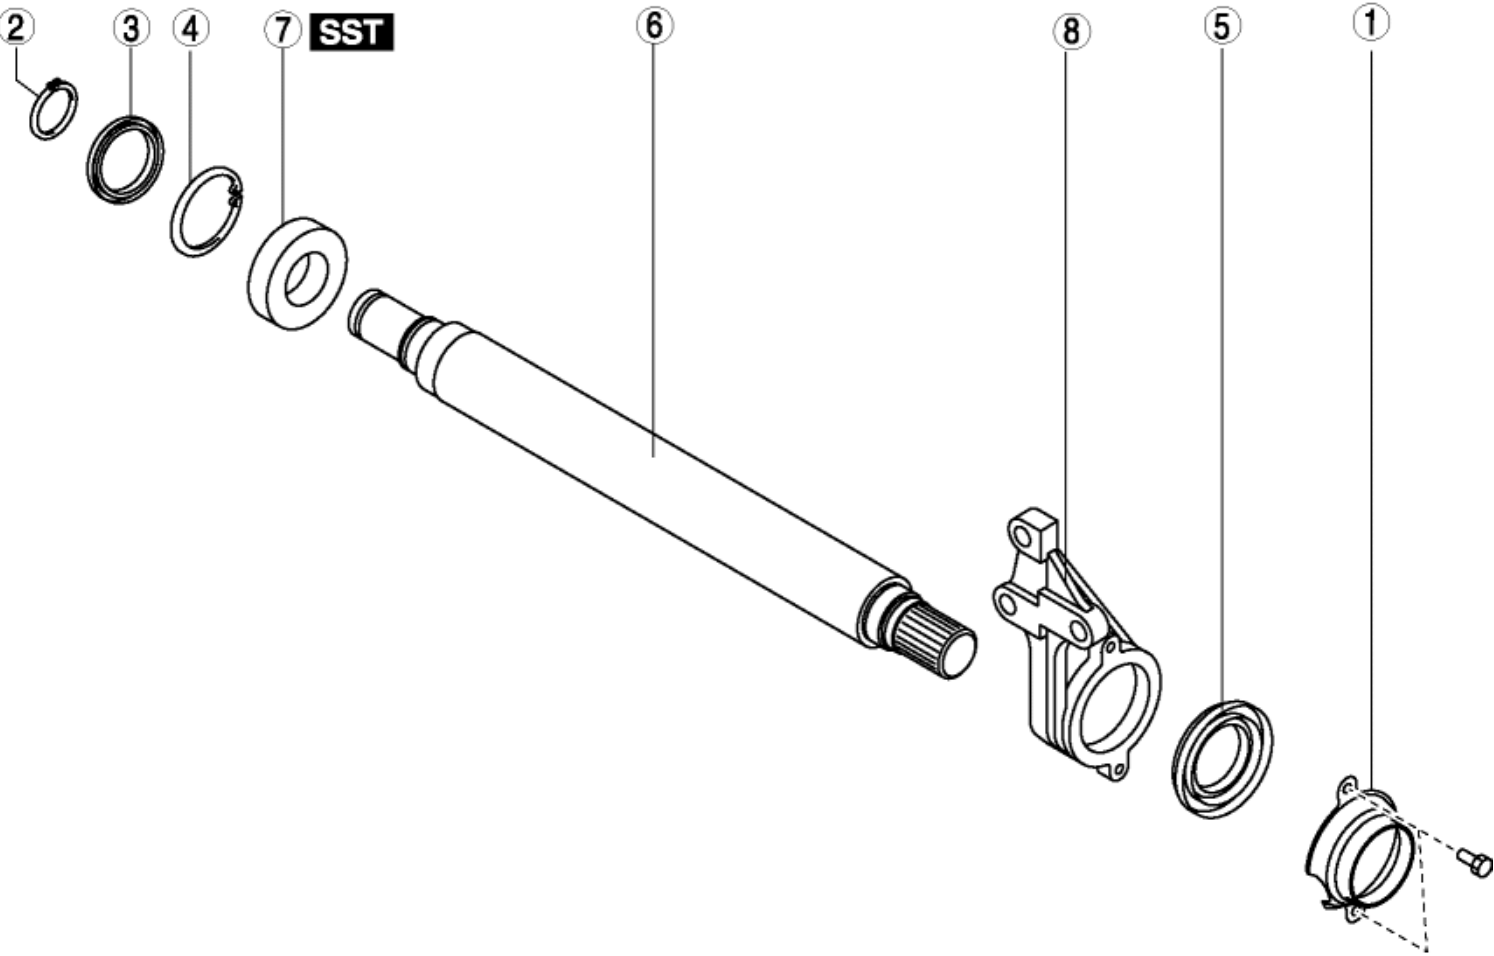


1	Dust cover
2	Clip A
3	Dust seal (RH)
4	Clip B
5	Dust seal (LH)
6	Joint shaft
	(See Joint Shaft Disassembly Note.)

7	Bearing (See Bearing Disassembly Note.)
8	Bracket

Joint Shaft Disassembly Note

1. Secure the bracket to the vise at the position shown in the figure and remove the joint shaft using the plastic hammer.

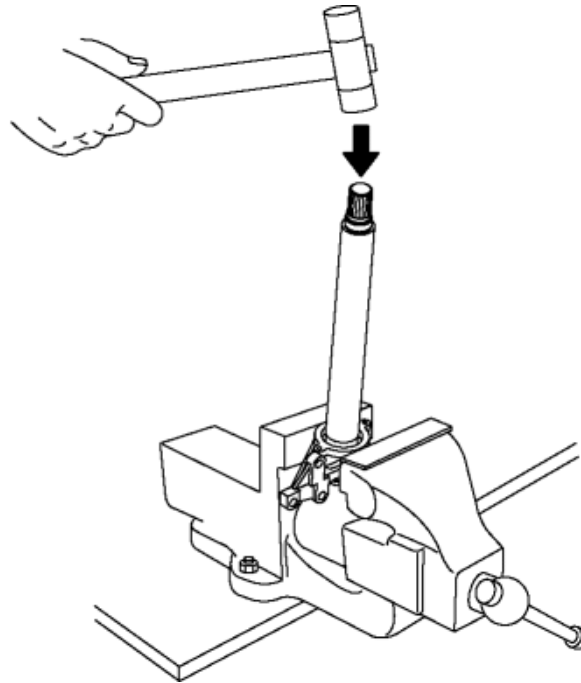

Bearing Disassembly Note

1. Remove the bearing from the joint shaft using the **SST** and a press.

