


2012 - Mazda6 - Brakes


PARKING BRAKE SYSTEM LOCATION INDEX [General [L.H.D.] specs.]

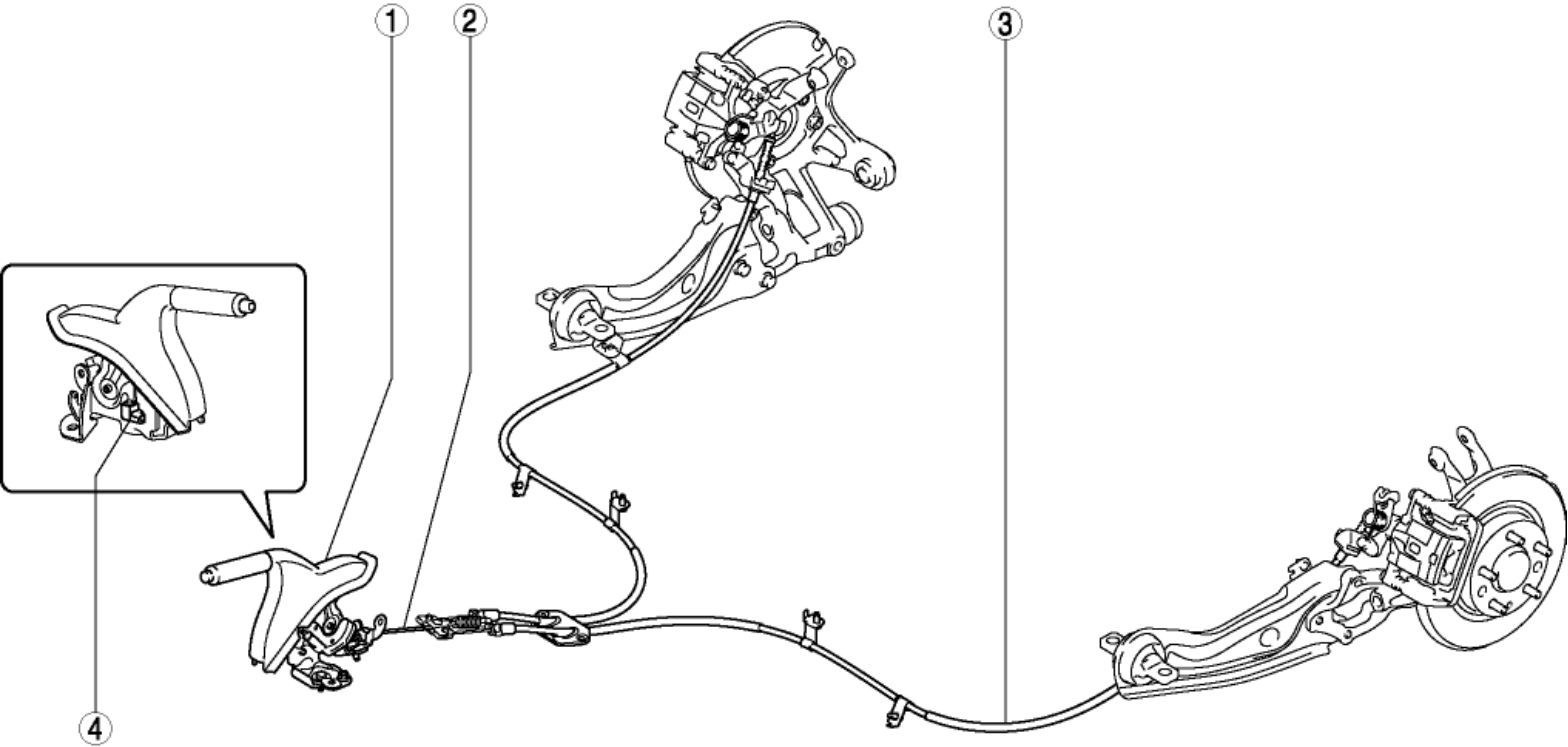

1	Parking brake lever (See PARKING BRAKE LEVER INSPECTION .) (See PARKING BRAKE LEVER ADJUSTMENT .) (See PARKING BRAKE LEVER REMOVAL/ INSTALLATION [General [L.H.D.] specs.] .)
2	Front parking brake cable (See FRONT PARKING BRAKE CABLE REMOVAL/ INSTALLATION [General [L.H.D.] specs.] .)
3	Rear parking brake cable (See REAR PARKING BRAKE CABLE REMOVAL/ INSTALLATION [General [L.H.D.] specs.] .)
4	Parking brake switch (See PARKING BRAKE SWITCH INSPECTION .)

2012 - Mazda6 - Brakes

PARKING BRAKE SYSTEM LOCATION INDEX [General [L.H.D.] specs.]

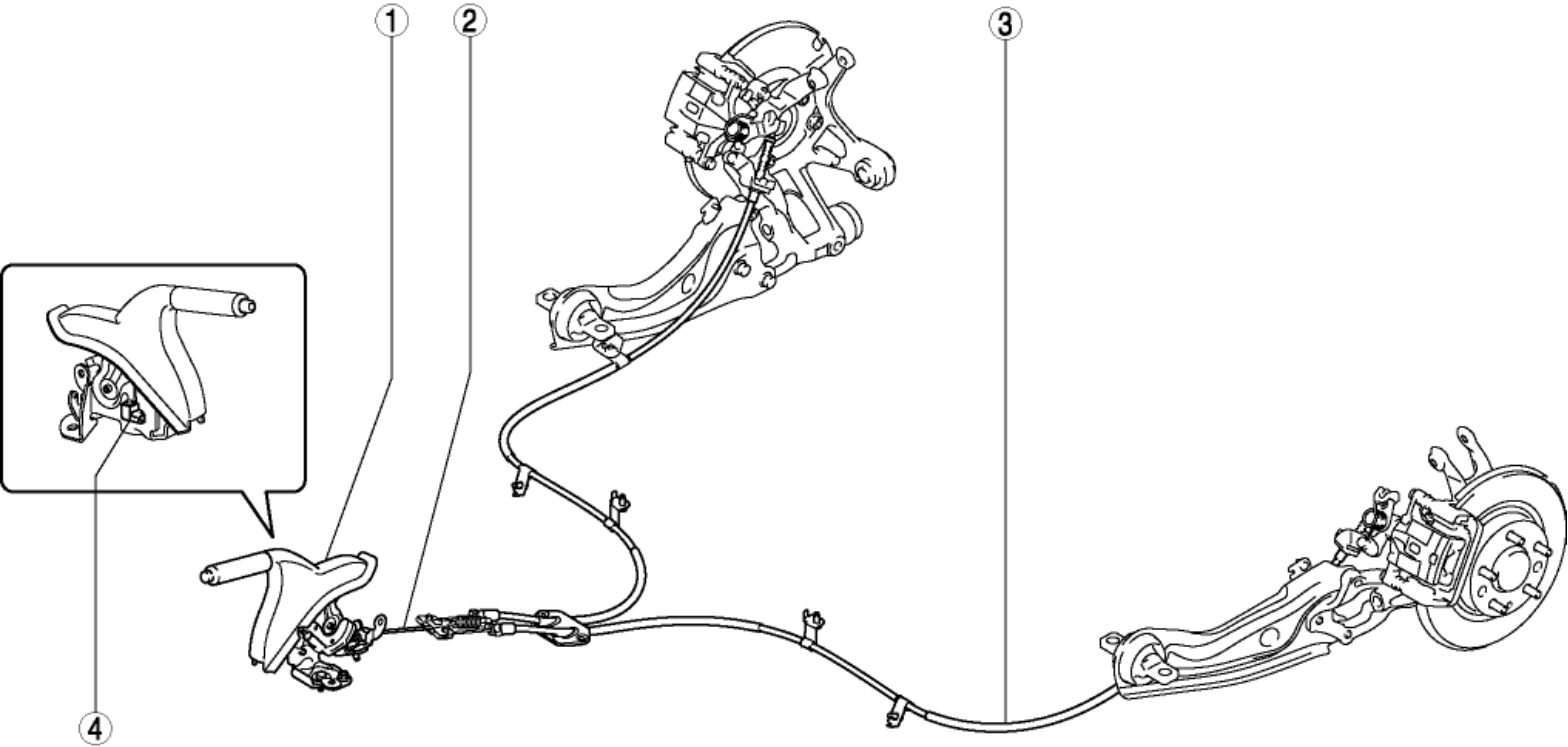

1	Parking brake lever (See PARKING BRAKE LEVER INSPECTION .) (See PARKING BRAKE LEVER ADJUSTMENT .) (See PARKING BRAKE LEVER REMOVAL/ INSTALLATION [General [L.H.D.] specs.] .)
2	Front parking brake cable (See FRONT PARKING BRAKE CABLE REMOVAL/ INSTALLATION [General [L.H.D.] specs.] .)
3	Rear parking brake cable (See REAR PARKING BRAKE CABLE REMOVAL/ INSTALLATION [General [L.H.D.] specs.] .)
4	Parking brake switch (See PARKING BRAKE SWITCH INSPECTION .)