


2012 - Mazda6 - Steering

POWER STEERING OIL PUMP REMOVAL/ INSTALLATION [MZR 2.5]

1. Set the front mudguard (RH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
2. Remove the splash shield (RH).
3. Remove the aerodynamic under cover No. 2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION.](#))
4. Remove the drive belt. (See [DRIVE BELT REMOVAL/ INSTALLATION \[MZR 2.5\].](#))
5. Remove in the order indicated in the table.
6. Install in the reverse order of removal.

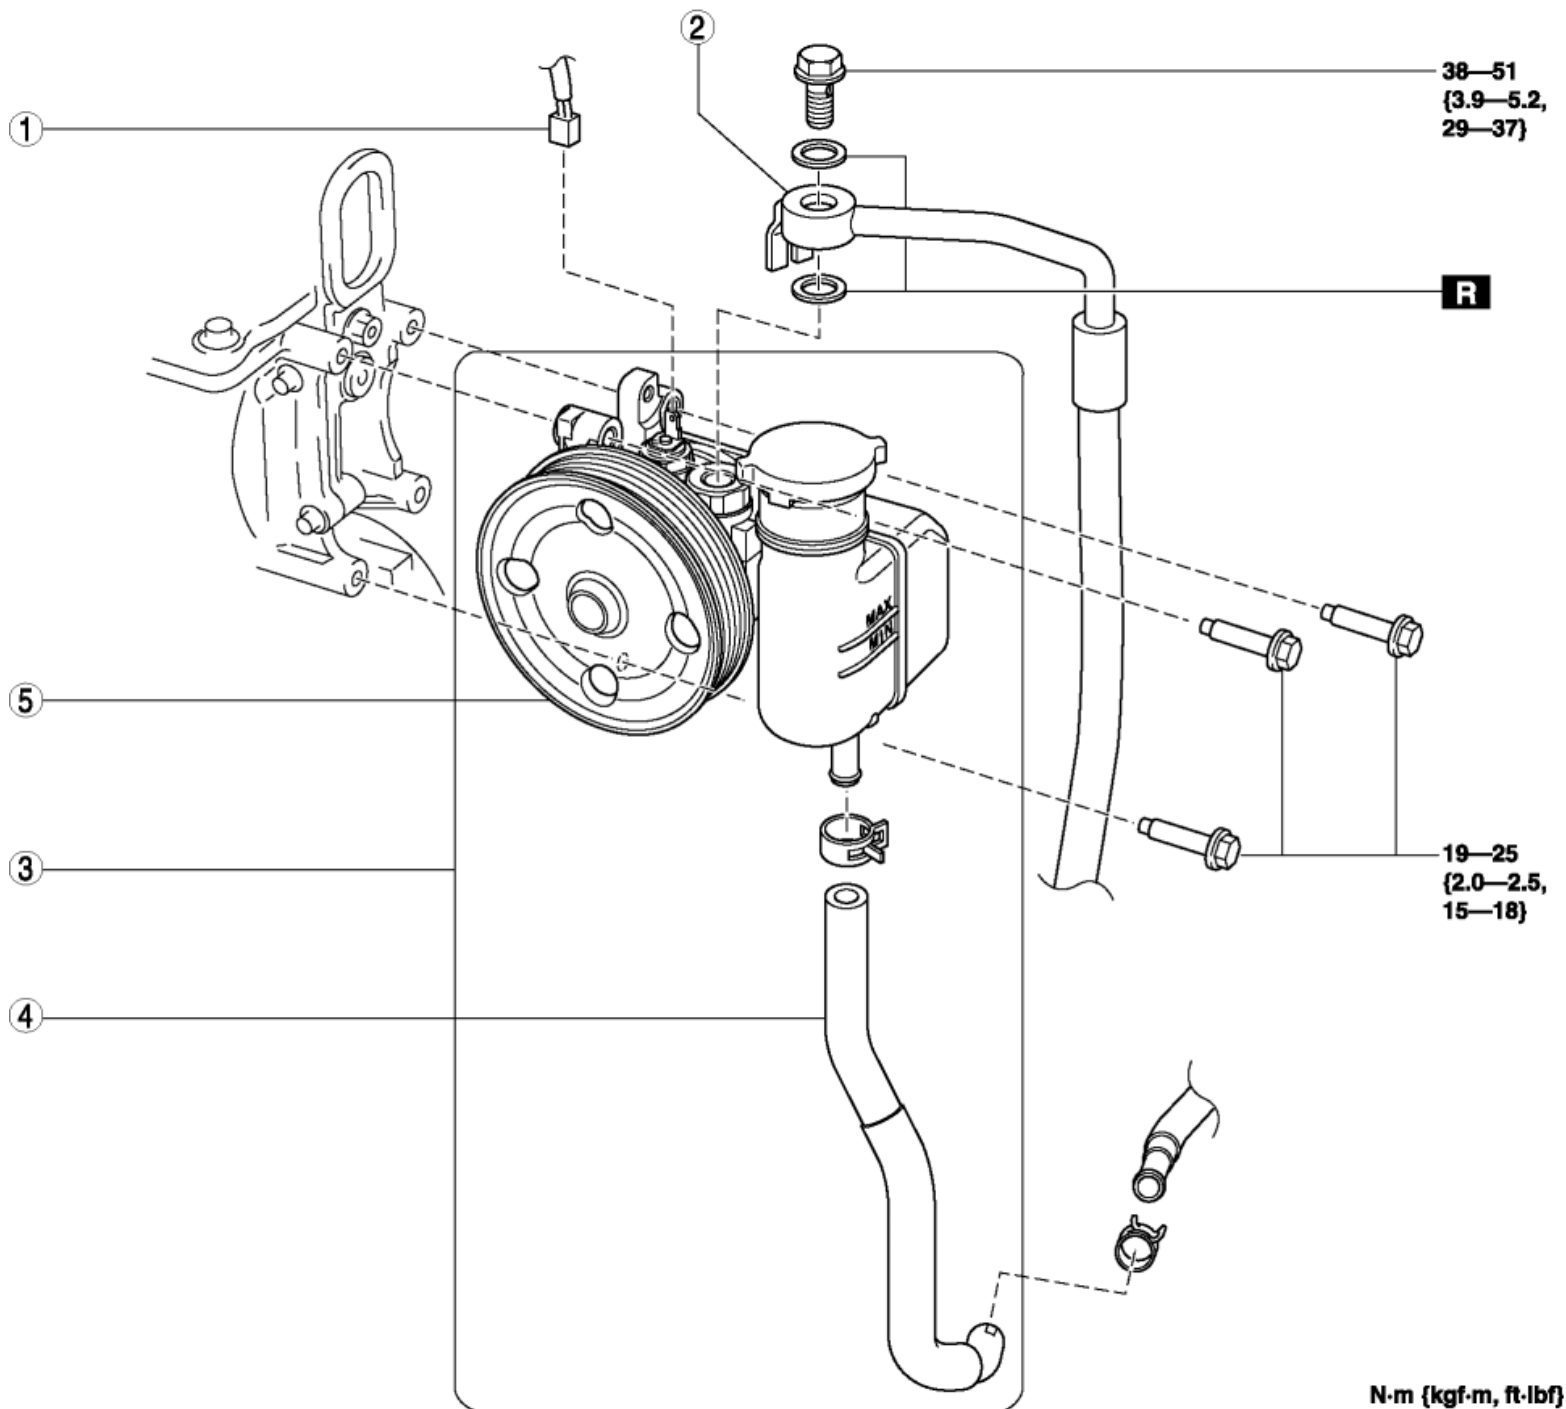


1	Pressure switch connector
2	Pressure hose
3	Power steering oil pump component
4	Return hose
5	Power steering oil pump

2012 - Mazda6 - Steering

POWER STEERING OIL PUMP REMOVAL/ INSTALLATION [MZR 2.5]

1. Set the front mudguard (RH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
2. Remove the splash shield (RH).
3. Remove the aerodynamic under cover No. 2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION.](#))
4. Remove the drive belt. (See [DRIVE BELT REMOVAL/ INSTALLATION \[MZR 2.5\].](#))
5. Remove in the order indicated in the table.
6. Install in the reverse order of removal.

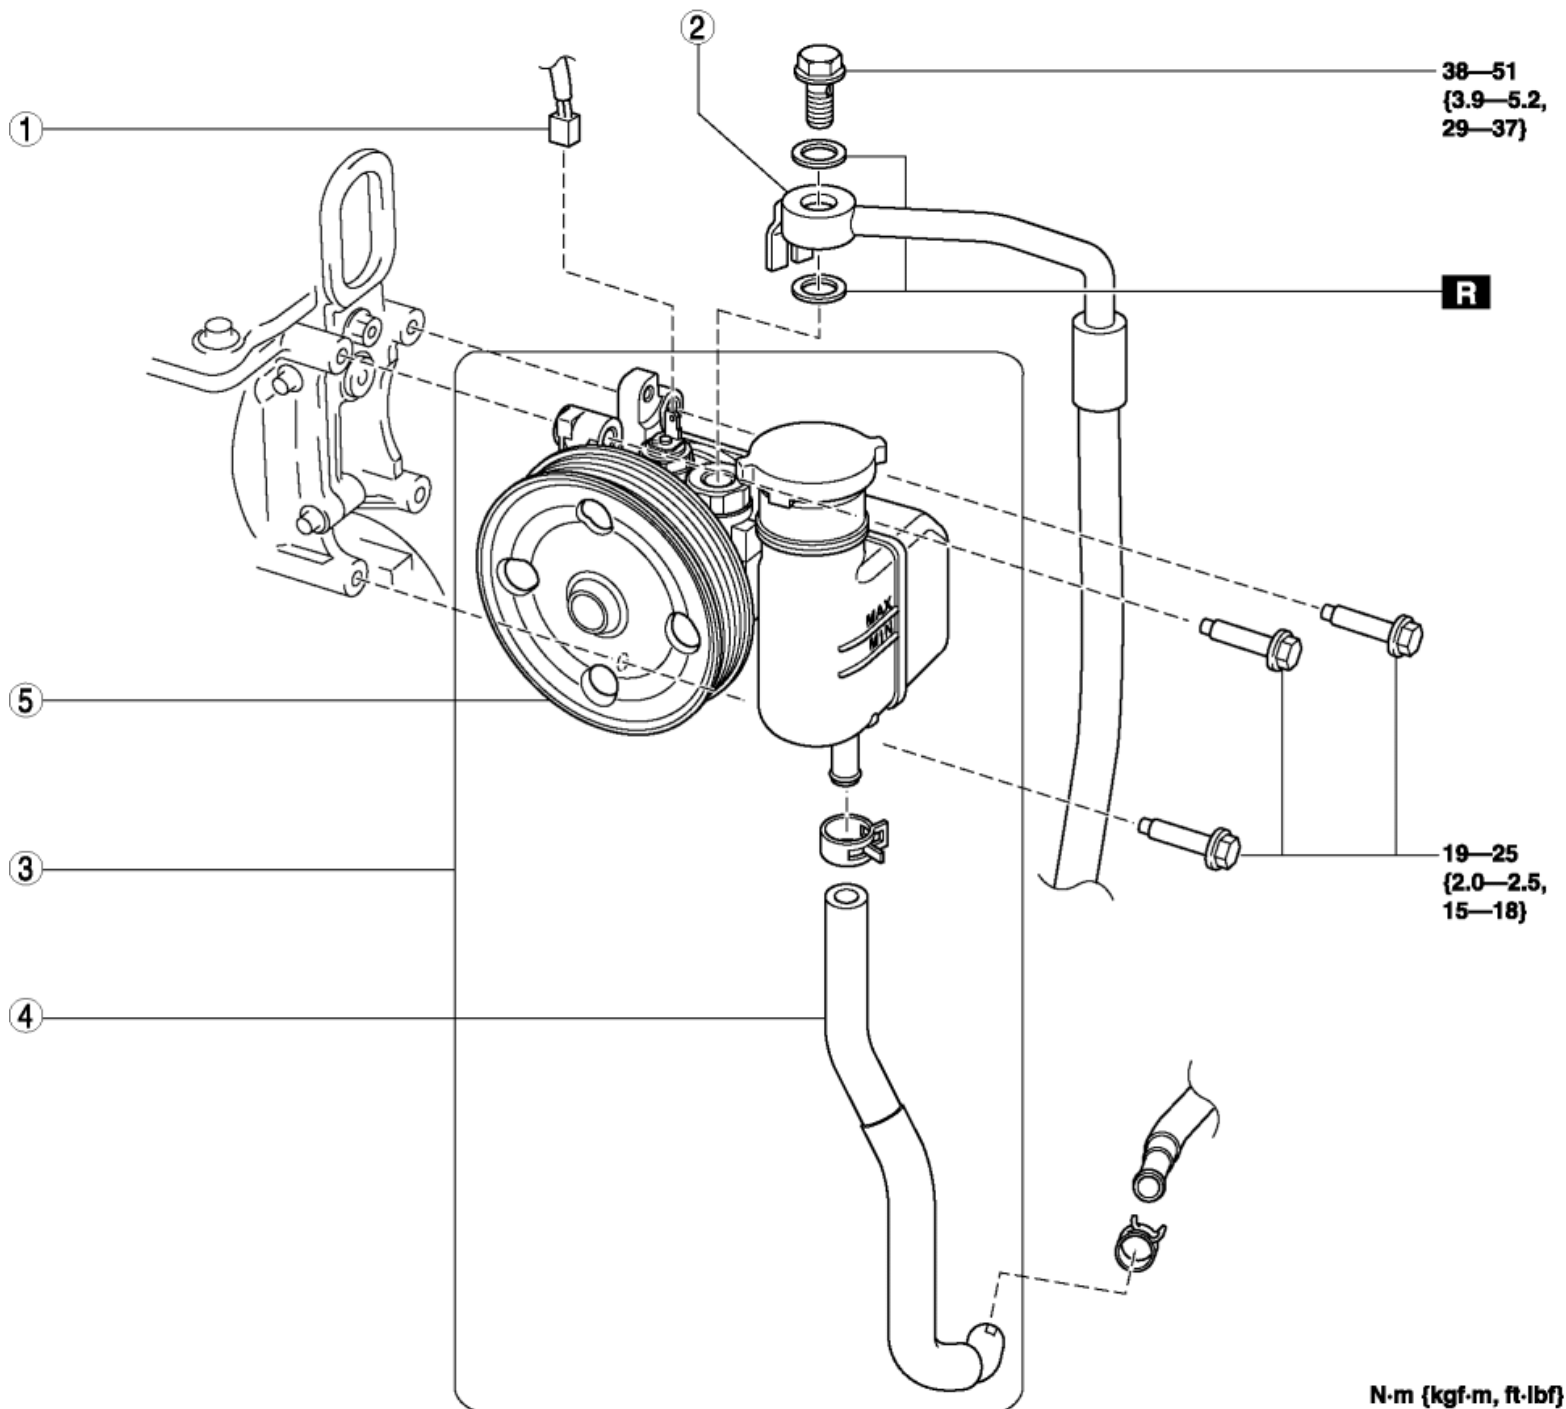

1	Pressure switch connector
2	Pressure hose
3	Power steering oil pump component
4	Return hose
5	Power steering oil pump

