



2012 - Mazda6 - Steering

POWER STEERING OIL PUMP REMOVAL/ INSTALLATION [MZI 3.7 V6]

1. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION](#).)
2. Remove the cowl grill. (See [COWL GRILLE REMOVAL/ INSTALLATION](#).)
3. Remove the windshield wiper motor. (See [WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION](#).)
4. Remove the power steering fluid reservoir from the tank bracket and then remove the tank bracket from the cowl panel as shown in the figure.

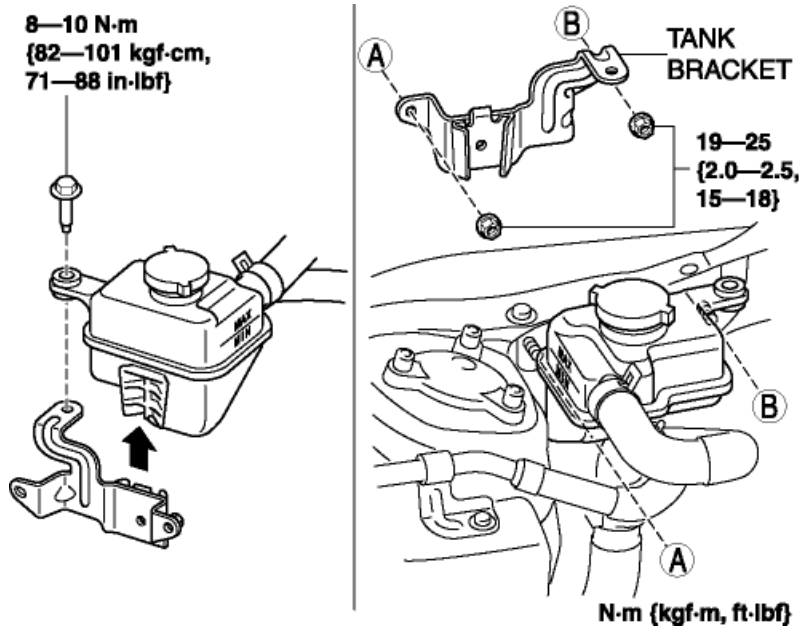

5. Remove the cowl panel. (See [COWL PANEL REMOVAL/ INSTALLATION](#).)
6. Set the front mudguard (RH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION](#).)
7. Remove the splash shield (RH).
8. Set the power steering oil pump drive belt out of the way. (See [DRIVE BELT REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
9. Remove in the order indicated in the table.
10. Install in the reverse order of removal.

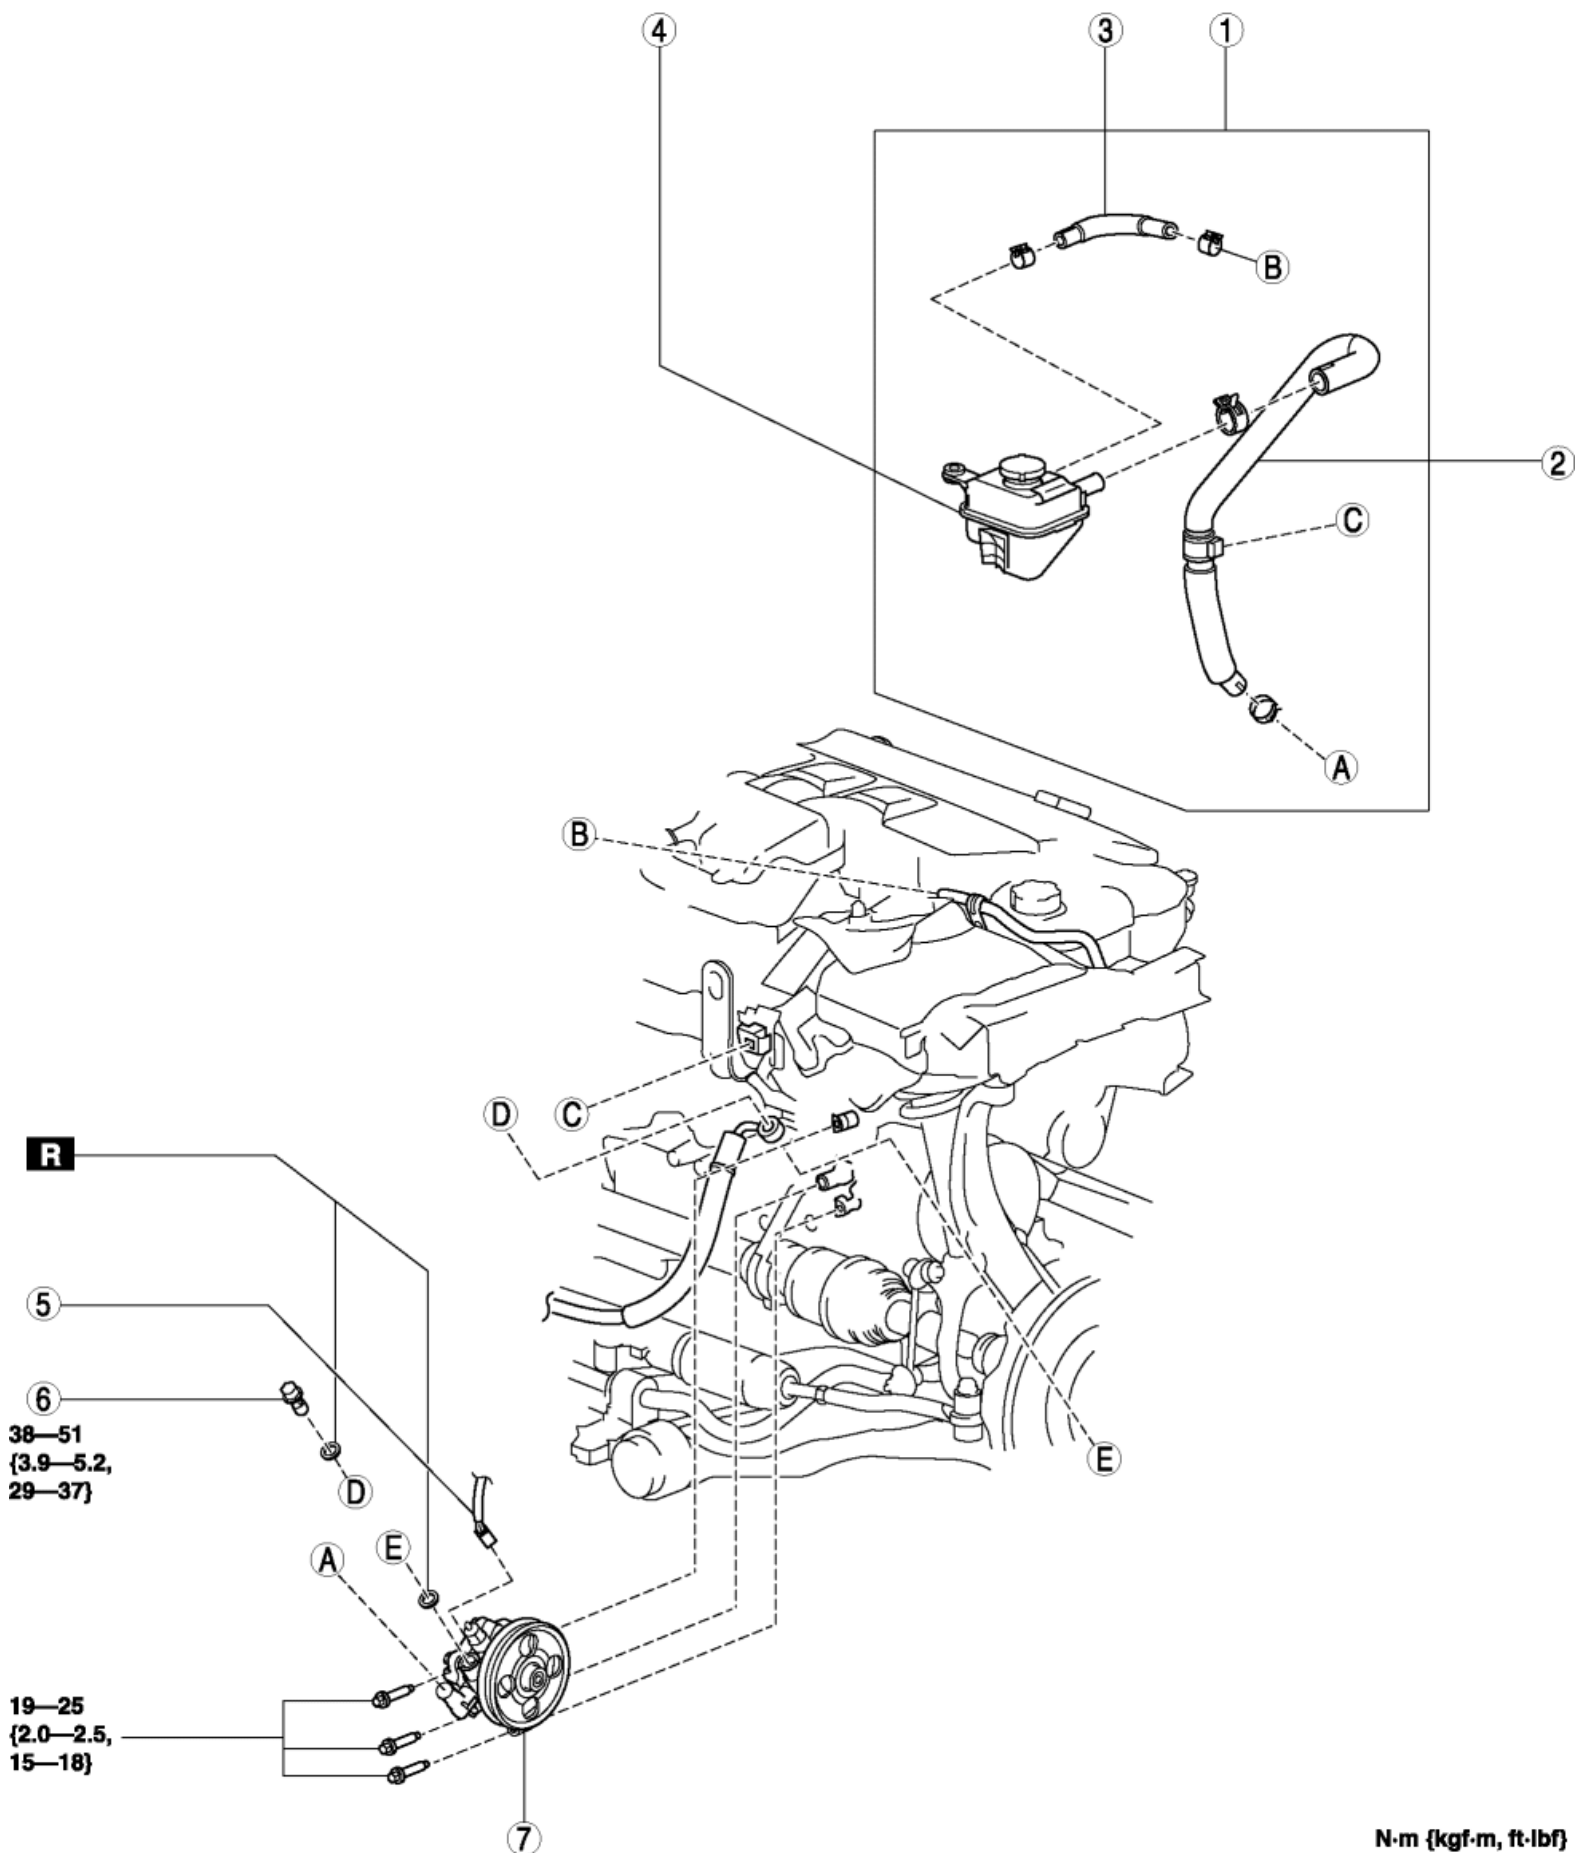


1	Power steering fluid reservoir component
2	Suction hose
3	Return hose No.4
4	Power steering fluid reservoir
5	Pressure switch connector
6	Connecting bolt (power steering oil pump side)
7	Power steering oil pump


2012 - Mazda6 - Steering

POWER STEERING OIL PUMP REMOVAL/ INSTALLATION [MZI 3.7 V6]

1. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION](#).)
2. Remove the cowl grill. (See [COWL GRILLE REMOVAL/ INSTALLATION](#).)
3. Remove the windshield wiper motor. (See [WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION](#).)
4. Remove the power steering fluid reservoir from the tank bracket and then remove the tank bracket from the cowl panel as shown in the figure.

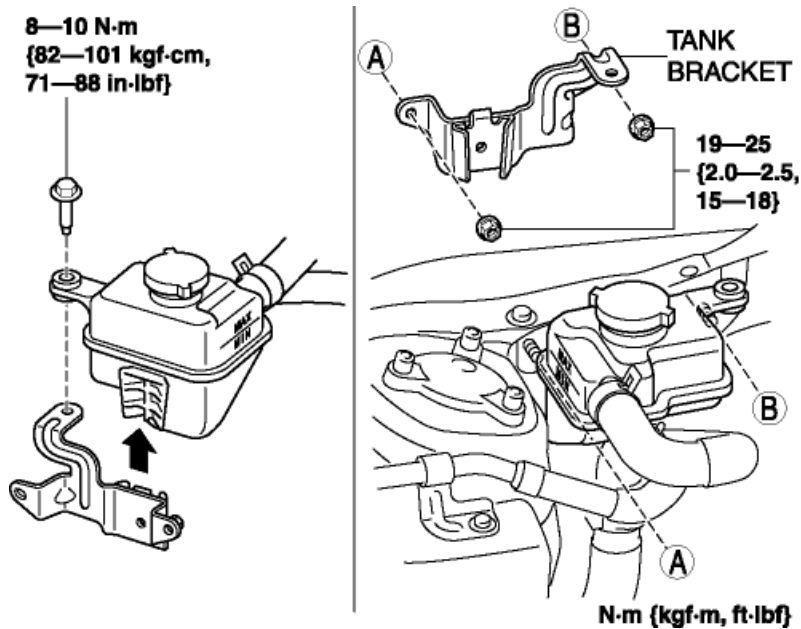

5. Remove the cowl panel. (See [COWL PANEL REMOVAL/ INSTALLATION](#).)
6. Set the front mudguard (RH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION](#).)
7. Remove the splash shield (RH).
8. Set the power steering oil pump drive belt out of the way. (See [DRIVE BELT REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
9. Remove in the order indicated in the table.
10. Install in the reverse order of removal.

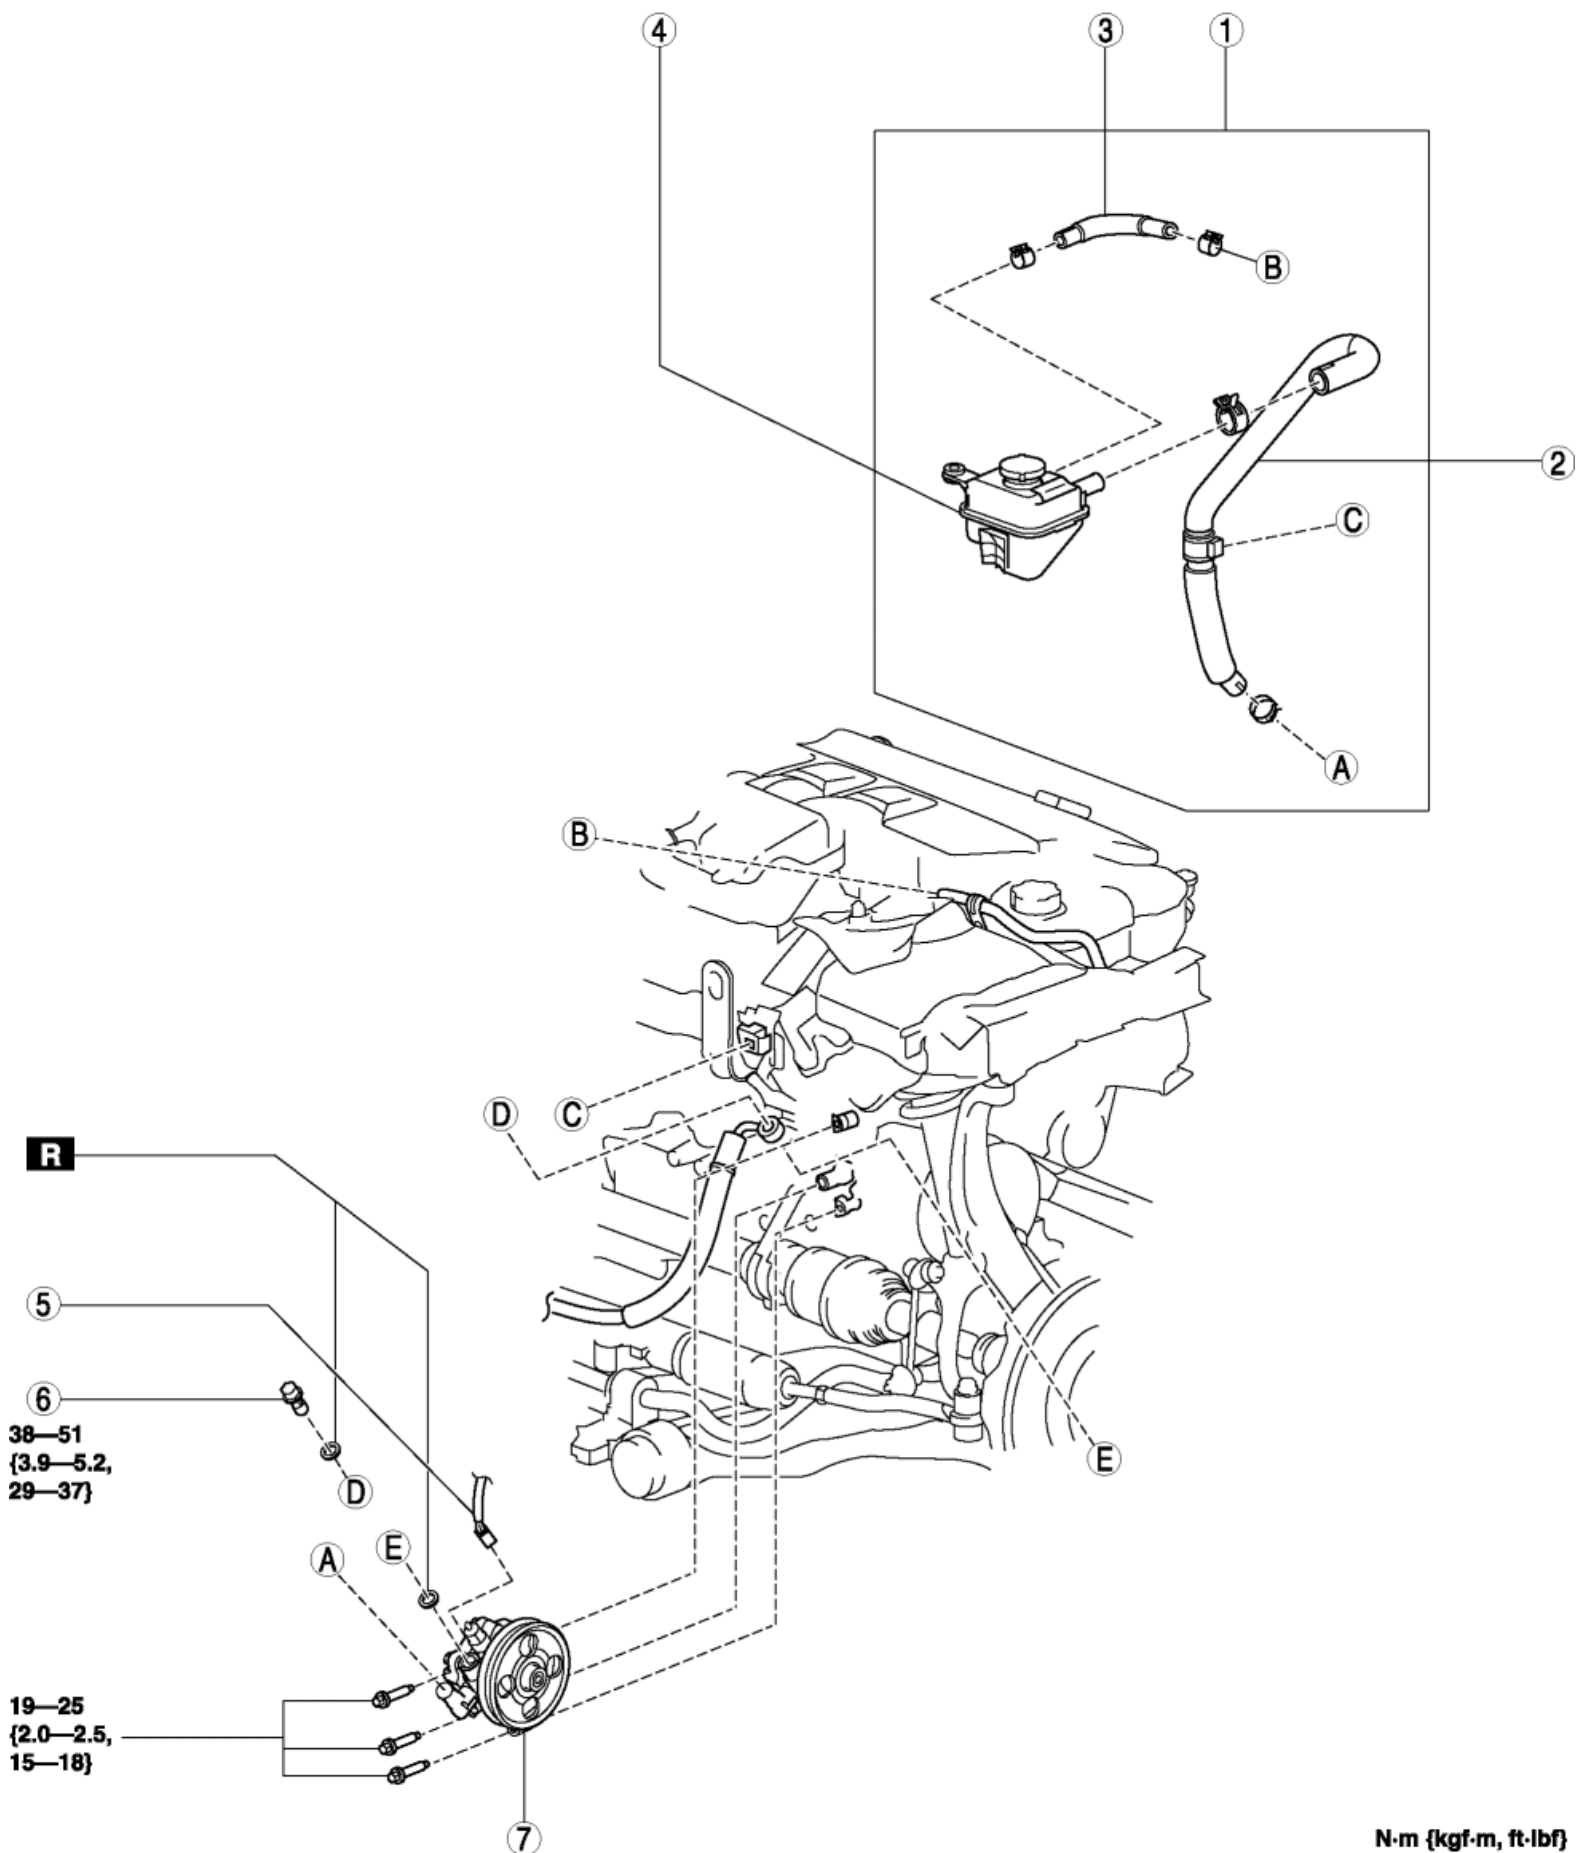

1	Power steering fluid reservoir component
2	Suction hose
3	Return hose No.4
4	Power steering fluid reservoir
5	Pressure switch connector
6	Connecting bolt (power steering oil pump side)
7	Power steering oil pump