


2012 - Mazda6 - Steering

POWER STEERING FLUID LINE COMPONENT REMOVAL/ INSTALLATION [MZR 2.5]


NOTE:

- The following procedure is for replacement of the parts shown in the figure.

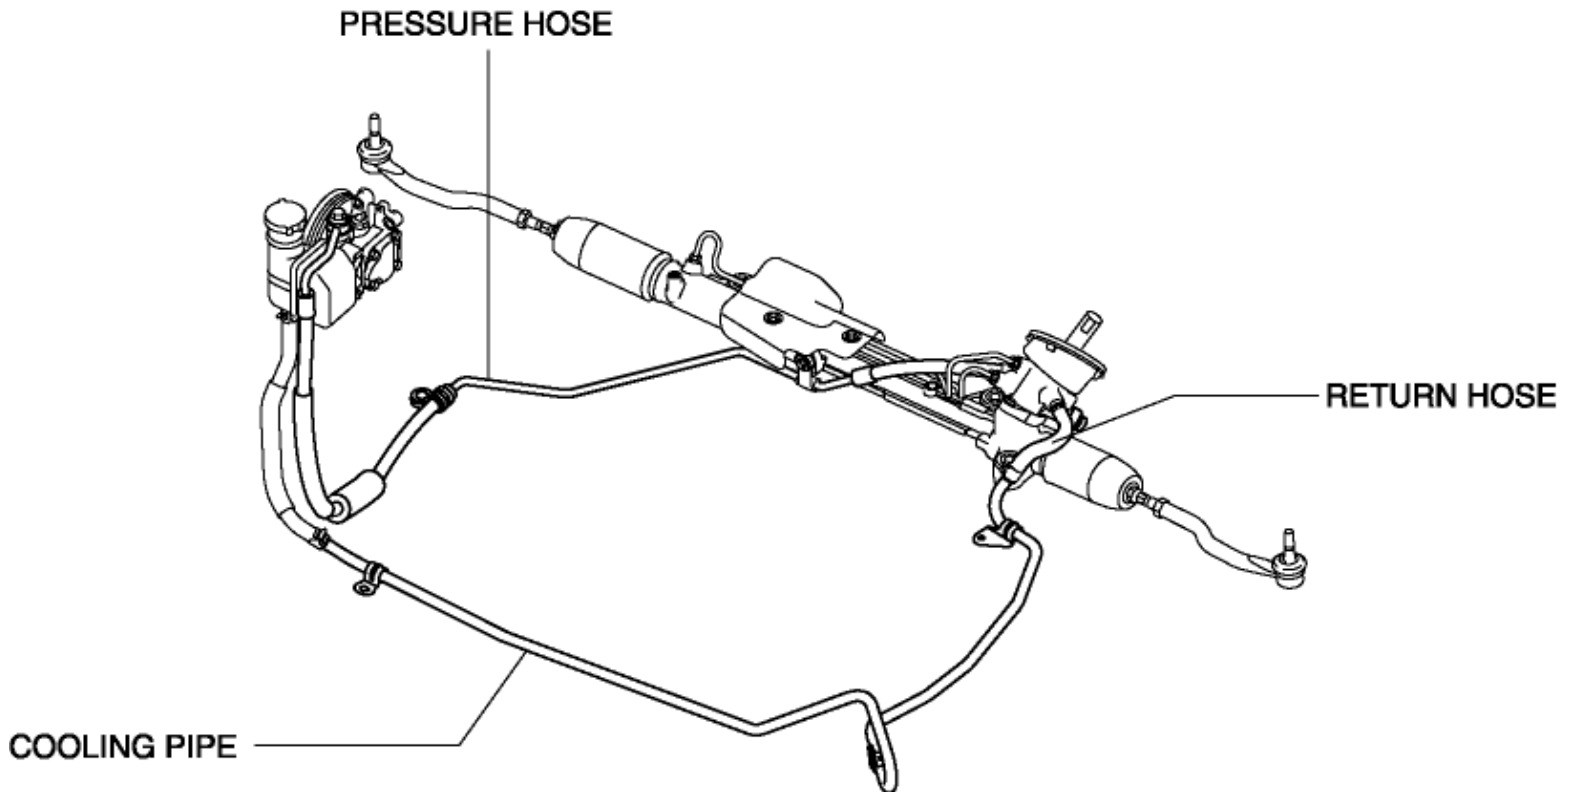


Pressure Hose Removal/ Installation

1. Remove the connecting bolt from the power steering oil pump.

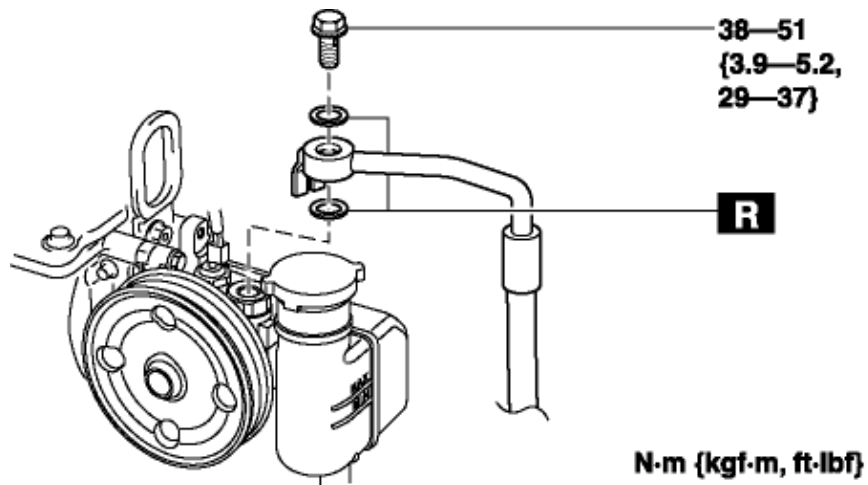

2. Remove the aerodynamic under cover NO.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION.](#))
3. Set the front mudguard (RH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
4. Remove the splash shield (RH).
5. Remove in the order indicated in the table.

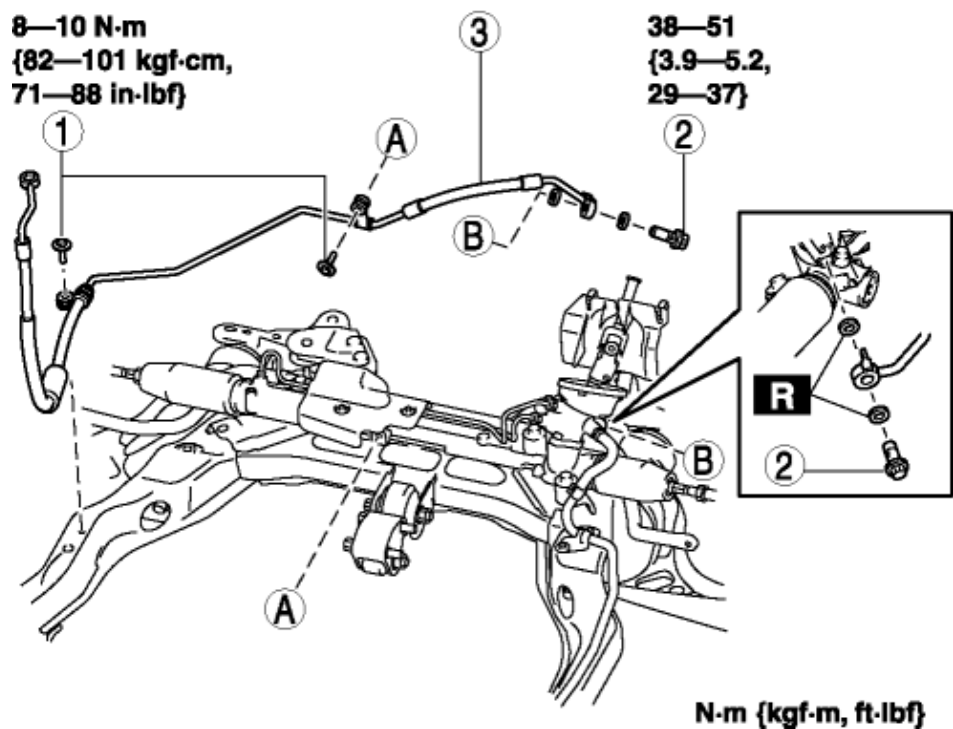


1	Bolts
2	Connecting bolt (power steering gear side)
3	Pressure hose

6. Install in the reverse order of removal.

Return Hose Removal/ Installation

1. Remove the aerodynamic under cover NO.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION.](#))
2. Set the front mudguard (LH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
3. Remove the splash shield (LH).
4. Remove in the order indicated in the table.

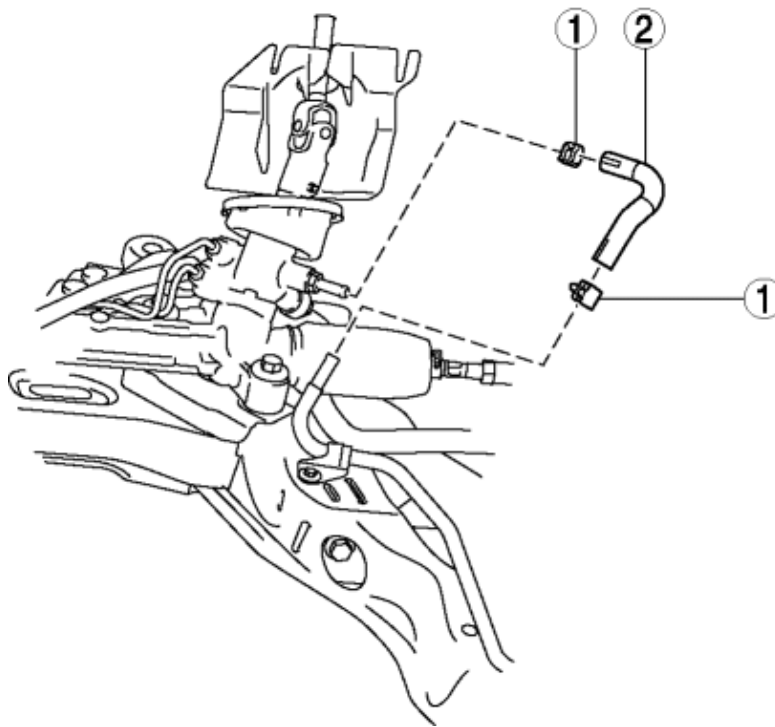


1	Hose clips
2	Return hose

5. Install in the reverse order of removal.

Cooling Pipe Removal/ Installation

1. Remove the aerodynamic under cover NO.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION.](#))
2. Set the front mudguard (LH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
3. Remove the splash shield (LH).
4. Remove in the order indicated in the table.

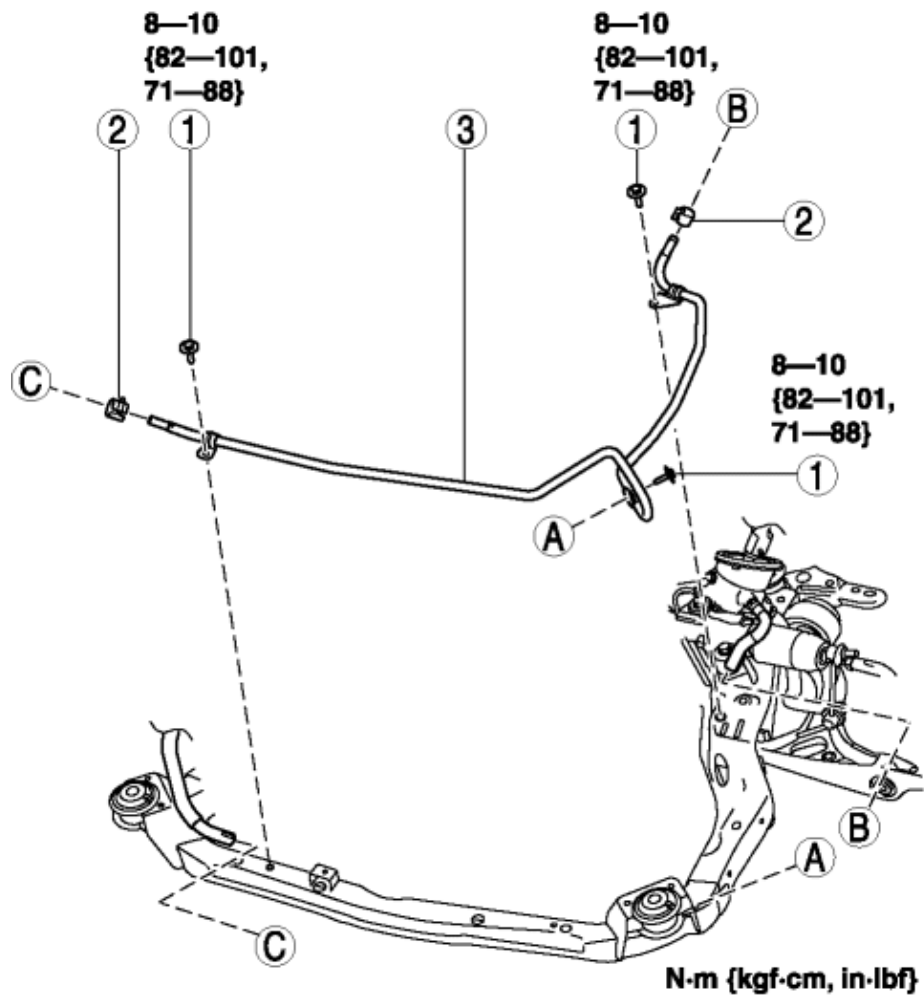

1Bolts

2Hose clips

3Cooling pipe

5. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)


© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Steering

POWER STEERING FLUID LINE COMPONENT REMOVAL/ INSTALLATION [MZR 2.5]


NOTE:

- The following procedure is for replacement of the parts shown in the figure.

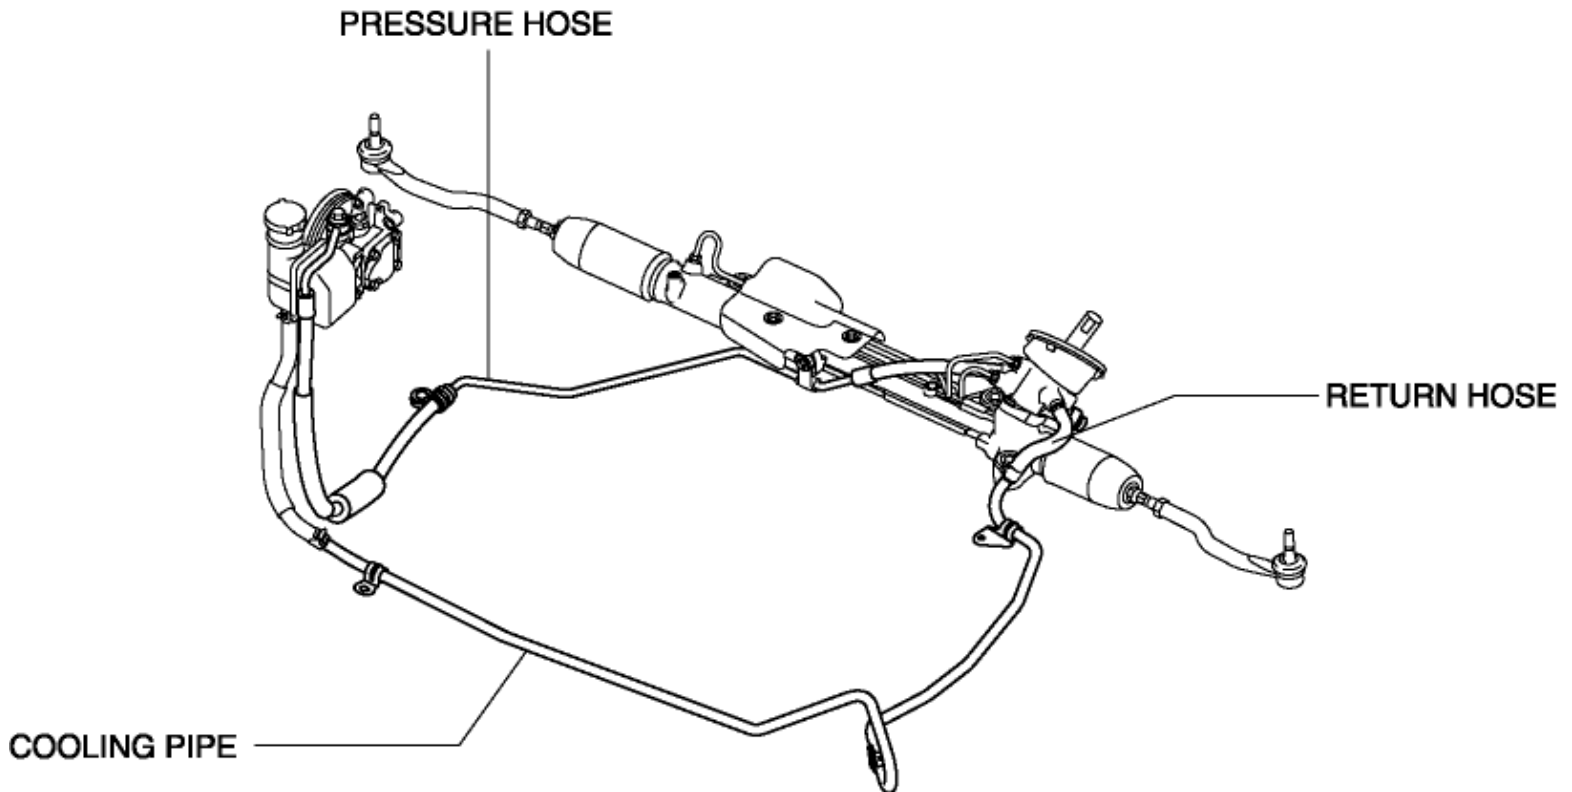


Pressure Hose Removal/ Installation

1. Remove the connecting bolt from the power steering oil pump.

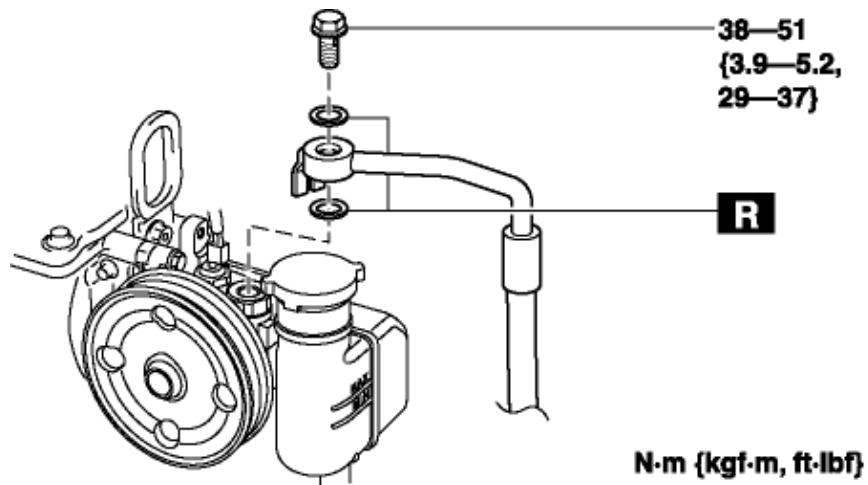

2. Remove the aerodynamic under cover NO.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION.](#))
3. Set the front mudguard (RH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
4. Remove the splash shield (RH).
5. Remove in the order indicated in the table.

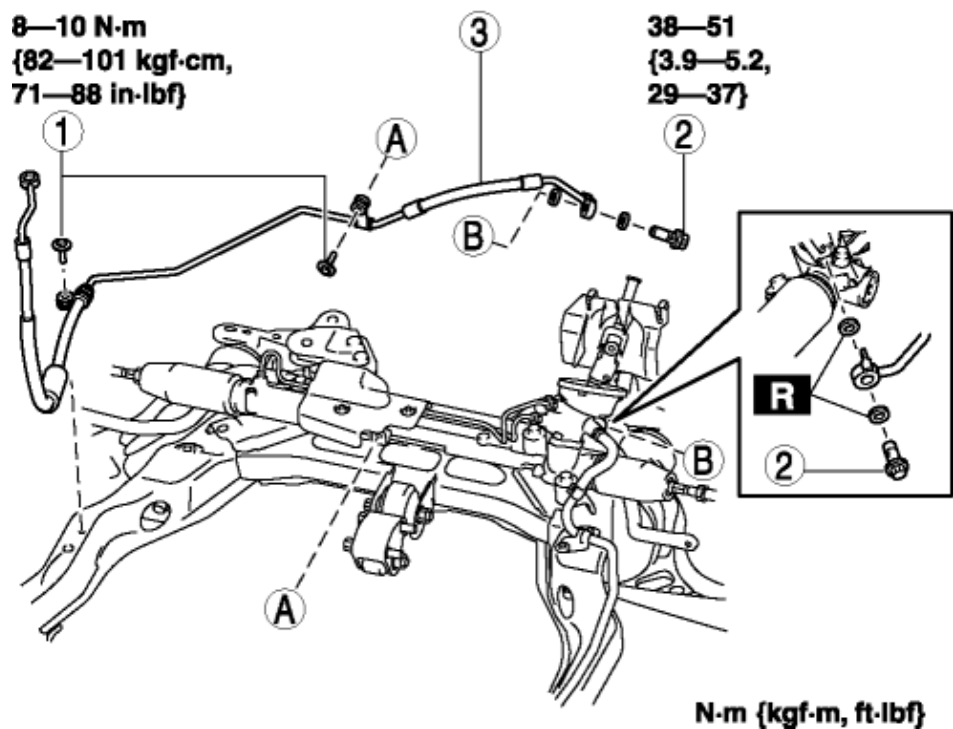


1	Bolts
2	Connecting bolt (power steering gear side)
3	Pressure hose

6. Install in the reverse order of removal.

Return Hose Removal/ Installation

1. Remove the aerodynamic under cover NO.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION.](#))
2. Set the front mudguard (LH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
3. Remove the splash shield (LH).
4. Remove in the order indicated in the table.

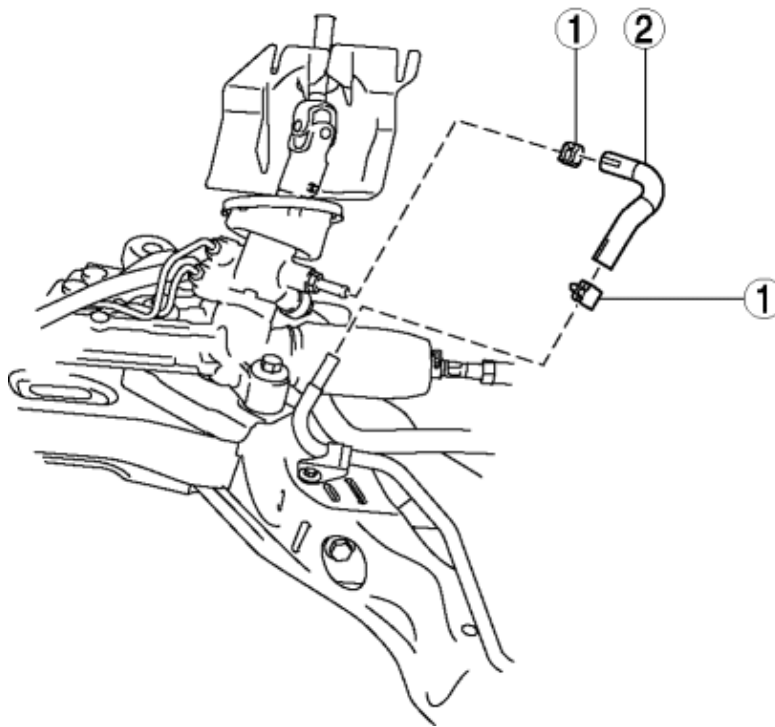


1	Hose clips
2	Return hose

5. Install in the reverse order of removal.

Cooling Pipe Removal/ Installation

1. Remove the aerodynamic under cover NO.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION.](#))
2. Set the front mudguard (LH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
3. Remove the splash shield (LH).
4. Remove in the order indicated in the table.

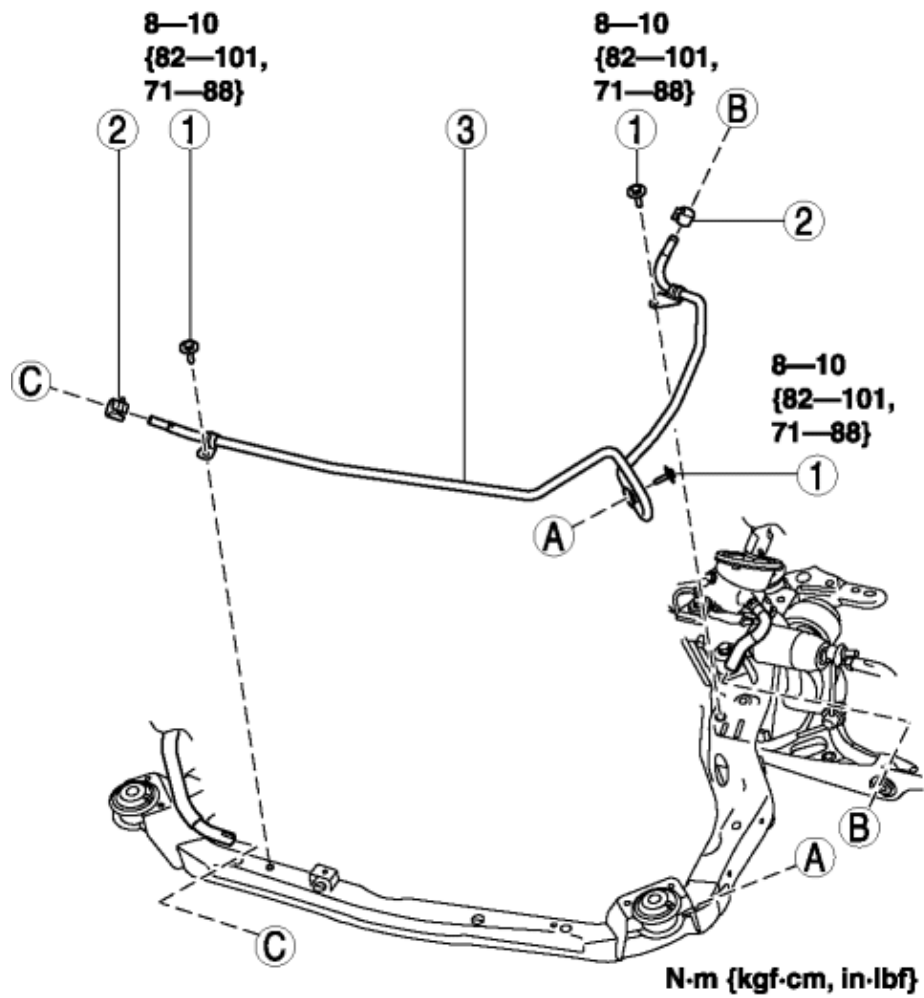

1	Bolts
2	Hose clips
3	Cooling pipe

5. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.