

2012 - Mazda6 - Body and Accessories


STEERING LOCK UNIT ID CODE REGISTRATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

CAUTION:

- Do not place the following devices in the vehicle while programming, otherwise programming cannot be performed:
 - M-MDS
 - Personal computer
 - Devices that can send/receive radio waves

NOTE:

- The steering lock unit and steering lock component are a single unit. Therefore, replace the steering lock component when replacing steering lock unit. (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#)) (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#))
 - For this procedure, a programmed card key is necessary. If there is no programmed card key, perform the steering lock unit programming after the card key programming.
1. Bring the programmed advanced key into the vehicle.
 2. Fully lower the driver-side door glass.
 3. Connect the M-MDS (IDS) to the DLC-2.

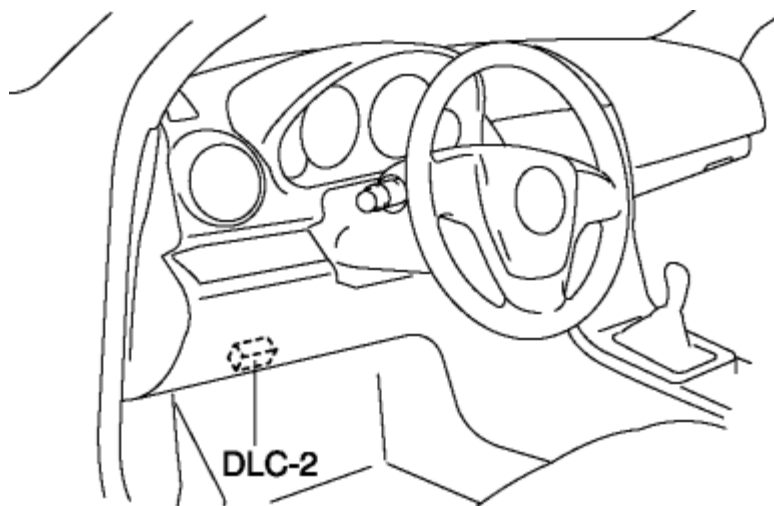

4. Pull out the M-MDS cable from the door glass opening and set the M-MDS outside the vehicle.

CAUTION:

- Cover the vehicle body with a clean rag so as not to damage the vehicle body with the cable.

5. After the vehicle is identified, select the following items from the initial screen of the M-MDS.

- When using the IDS (laptop PC)
 - Select the "Body"
 - Select the "Security"
 - Select the "PATS Functions"

6. Then, select an items from the screen menu.

item

- Steering Lock Unit Programming

7. Perform the security access according to the directions on the M-MDS screen.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Body and Accessories


STEERING LOCK UNIT ID CODE REGISTRATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

CAUTION:

- Do not place the following devices in the vehicle while programming, otherwise programming cannot be performed:
 - M-MDS
 - Personal computer
 - Devices that can send/receive radio waves

NOTE:

- The steering lock unit and steering lock component are a single unit. Therefore, replace the steering lock component when replacing steering lock unit. (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#)) (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#))
 - For this procedure, a programmed card key is necessary. If there is no programmed card key, perform the steering lock unit programming after the card key programming.
1. Bring the programmed advanced key into the vehicle.
 2. Fully lower the driver-side door glass.
 3. Connect the M-MDS (IDS) to the DLC-2.

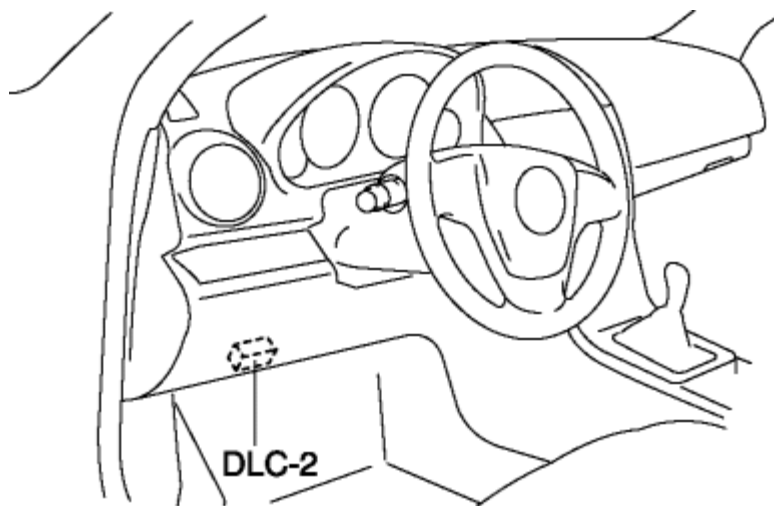

4. Pull out the M-MDS cable from the door glass opening and set the M-MDS outside the vehicle.

CAUTION:

- Cover the vehicle body with a clean rag so as not to damage the vehicle body with the cable.

5. After the vehicle is identified, select the following items from the initial screen of the M-MDS.

- When using the IDS (laptop PC)
 - Select the "Body"
 - Select the "Security"
 - Select the "PATS Functions"

6. Then, select an items from the screen menu.

item

- Steering Lock Unit Programming

7. Perform the security access according to the directions on the M-MDS screen.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)