


2012 - Mazda6 - Body and Accessories

KEYLESS ANTENNA REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

Vehicle Interior, Front

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See. [UPPER PANEL REMOVAL/ INSTALLATION](#))
 - b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - c. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - f. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\].](#))
3. Disconnect the connector.

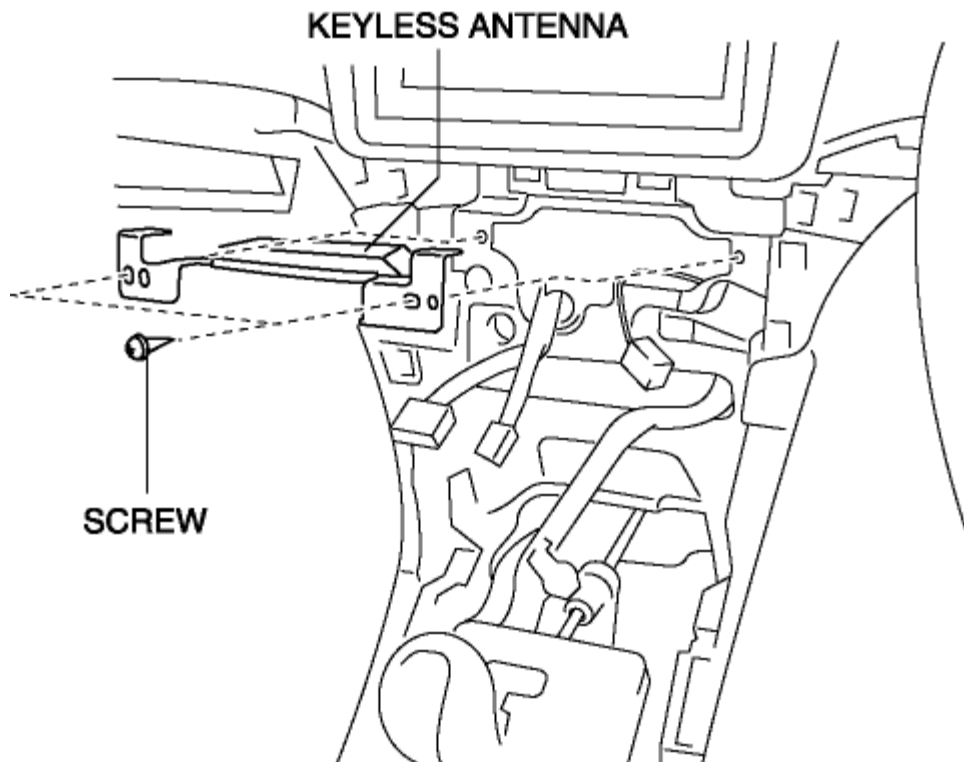

4. Remove the keyless antenna.

5. Install in the reverse order of removal.


Vehicle Interior, Center

1. Disconnect the negative battery cable.

2. Remove the following parts:

- a. Upper panel (See. [UPPER PANEL REMOVAL/ INSTALLATION](#))
- b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
- c. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
- d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
- e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
- f. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))

3. Disconnect the connector.

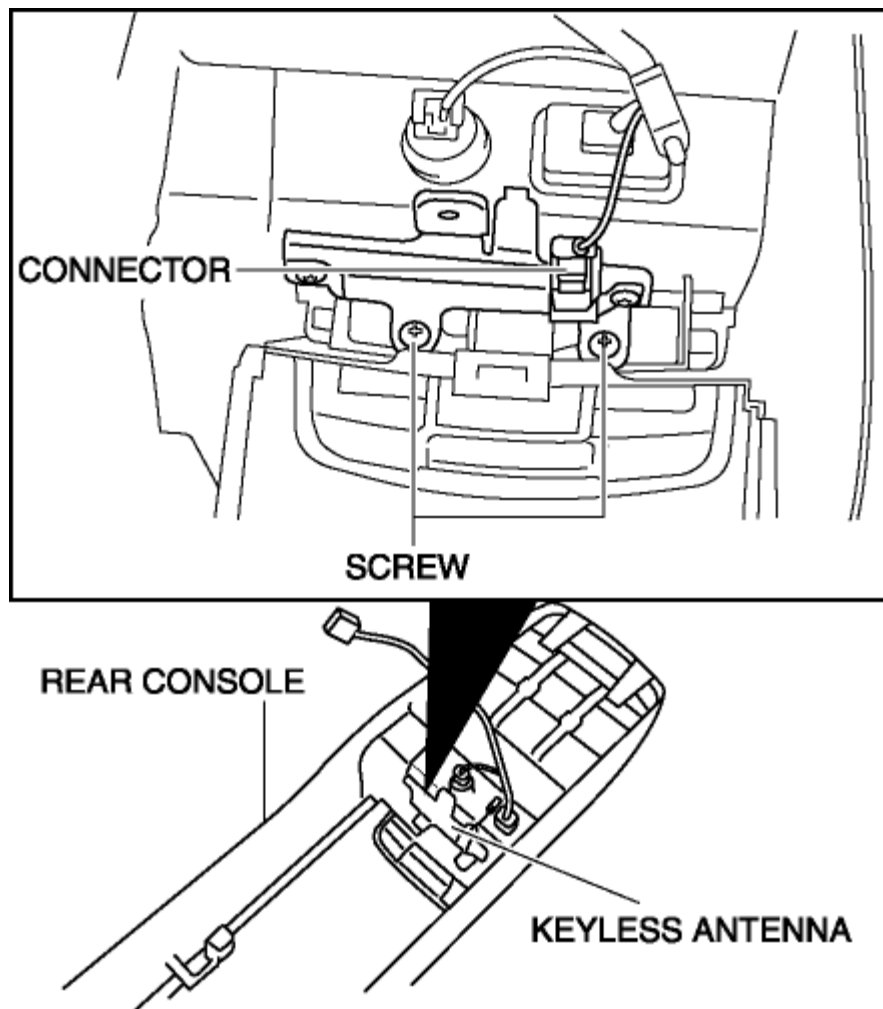


4. Remove the bolt.

5. Remove the keyless antenna.

6. Install in the reverse order of removal.

Vehicle Interior, Rear


1. Disconnect the negative battery cable.
2. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
3. Disconnect the connector.

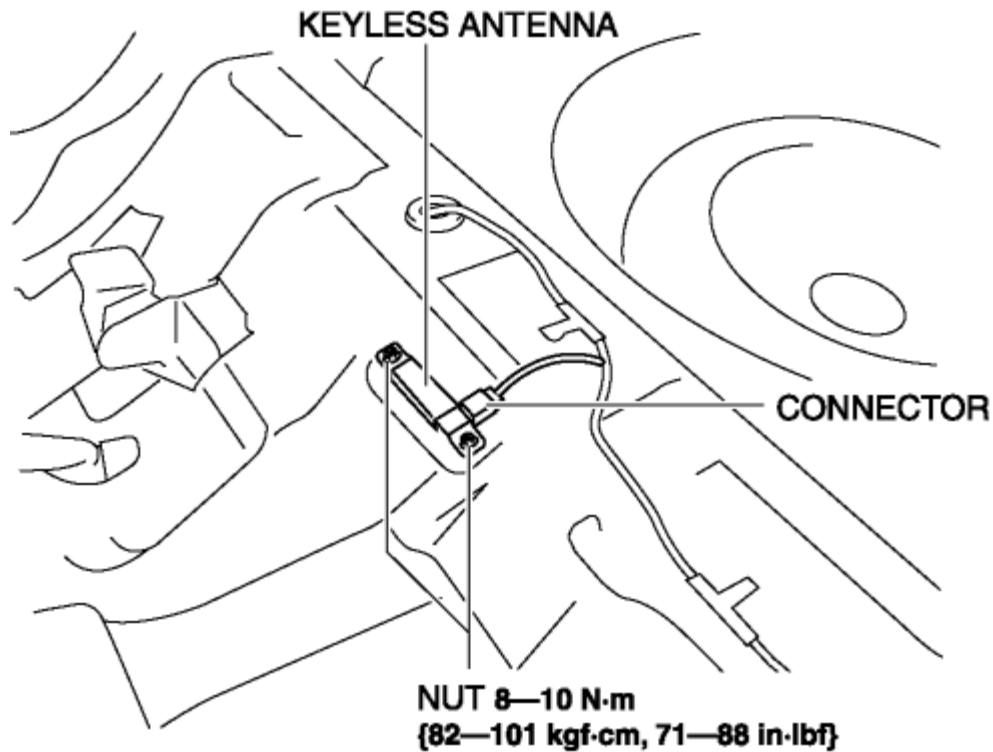

4. Remove the nuts.
5. Remove the keyless antenna.
6. Install in the reverse order of removal.

Vehicle Exterior, Rear

1. Disconnect the negative battery cable.
2. Remove the nuts.

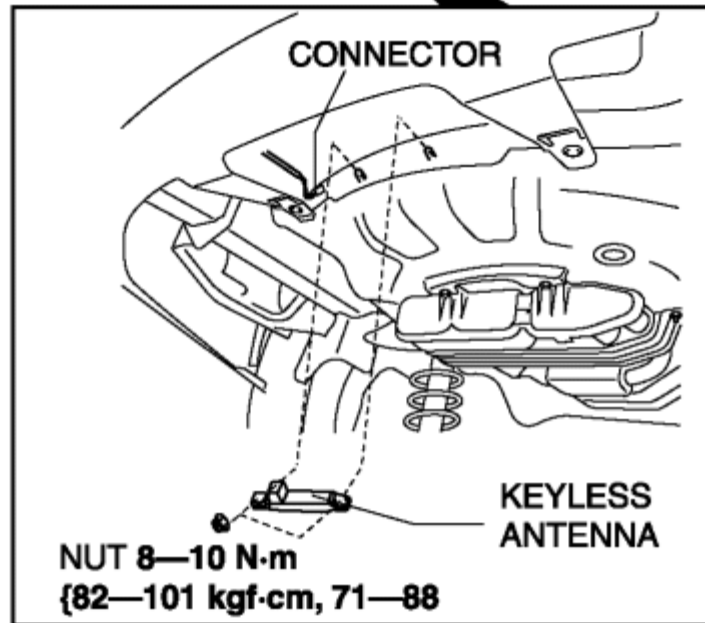


3. Disconnect the connector.
4. Remove the keyless antenna.
5. Install in the reverse order of removal.

Vehicle Exterior, Driver's Door/ Passenger's Door

NOTE:

- The keyless antenna (vehicle exterior, driver's door/passenger's door) is built into the front outer handle. (See [FRONT OUTER HANDLE REMOVAL/ INSTALLATION](#).)

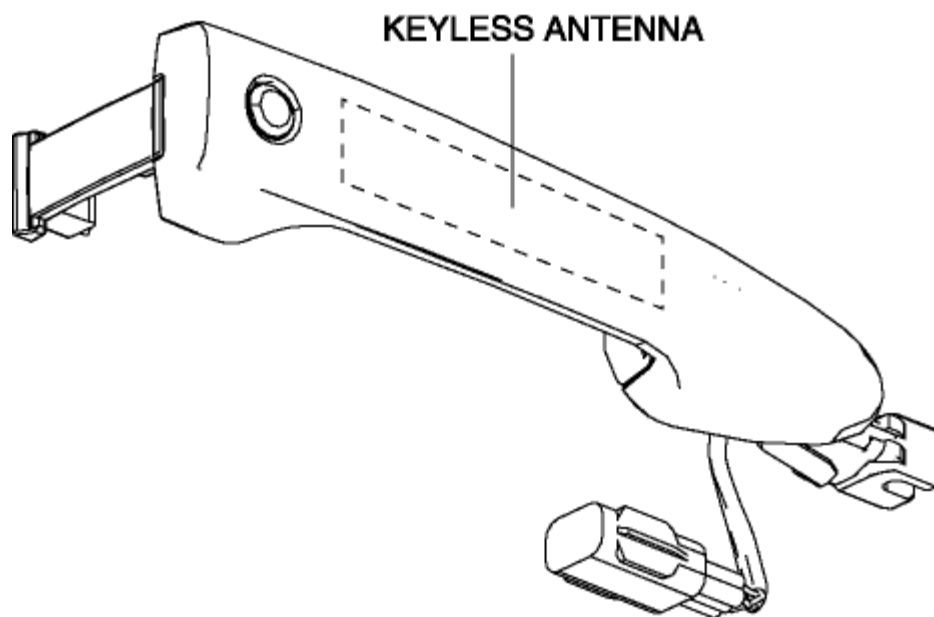

[< Previous](#) [Next >](#)

[Back to Top](#)


© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

KEYLESS ANTENNA REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

Vehicle Interior, Front

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See. [UPPER PANEL REMOVAL/ INSTALLATION](#))
 - b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - c. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - f. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\].](#))
3. Disconnect the connector.

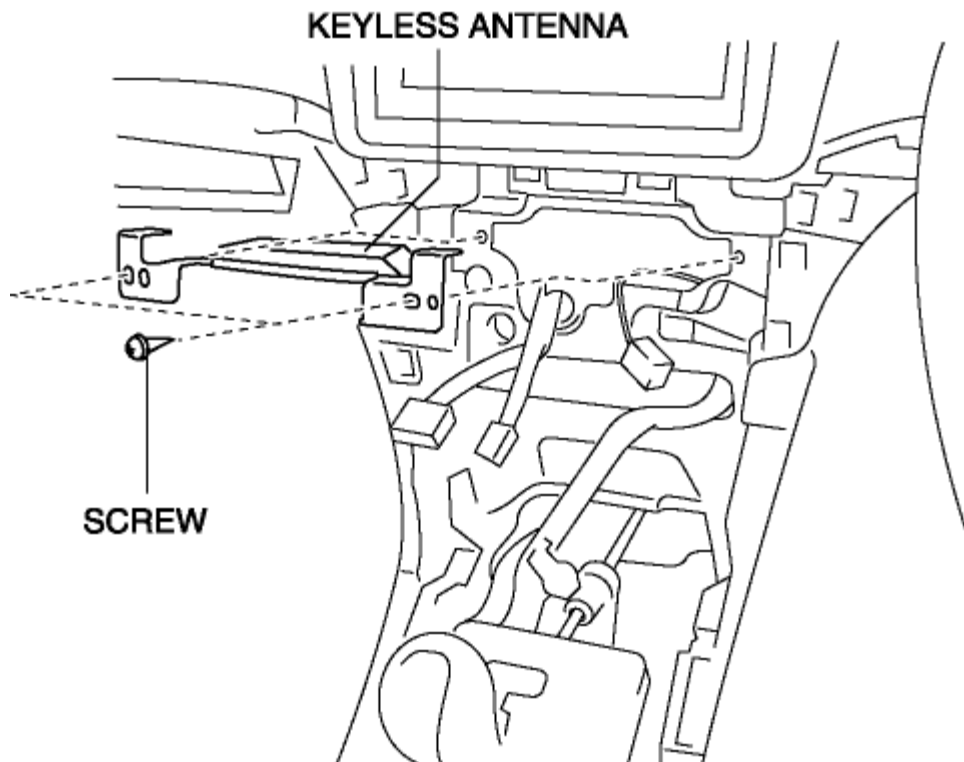

4. Remove the keyless antenna.

5. Install in the reverse order of removal.


Vehicle Interior, Center

1. Disconnect the negative battery cable.

2. Remove the following parts:

- a. Upper panel (See. [UPPER PANEL REMOVAL/ INSTALLATION](#))
- b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
- c. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
- d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
- e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
- f. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))

3. Disconnect the connector.

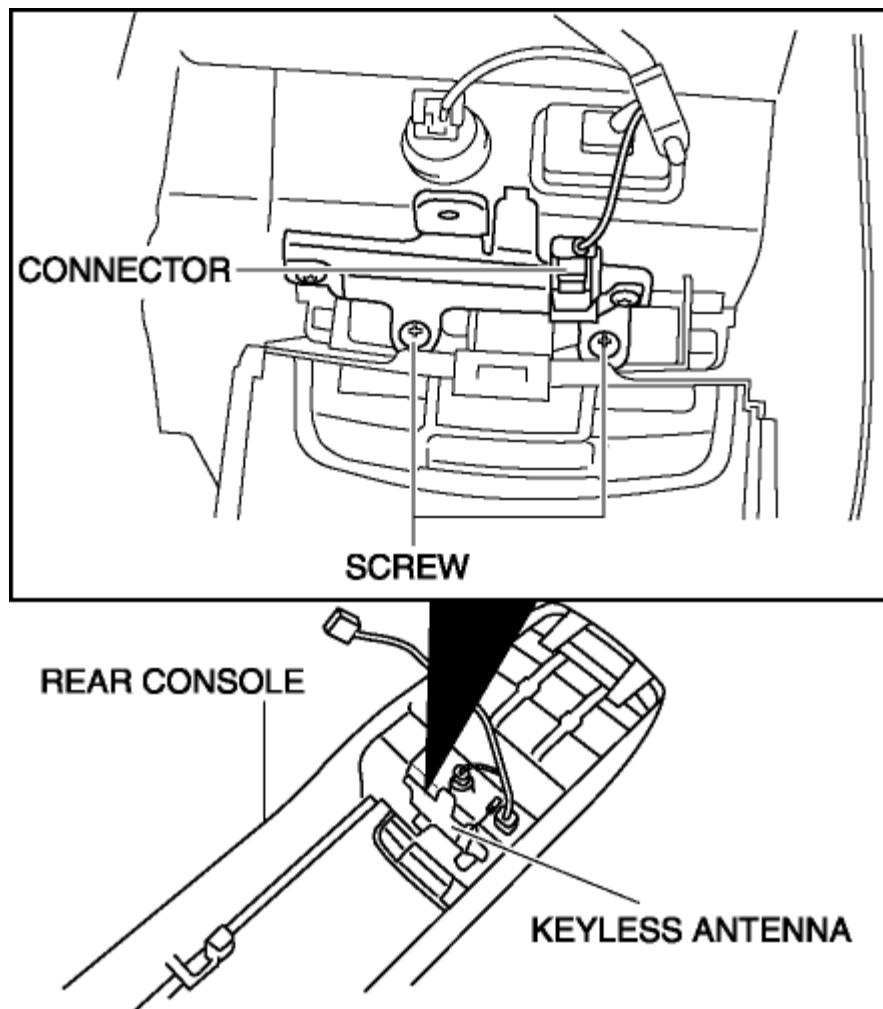


4. Remove the bolt.

5. Remove the keyless antenna.

6. Install in the reverse order of removal.

Vehicle Interior, Rear


1. Disconnect the negative battery cable.
2. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
3. Disconnect the connector.

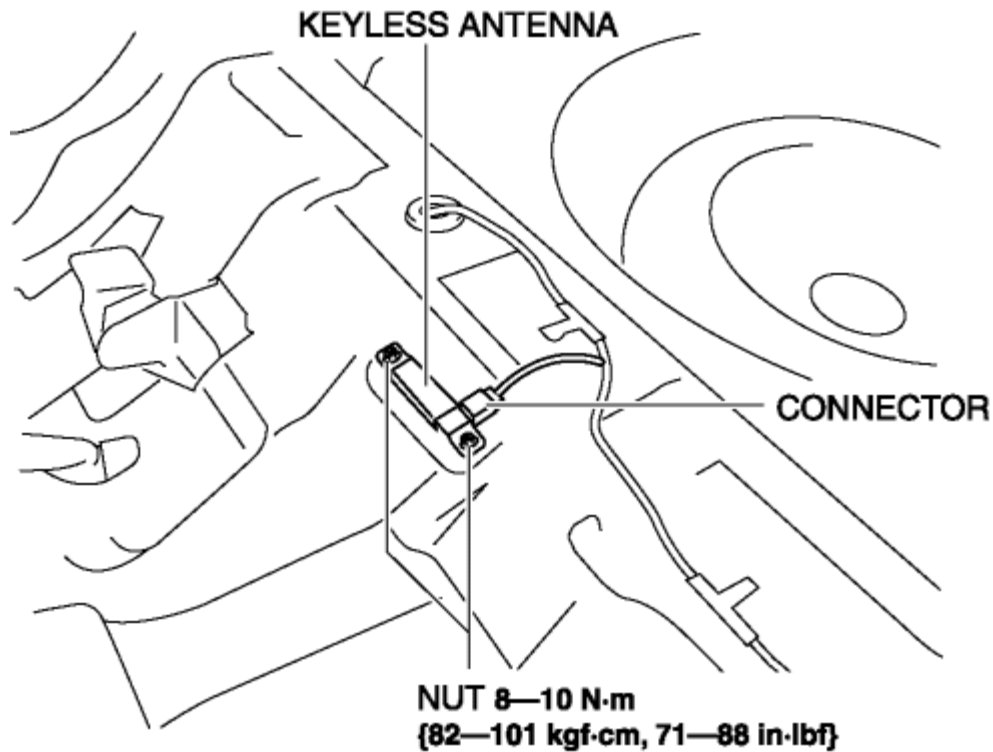

4. Remove the nuts.
5. Remove the keyless antenna.
6. Install in the reverse order of removal.

Vehicle Exterior, Rear

1. Disconnect the negative battery cable.
2. Remove the nuts.

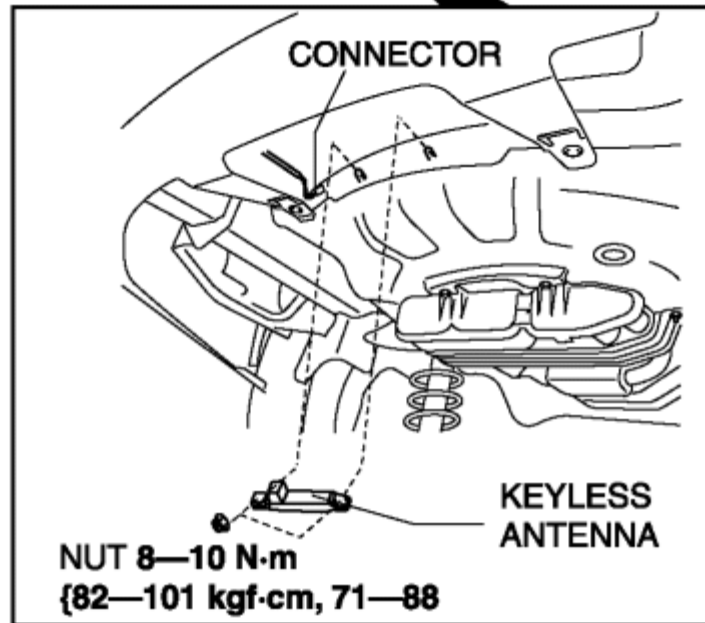


3. Disconnect the connector.
4. Remove the keyless antenna.
5. Install in the reverse order of removal.

Vehicle Exterior, Driver's Door/ Passenger's Door

NOTE:

- The keyless antenna (vehicle exterior, driver's door/passenger's door) is built into the front outer handle. (See [FRONT OUTER HANDLE REMOVAL/ INSTALLATION](#).)

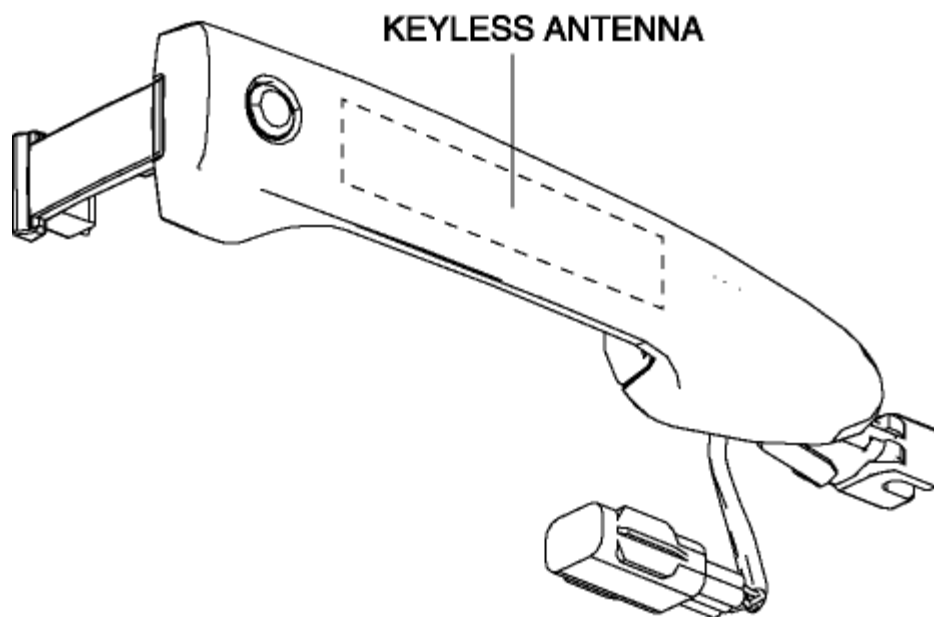

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.