 

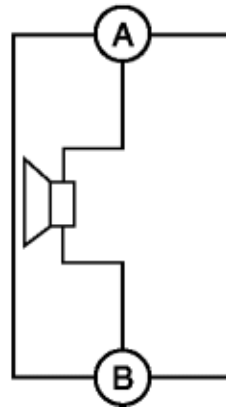


2012 - Mazda6 - Body and Accessories

KEYLESS BEEPER INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

1. Disconnect the negative battery cable.
2. Remove the keyless beeper. (See **KEYLESS BEEPER REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]** .)
3. Apply battery positive voltage and connect the ground to each terminal and verify the keyless beeper sound operation.
 - If the beep sound cannot be verified, replace the keyless beeper.

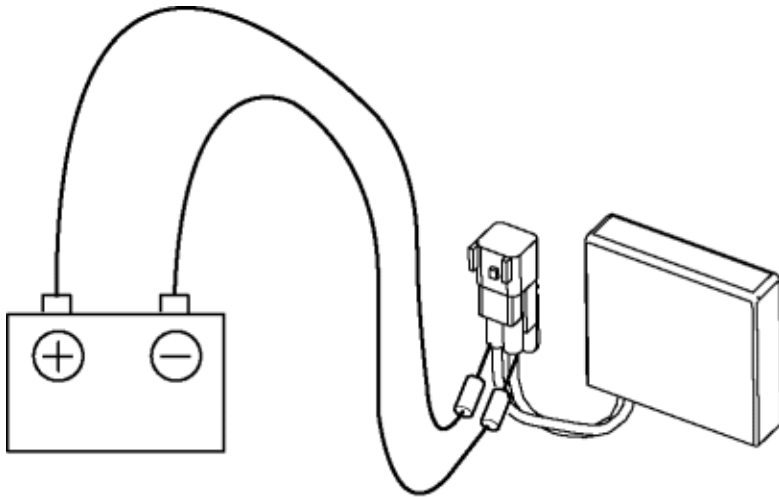

2012 - Mazda6 - Body and Accessories

KEYLESS BEEPER INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

1. Disconnect the negative battery cable.
2. Remove the keyless beeper. (See **KEYLESS BEEPER REMOVAL/ INSTALLATION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]** .)
3. Apply battery positive voltage and connect the ground to each terminal and verify the keyless beeper sound operation.
 - If the beep sound cannot be verified, replace the keyless beeper.

