



2012 - Mazda6 - Body and Accessories

ADVANCED KEY BATTERY REPLACEMENT [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]


1. Pull out the auxiliary key.

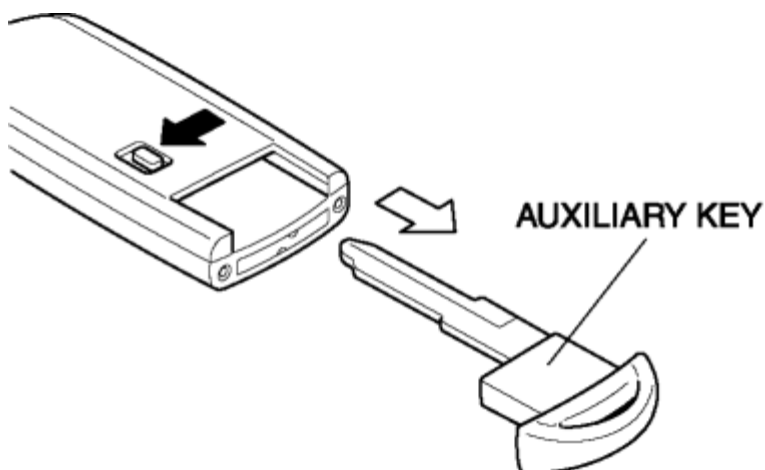


2. Insert a flathead screwdriver into the notch in the transmitter and rotate it in the direction shown in the figure to open the transmitter.

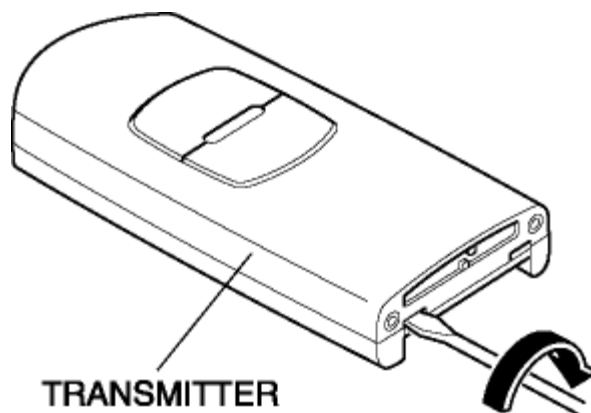

3. Remove the battery.

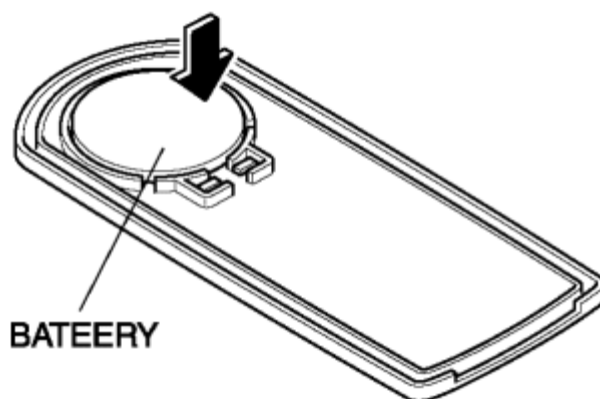


4. Install the new battery (CR2025) with the positive pole facing down.

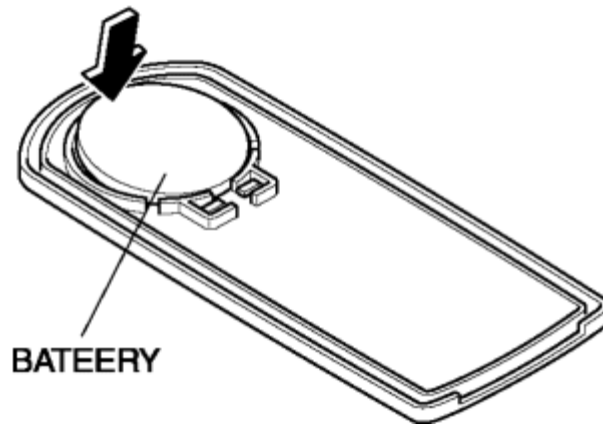

5. Align the upper and lower covers and close the transmitter.

6. Insert the auxiliary key.

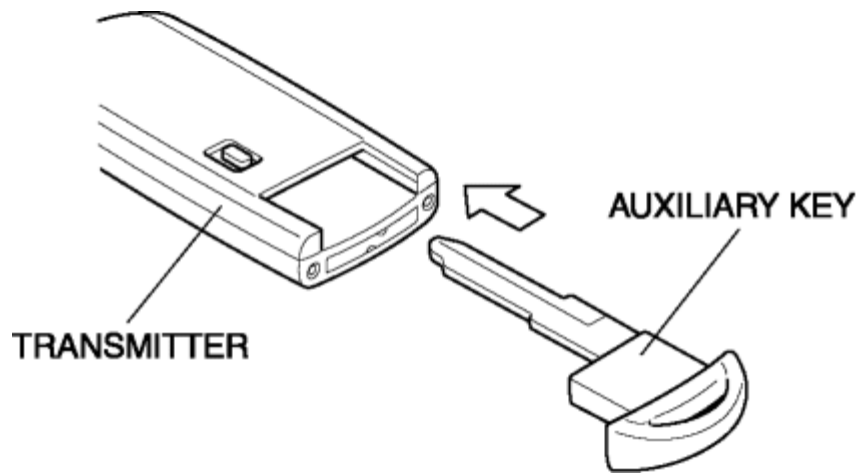

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

ADVANCED KEY BATTERY REPLACEMENT [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]


1. Pull out the auxiliary key.

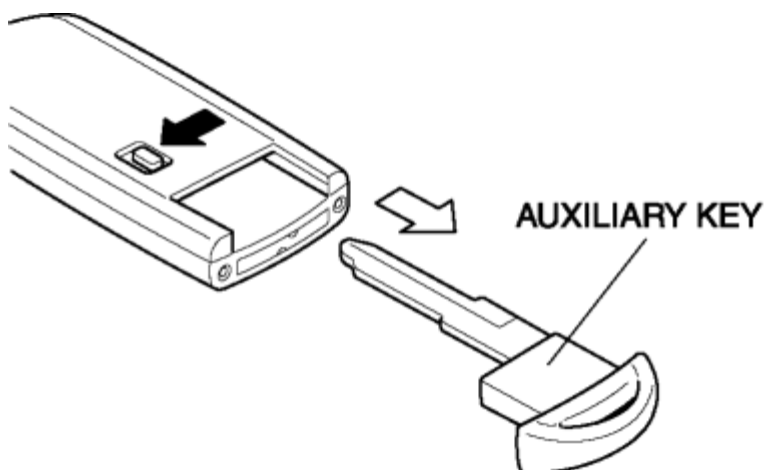


2. Insert a flathead screwdriver into the notch in the transmitter and rotate it in the direction shown in the figure to open the transmitter.

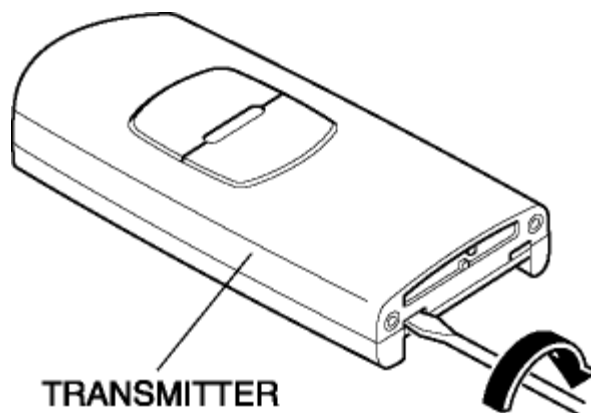

3. Remove the battery.

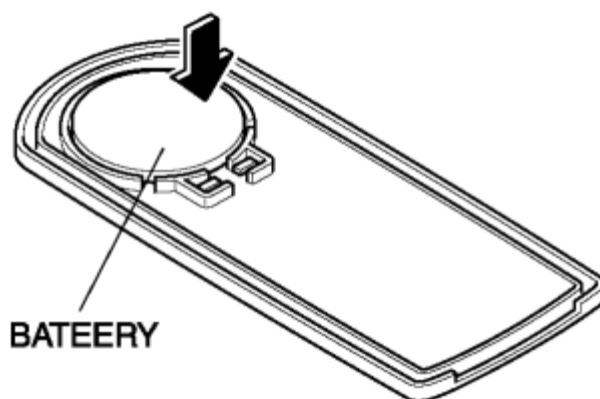


4. Install the new battery (CR2025) with the positive pole facing down.

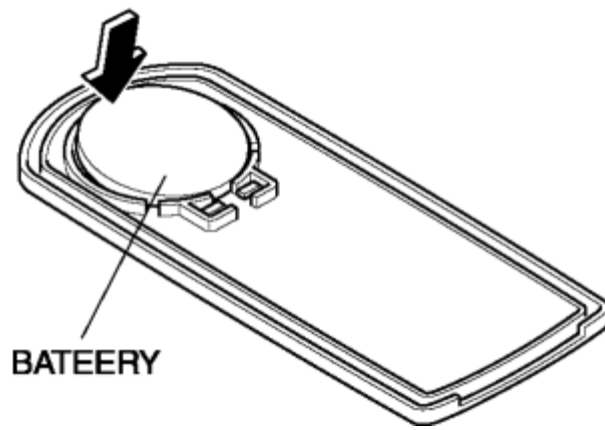

5. Align the upper and lower covers and close the transmitter.

6. Insert the auxiliary key.

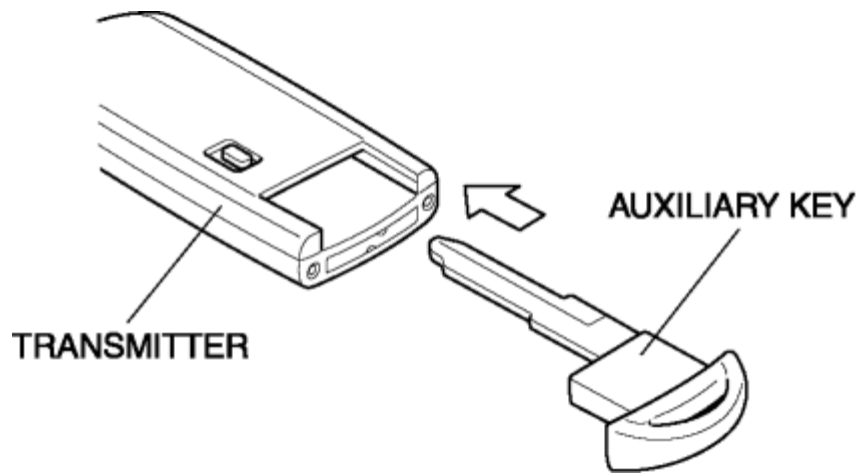

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.