


2012 - Mazda6 - Body and Accessories

RELAY BLOCK INSPECTION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

- 1. Disconnect the negative battery cable.
- 2. Remove the lower panel. (See LOWER PANEL REMOVAL/ INSTALLATION.)
- 3. Remove the knee bolster. (See KNEE BOLSTER REMOVAL/ INSTALLATION.)
- 4. Remove the relay block. (See RELAY BLOCK REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].)
- 5. Verify that the continuity is as indicated in the table.

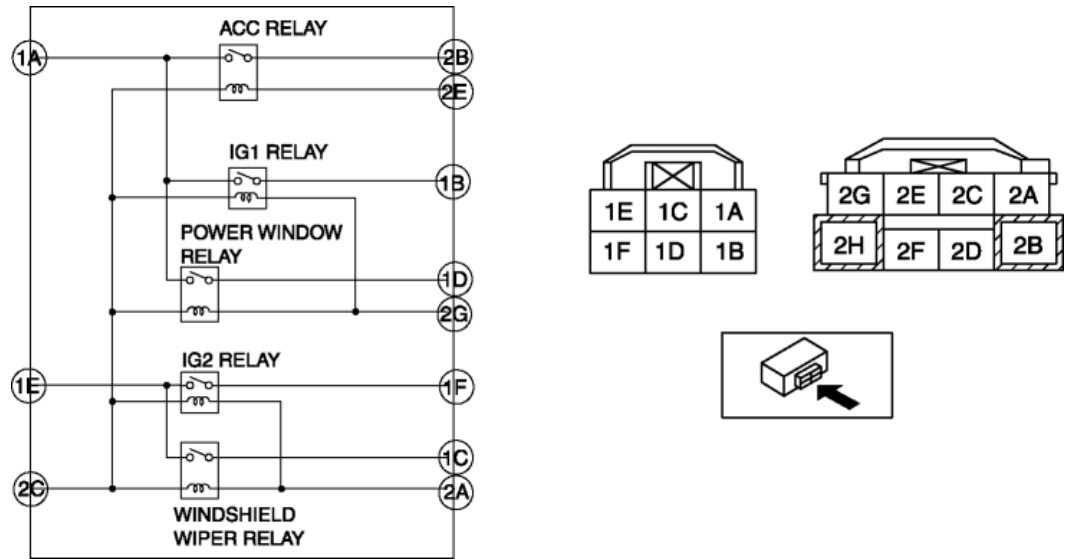

- If not as indicated in the table, replace the relay block.


○ — ○ : Continuity

Step	Terminal										
	2A	2G	2E	2C	1A	1E	1C	1F	1D	1B	2B
1	○ — ○ — ○ — ○										
2	B+			GND		○ — ○ — ○					
3		B+		GND	○ —				○ —	○	
4			B+	GND	○ —						○

2012 - Mazda6 - Body and Accessories

RELAY BLOCK INSPECTION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

- 1. Disconnect the negative battery cable.
- 2. Remove the lower panel. (See LOWER PANEL REMOVAL/ INSTALLATION.)
- 3. Remove the knee bolster. (See KNEE BOLSTER REMOVAL/ INSTALLATION.)
- 4. Remove the relay block. (See RELAY BLOCK REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].)
- 5. Verify that the continuity is as indicated in the table.

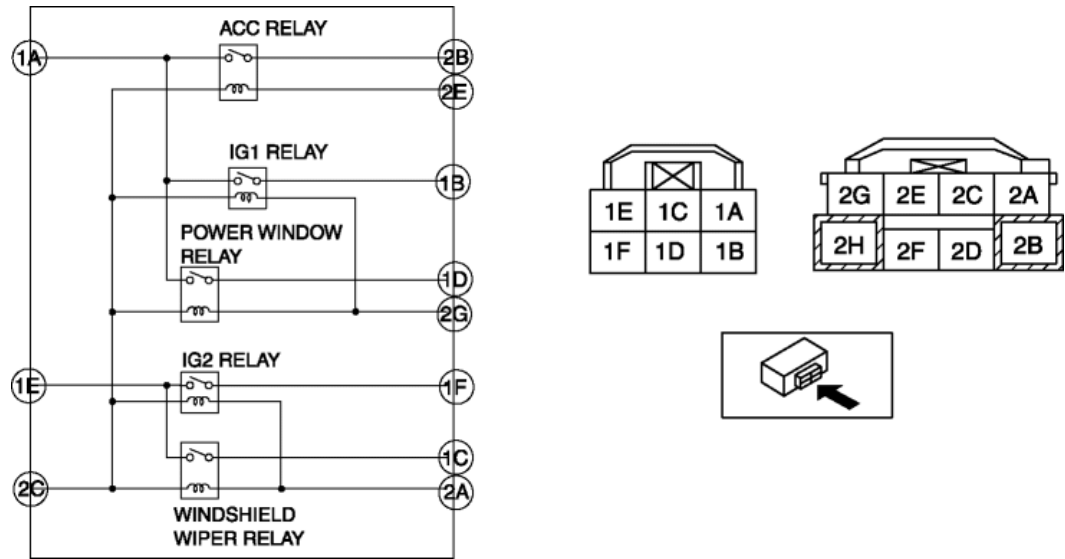

- If not as indicated in the table, replace the relay block.

○ — ○ : Continuity

Step	Terminal										
	2A	2G	2E	2C	1A	1E	1C	1F	1D	1B	2B
1	○ — ○ — ○ — ○										
2	B+			GND		○ — ○ — ○					
3		B+		GND	○ —				○ —	○	
4			B+	GND	○ —						○