


2012 - Mazda6 - Body and Accessories

IGNITION SWITCH INSPECTION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

- 1. Disconnect the negative battery cable.
- 2. Remove the column cover. (See COLUMN COVER REMOVAL/ INSTALLATION.)
- 3. Remove the ignition switch. (See IGNITION SWITCH REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].)
- 4. Verify that the continuity between the ignition switch terminals is as indicated in the table.

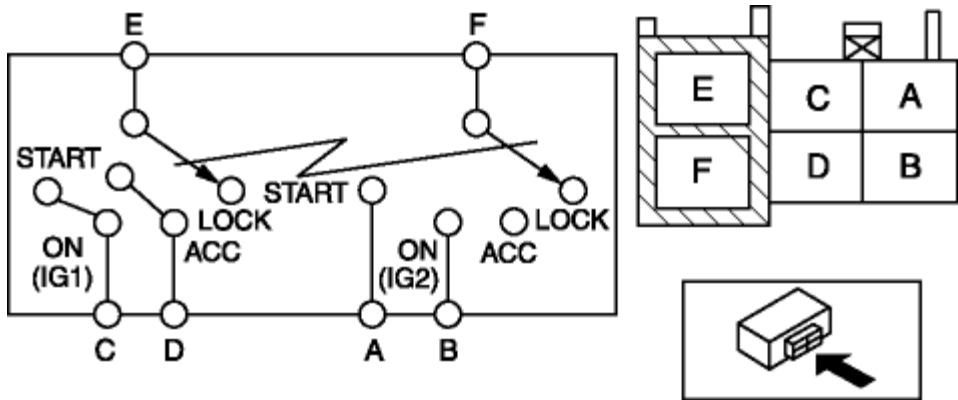

- If not as indicated in the table, replace the ignition switch.


○—○: Continuity

Ignition key position	Terminal					
	F	E	D	C	B	A
LOCK						
ACC		○—○				
ON	○—○	○—○	○—○		○—○	
START	○—○	○—○				○—○

2012 - Mazda6 - Body and Accessories

IGNITION SWITCH INSPECTION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

- 1. Disconnect the negative battery cable.
- 2. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION](#).)
- 3. Remove the ignition switch. (See [IGNITION SWITCH REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#).)
- 4. Verify that the continuity between the ignition switch terminals is as indicated in the table.

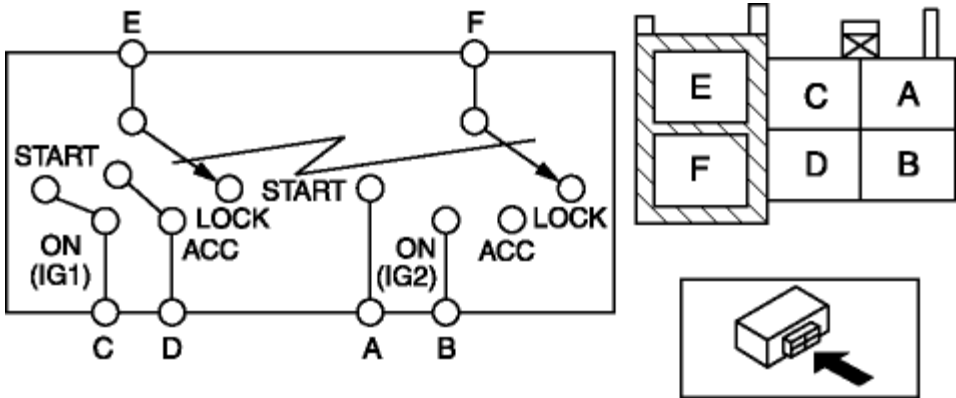

- If not as indicated in the table, replace the ignition switch.

○—○: Continuity

Ignition key position	Terminal					
	F	E	D	C	B	A
LOCK						
ACC		○—○				
ON	○—○	○—○	○—○		○—○	
START	○—○	○—○				○—○