



2012 - Mazda6 - Body and Accessories

IGNITION SWITCH REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]


1. Disconnect the negative battery cable.
2. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION](#).)
3. Pull the pin in the direction of the arrow shown in the figure and release the lock.

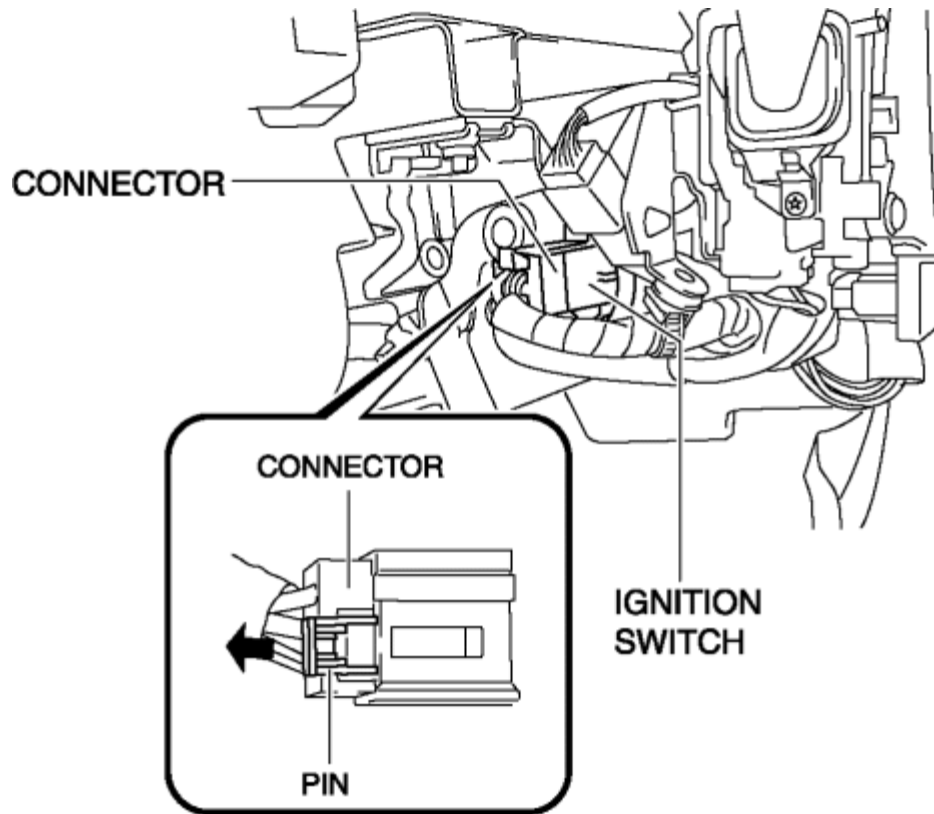

4. Disconnect the connector.
5. Remove the screw.

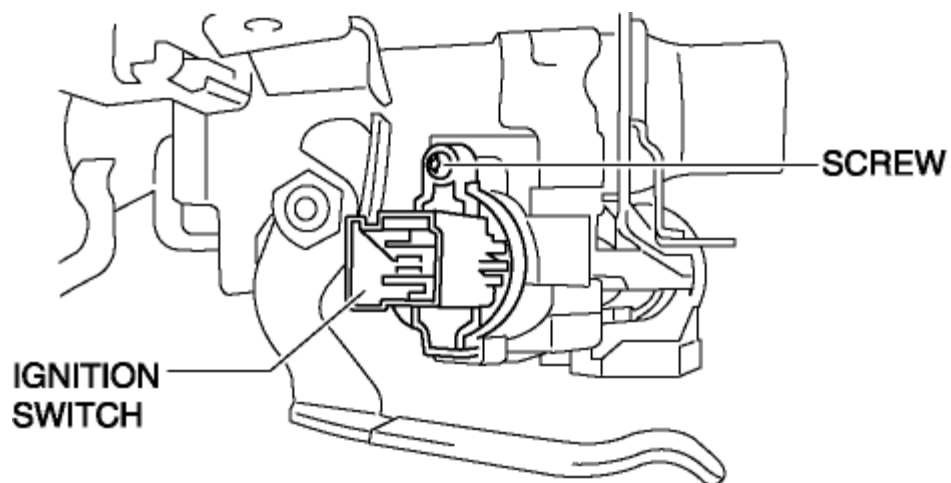

6. Remove the tabs.

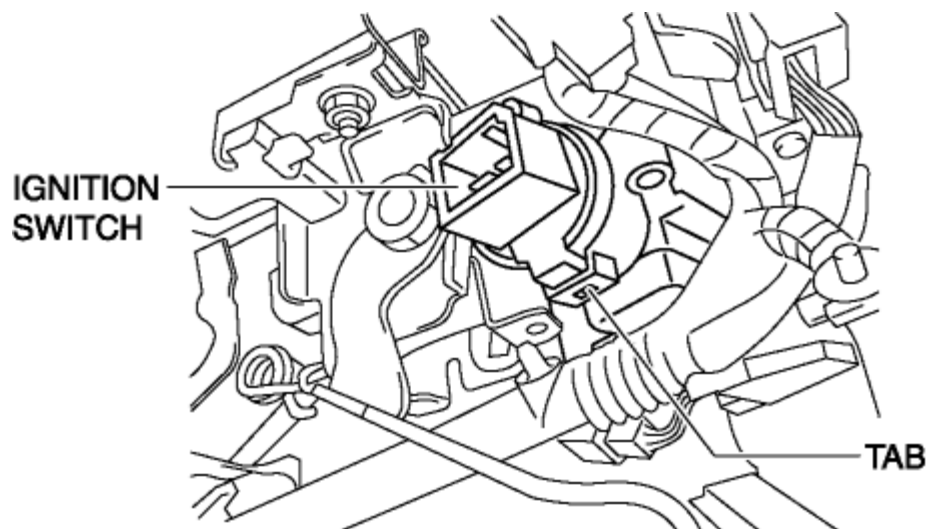

7. Remove the ignition switch.

8. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

IGNITION SWITCH REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]


1. Disconnect the negative battery cable.
2. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION](#).)
3. Pull the pin in the direction of the arrow shown in the figure and release the lock.

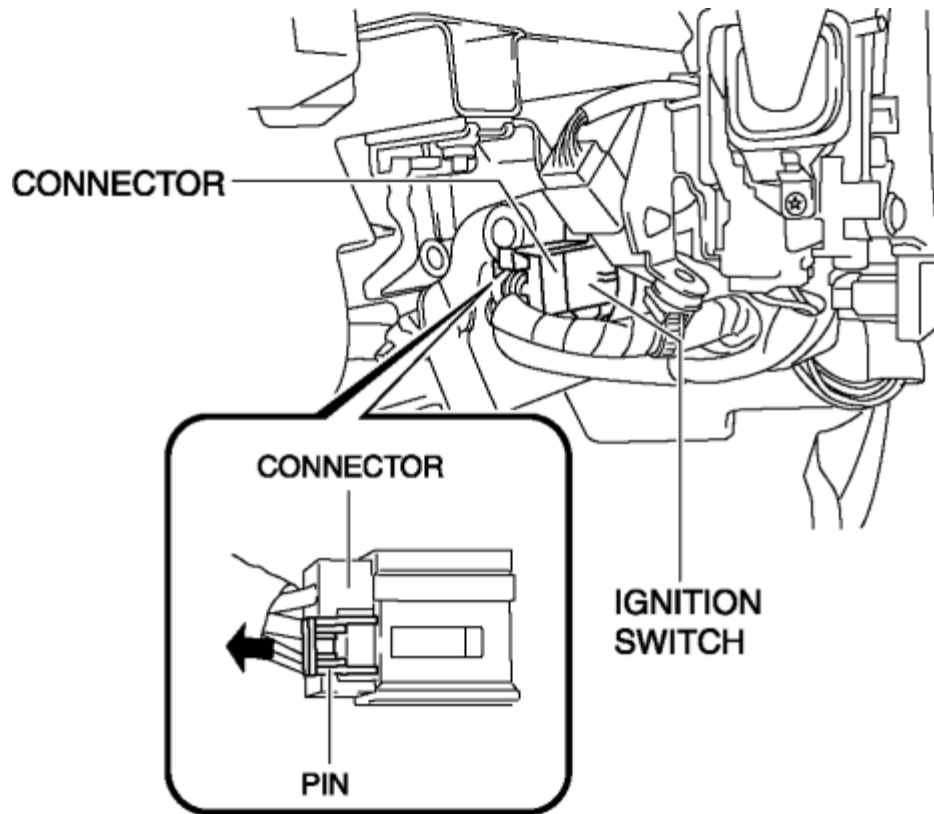

4. Disconnect the connector.
5. Remove the screw.

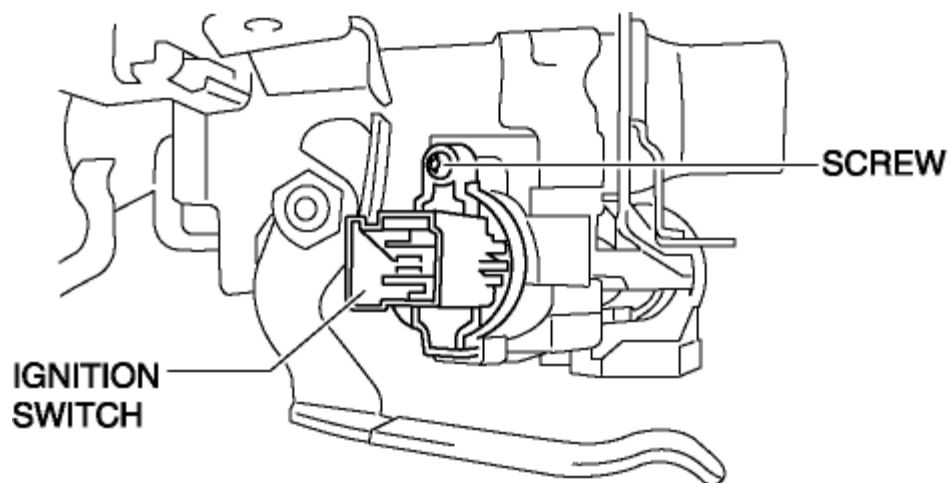

6. Remove the tabs.

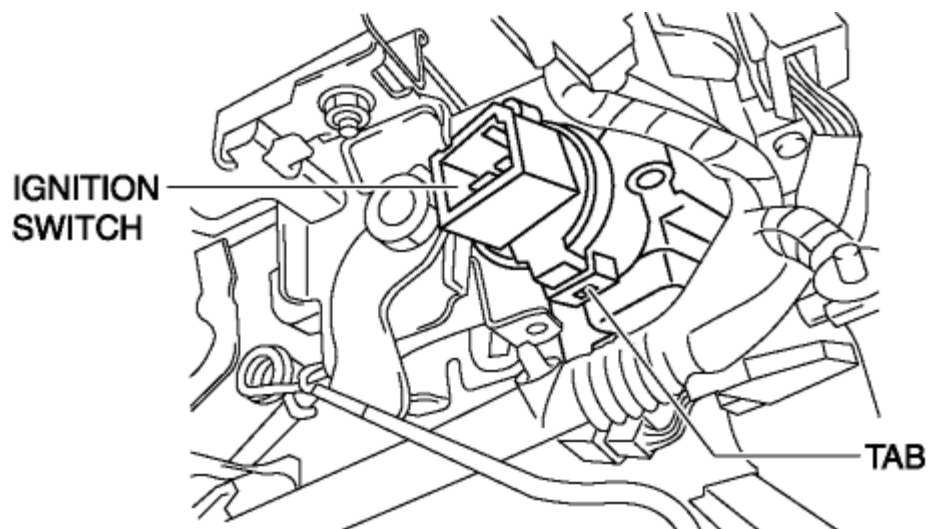

7. Remove the ignition switch.

8. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.