


2012 - Mazda6 - Body and Accessories

STEERING LOCK UNIT INSPECTION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

1. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION](#).)
2. Measure each terminal voltage under the measurement condition.
 - If the voltage is not as specified in the terminal voltage table, inspect the parts under "Inspection item(s)".
 - If the system does not work normally even though the inspection items are normal, replace the steering lock unit.

Terminal Voltage Table (Reference)

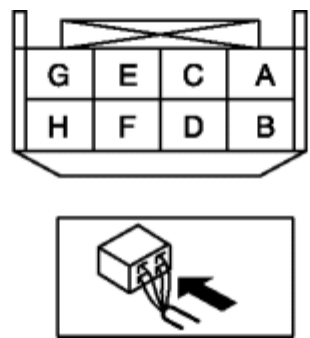

Terminal	Signal name	Connected to	Measurement condition	Voltage (V)	Inspection item(s)
A	—	—	—	—	—
B	Steering lock unit ground	Keyless control module	Steering lock unit is operating (lock operating only)	1.0 or less	• Keyless control module • Related wiring harness
			Except above	1.0 or more	
C	Serial communication	Keyless control module	Terminal used for communication therefore determination based on terminal voltage inspection not possible.		

D	—	—	—	—	—
E	UNLOCK output	Keyless control module	Steering wheel is locked	B+	• Keyless control module • Related wiring harness
			Steering wheel is unlocked	1.0 or less	
F	Power supply	Keyless control module	Steering lock unit is operating	B+	• Keyless control module • Related wiring harness
			Except above	1.0 or less	
G	—	—	—	—	—
H	Ground	Body ground	Under any condition	1.0 or less	• Related wiring harness

[< Previous](#) [Next >](#)

[Back to Top](#)


© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

STEERING LOCK UNIT INSPECTION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

1. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION](#).)
2. Measure each terminal voltage under the measurement condition.
 - If the voltage is not as specified in the terminal voltage table, inspect the parts under "Inspection item(s)".
 - If the system does not work normally even though the inspection items are normal, replace the steering lock unit.

Terminal Voltage Table (Reference)

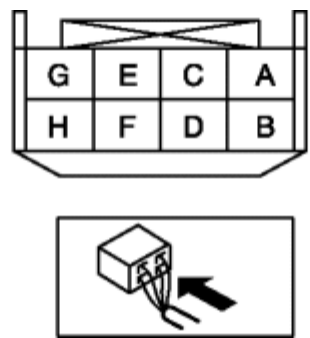

Terminal	Signal name	Connected to	Measurement condition	Voltage (V)	Inspection item(s)
A	—	—	—	—	—
B	Steering lock unit ground	Keyless control module	Steering lock unit is operating (lock operating only)	1.0 or less	• Keyless control module • Related wiring harness
			Except above	1.0 or more	
C	Serial communication	Keyless control module	Terminal used for communication therefore determination based on terminal voltage inspection not possible.		

D	—	—	—	—	—
E	UNLOCK output	Keyless control module	Steering wheel is locked	B+	• Keyless control module • Related wiring harness
			Steering wheel is unlocked	1.0 or less	
F	Power supply	Keyless control module	Steering lock unit is operating	B+	• Keyless control module • Related wiring harness
			Except above	1.0 or less	
G	—	—	—	—	—
H	Ground	Body ground	Under any condition	1.0 or less	• Related wiring harness

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.