


2012 - Mazda6 - Body and Accessories


POWER SYSTEM LOCATION INDEX [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

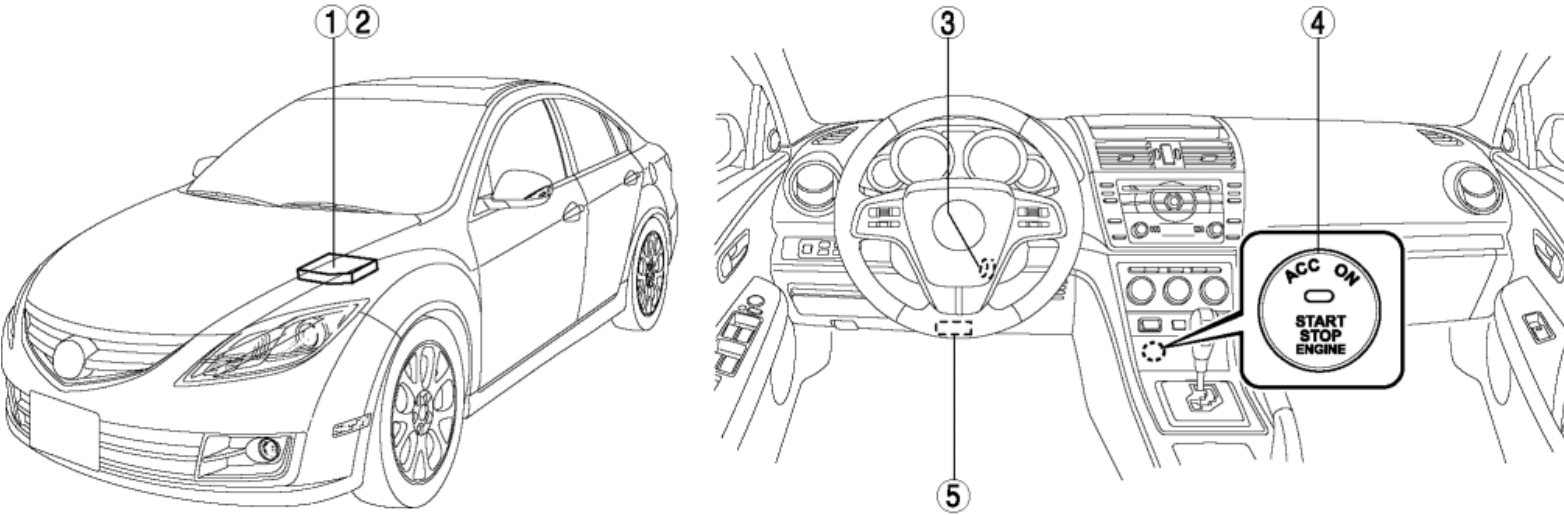

1Main fuse (See MAIN FUSE REMOVAL/ INSTALLATION.)
2Relay (See RELAY LOCATION.) (See RELAY INSPECTION.)
3Steering lock unit (See STEERING LOCK UNIT INSPECTION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].)
4Push button start (See PUSH BUTTON START REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].) (See PUSH BUTTON START INSPECTION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].) (See FORCED IGNITION ON [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].) (See POWER SYSTEMS PERSONALIZATION FEATURES SETTING PROCEDURE.)
5Relay block (See RELAY BLOCK REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].) (See RELAY BLOCK INSPECTION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].)

2012 - Mazda6 - Body and Accessories

POWER SYSTEM LOCATION INDEX [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

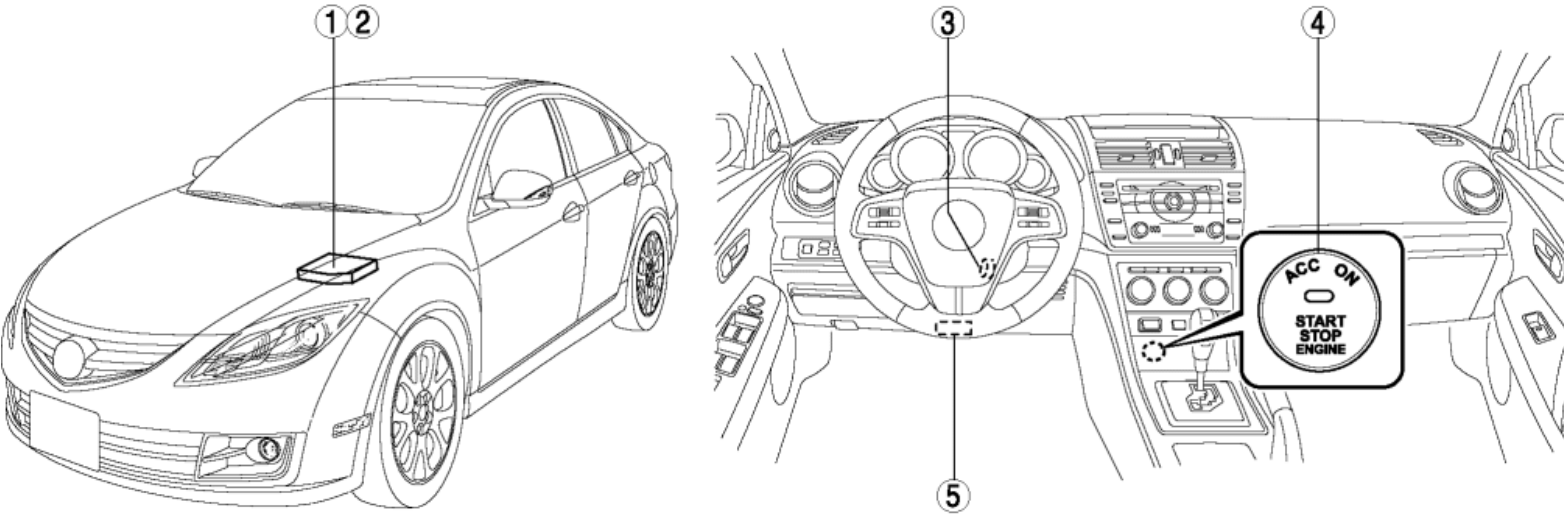

1Main fuse (See MAIN FUSE REMOVAL/ INSTALLATION.)
2Relay (See RELAY LOCATION.) (See RELAY INSPECTION.)
3Steering lock unit (See STEERING LOCK UNIT INSPECTION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].)
4Push button start (See PUSH BUTTON START REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].) (See PUSH BUTTON START INSPECTION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].) (See FORCED IGNITION ON [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].) (See POWER SYSTEMS PERSONALIZATION FEATURES SETTING PROCEDURE.)
5Relay block (See RELAY BLOCK REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].) (See RELAY BLOCK INSPECTION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM].)