


2012 - Mazda6 - Body and Accessories


POWER SYSTEM LOCATION INDEX [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

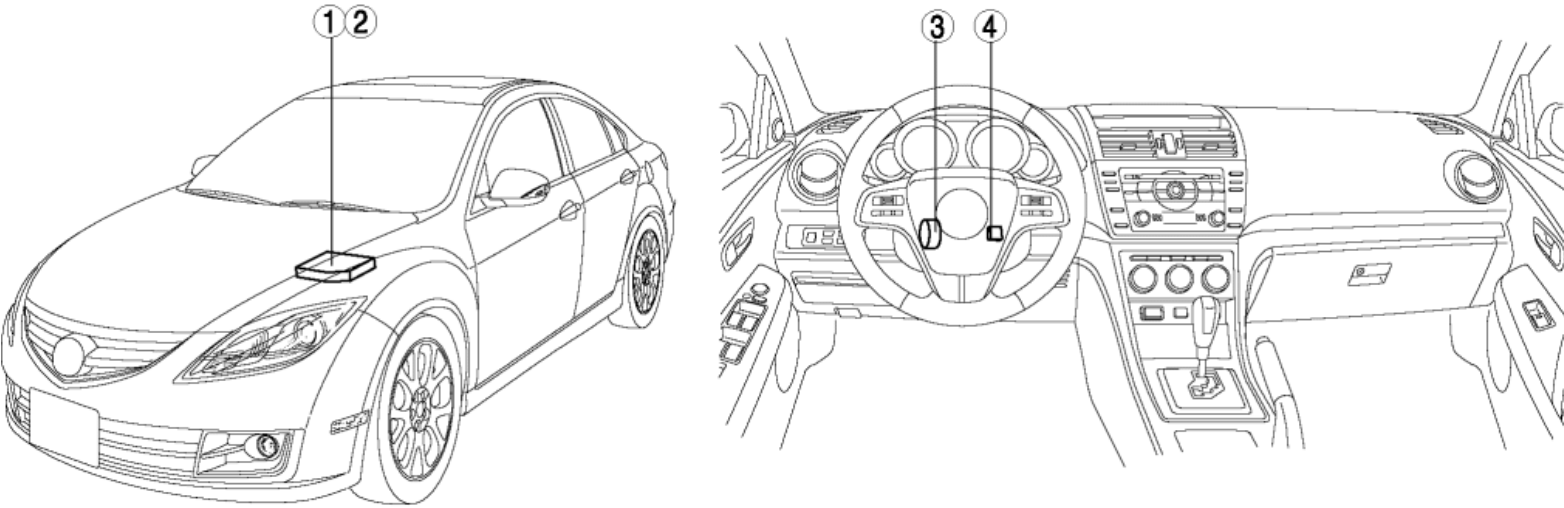

1	Main fuse (See MAIN FUSE REMOVAL/ INSTALLATION.)
2	Relay (See RELAY LOCATION.) (See RELAY INSPECTION.)
3	Ignition switch (See IGNITION SWITCH REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See IGNITION SWITCH INSPECTION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
4	Key reminder switch (See KEY REMINDER SWITCH REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See KEY REMINDER SWITCH INSPECTION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)

2012 - Mazda6 - Body and Accessories

POWER SYSTEM LOCATION INDEX [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

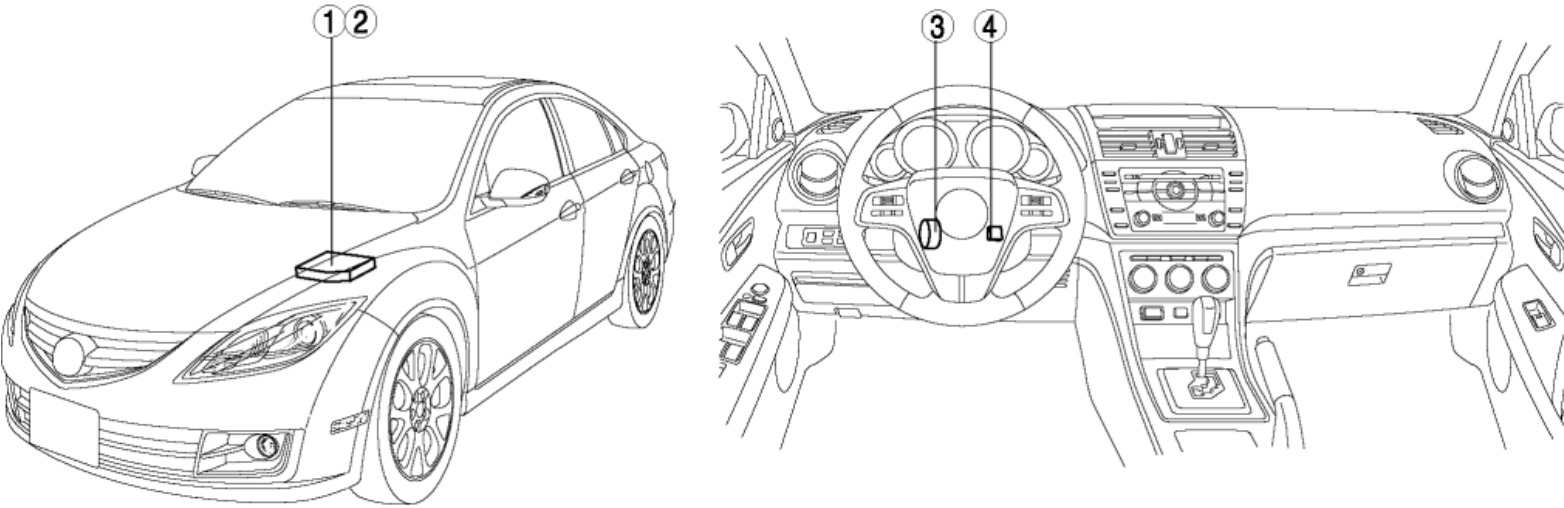

1	Main fuse (See MAIN FUSE REMOVAL/ INSTALLATION.)
2	Relay (See RELAY LOCATION.) (See RELAY INSPECTION.)
3	Ignition switch (See IGNITION SWITCH REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See IGNITION SWITCH INSPECTION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)
4	Key reminder switch (See KEY REMINDER SWITCH REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .) (See KEY REMINDER SWITCH INSPECTION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM] .)