


2012 - Mazda6 - Engine

ENGINE OIL LEVEL INSPECTION [MZR 2.5]

1. Position the vehicle on level ground.
2. Warm up the engine.
3. Stop the engine and allow **at least 5 min** before continuing.
4. Remove the dipstick, wipe it cleanly, and reinstall it fully.
5. Remove the dipstick and verify that the oil level is between the F and L marks on the dipstick.

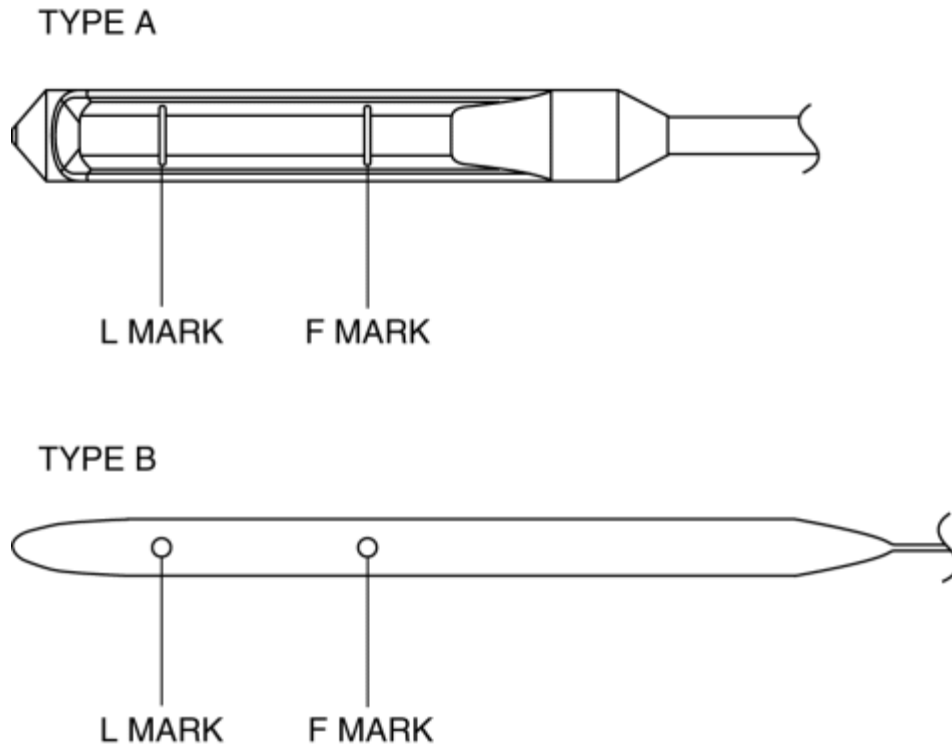


- If the oil level is below the L mark, add engine oil.

2012 - Mazda6 - Engine

ENGINE OIL LEVEL INSPECTION [MZR 2.5]

1. Position the vehicle on level ground.
2. Warm up the engine.
3. Stop the engine and allow **at least 5 min** before continuing.
4. Remove the dipstick, wipe it cleanly, and reinstall it fully.
5. Remove the dipstick and verify that the oil level is between the F and L marks on the dipstick.

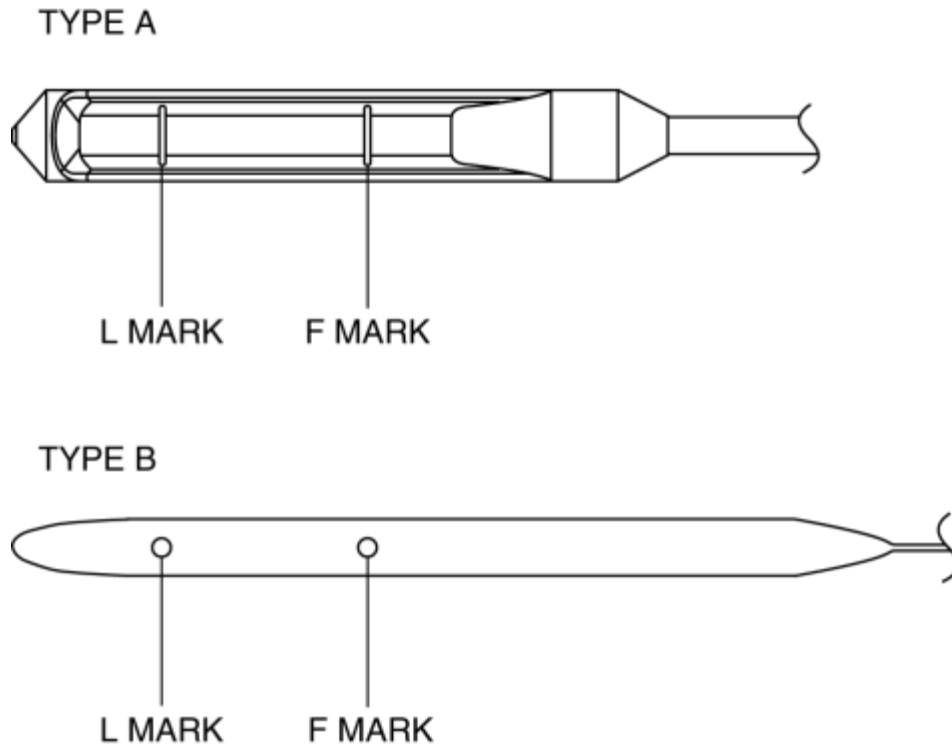

- If the oil level is below the L mark, add engine oil.