


2012 - Mazda6 - Engine

LUBRICATION SYSTEM LOCATION INDEX [MZI 3.7 V6]

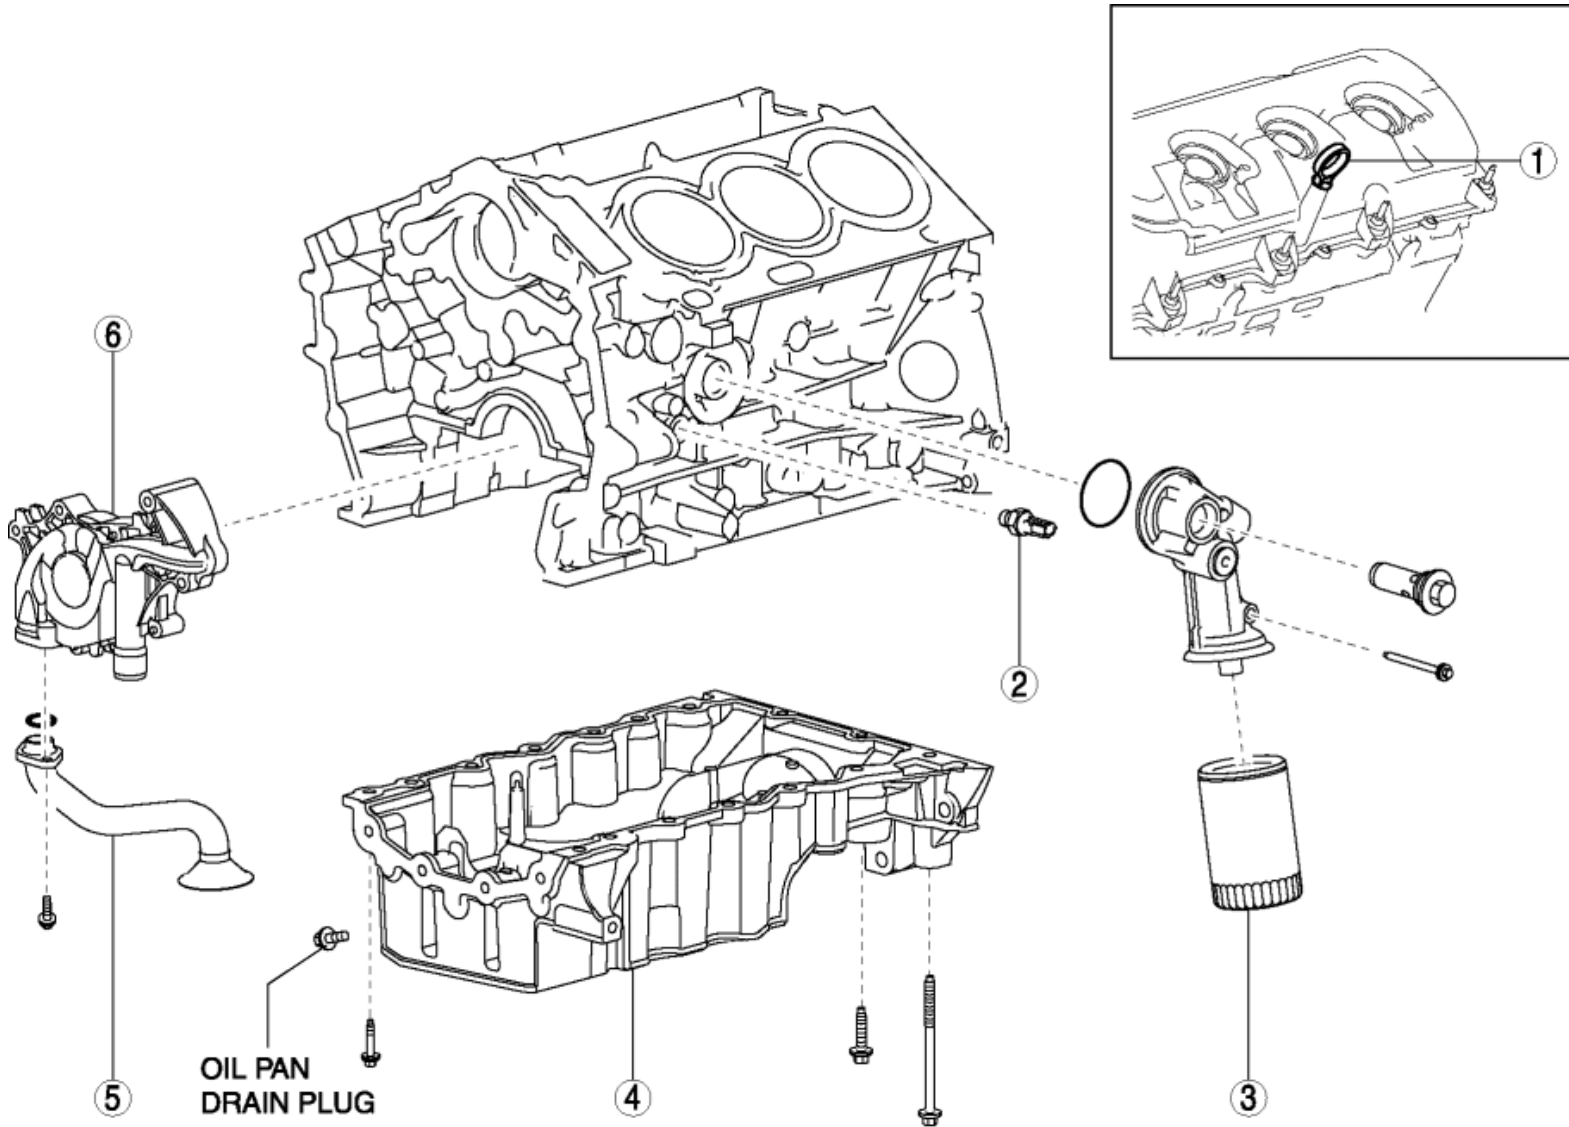

1 Dipstick

(See [ENGINE OIL LEVEL INSPECTION \[MZI 3.7 V6\]](#).)

(See [ENGINE OIL REPLACEMENT \[MZI 3.7 V6\]](#).)

2 Oil pressure switch

(See [OIL PRESSURE INSPECTION \[MZI 3.7 V6\]](#).)

3 Oil filter

(See [OIL FILTER REPLACEMENT \[MZI 3.7 V6\]](#).)

4	Oil pan (See OIL PAN REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
5	Oil strainer (See OIL PAN REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
6	Oil pump (See OIL PUMP REMOVAL/ INSTALLATION [MZI 3.7 V6] .)


[< Previous](#) [Next >](#)

© 2011 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Engine

LUBRICATION SYSTEM LOCATION INDEX [MZI 3.7 V6]

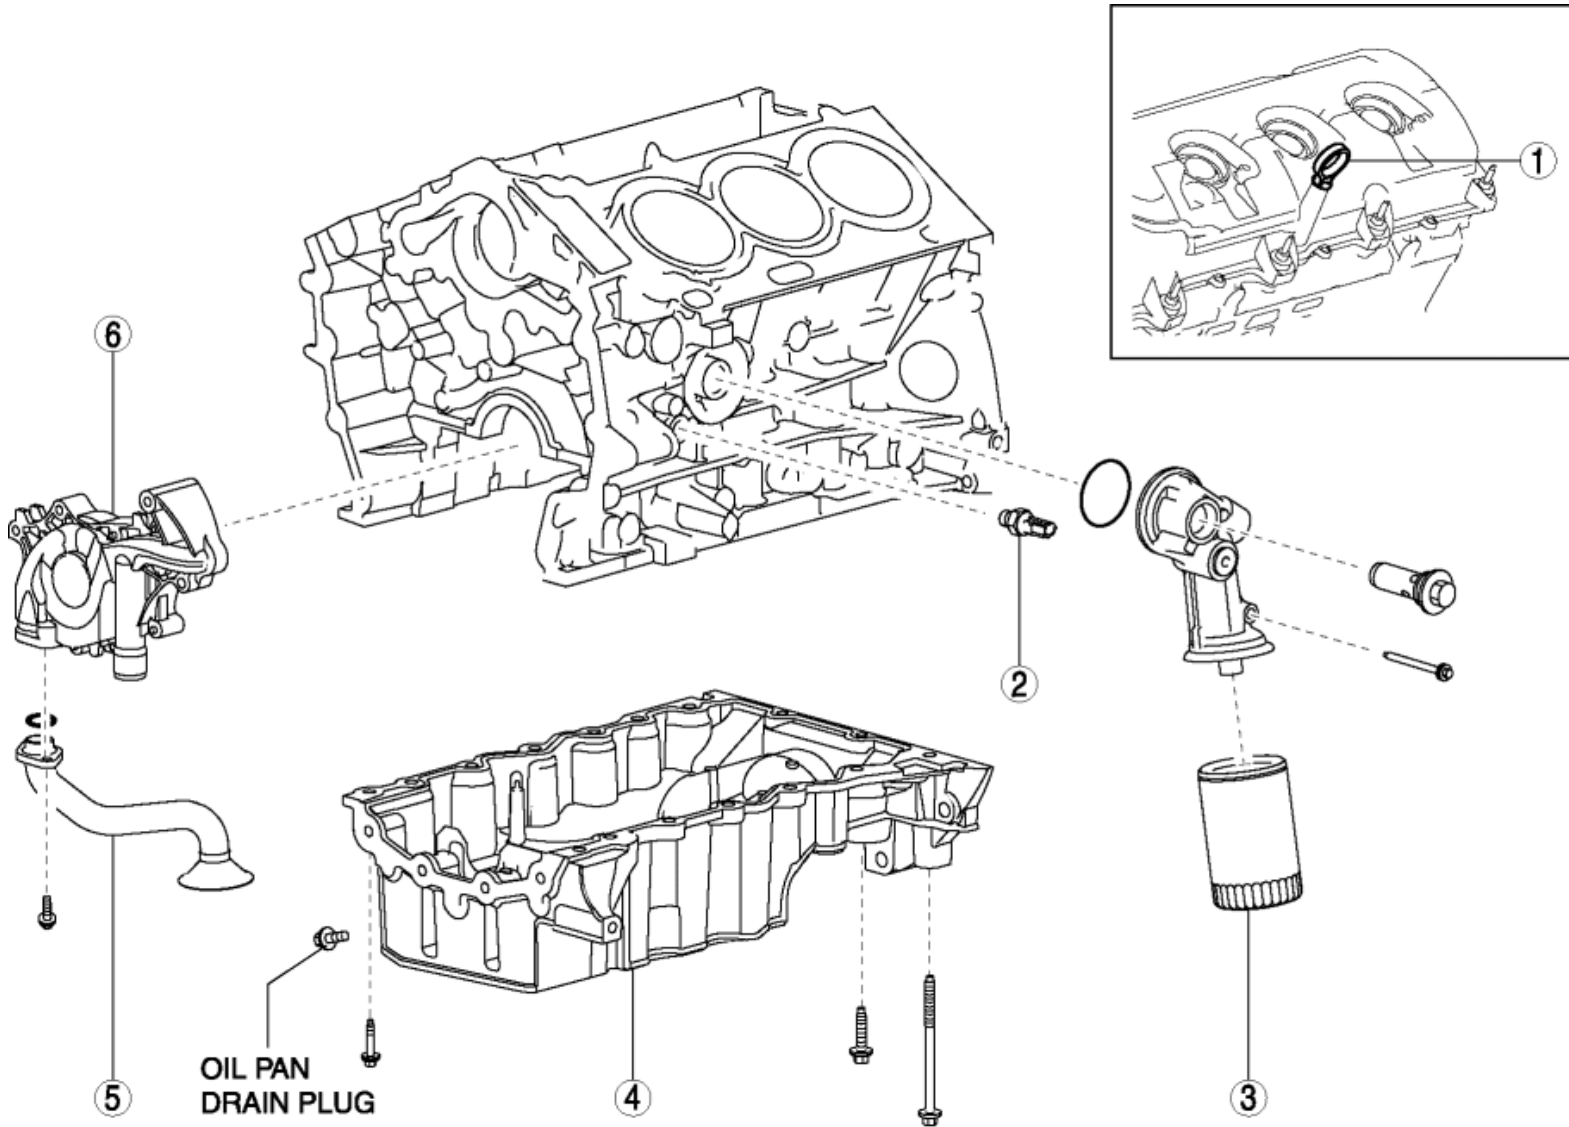

1 Dipstick

(See [ENGINE OIL LEVEL INSPECTION \[MZI 3.7 V6\]](#).)

(See [ENGINE OIL REPLACEMENT \[MZI 3.7 V6\]](#).)

2 Oil pressure switch

(See [OIL PRESSURE INSPECTION \[MZI 3.7 V6\]](#).)

3 Oil filter

(See [OIL FILTER REPLACEMENT \[MZI 3.7 V6\]](#).)

4	Oil pan (See OIL PAN REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
5	Oil strainer (See OIL PAN REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
6	Oil pump (See OIL PUMP REMOVAL/ INSTALLATION [MZI 3.7 V6] .)

[< Previous](#) [Next >](#)

© 2011 Mazda North American Operations, U.S.A.

[Back to Top](#)