

[< Previous](#) [Next >](#)

2012 - Mazda6 - Engine

AIR CLEANER ELEMENT INSPECTION [MZI 3.7 V6]

1. Remove the air cleaner element. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
2. Verify that the air cleaner element surface is free of dirt.
 - If there is dirt, use an air gun or similar tool to clean the element.
 - If the replacement time limit has passed, replace the element. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Engine

AIR CLEANER ELEMENT INSPECTION [MZI 3.7 V6]

1. Remove the air cleaner element. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
2. Verify that the air cleaner element surface is free of dirt.
 - If there is dirt, use an air gun or similar tool to clean the element.
 - If the replacement time limit has passed, replace the element. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.