


2012 - Mazda6 - Engine

INTAKE-AIR SYSTEM LOCATION INDEX [MZI 3.7 V6]

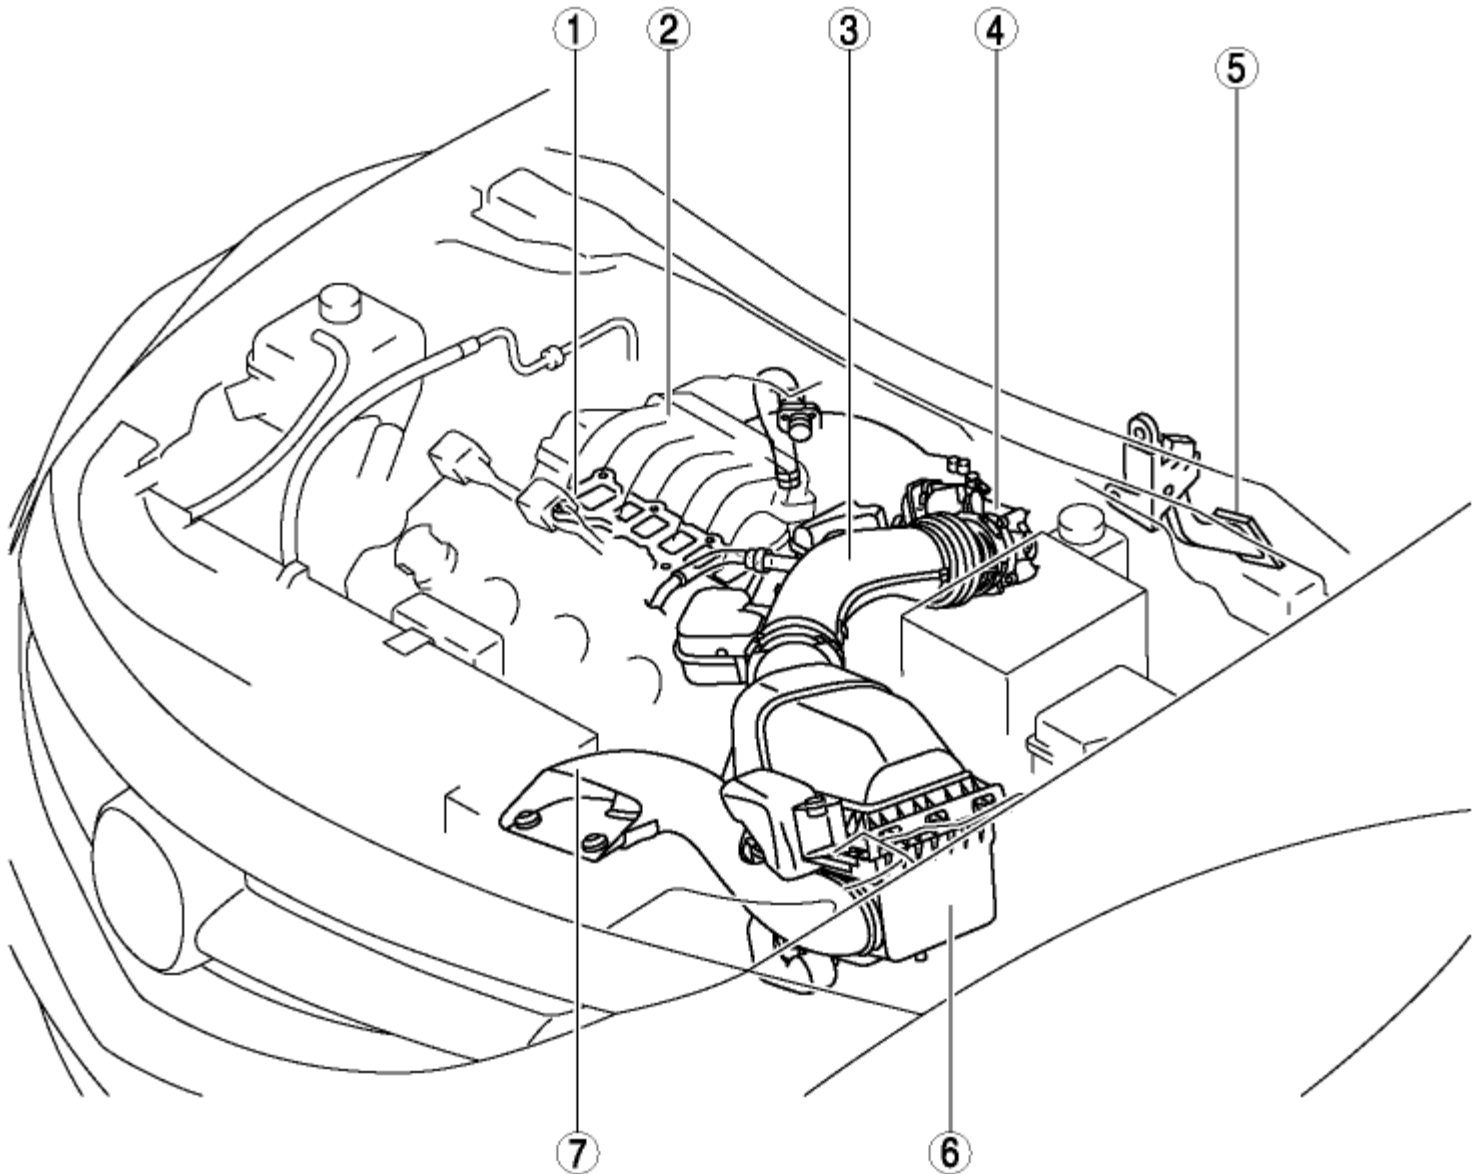

1 Intake manifold

(See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

(See [INTAKE MANIFOLD VACUUM INSPECTION \[MZI 3.7 V6\]](#).)

2 Dynamic chamber

(See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

3	Air hose (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
4	Throttle body (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See THROTTLE BODY INSPECTION [MZI 3.7 V6] .)
5	Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
6	Air cleaner (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See AIR CLEANER ELEMENT INSPECTION [MZI 3.7 V6] .)
7	Fresh-air duct (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6] .)


[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Engine

INTAKE-AIR SYSTEM LOCATION INDEX [MZI 3.7 V6]

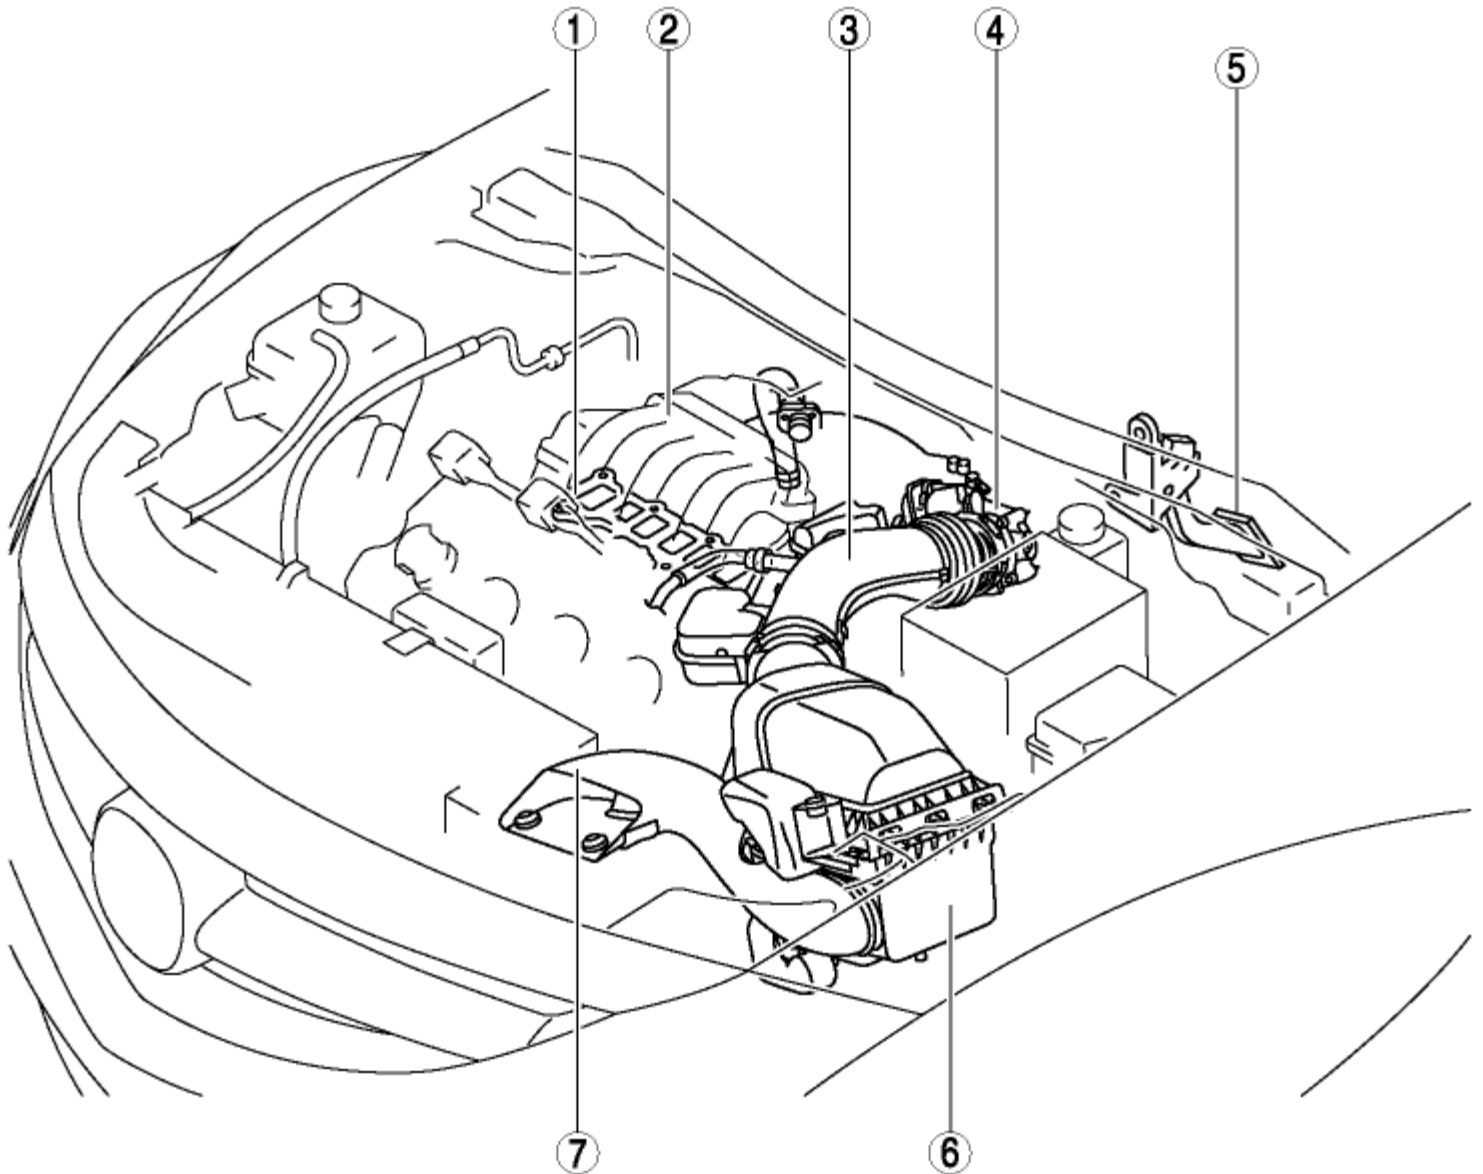

1 Intake manifold

(See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

(See [INTAKE MANIFOLD VACUUM INSPECTION \[MZI 3.7 V6\]](#).)

2 Dynamic chamber

(See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

3	Air hose (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
4	Throttle body (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See THROTTLE BODY INSPECTION [MZI 3.7 V6] .)
5	Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
6	Air cleaner (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See AIR CLEANER ELEMENT INSPECTION [MZI 3.7 V6] .)
7	Fresh-air duct (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6] .)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.