


2012 - Mazda6 - Engine

FUEL SYSTEM LOCATION INDEX [MZI 3.7 V6]

Engine Compartment Side

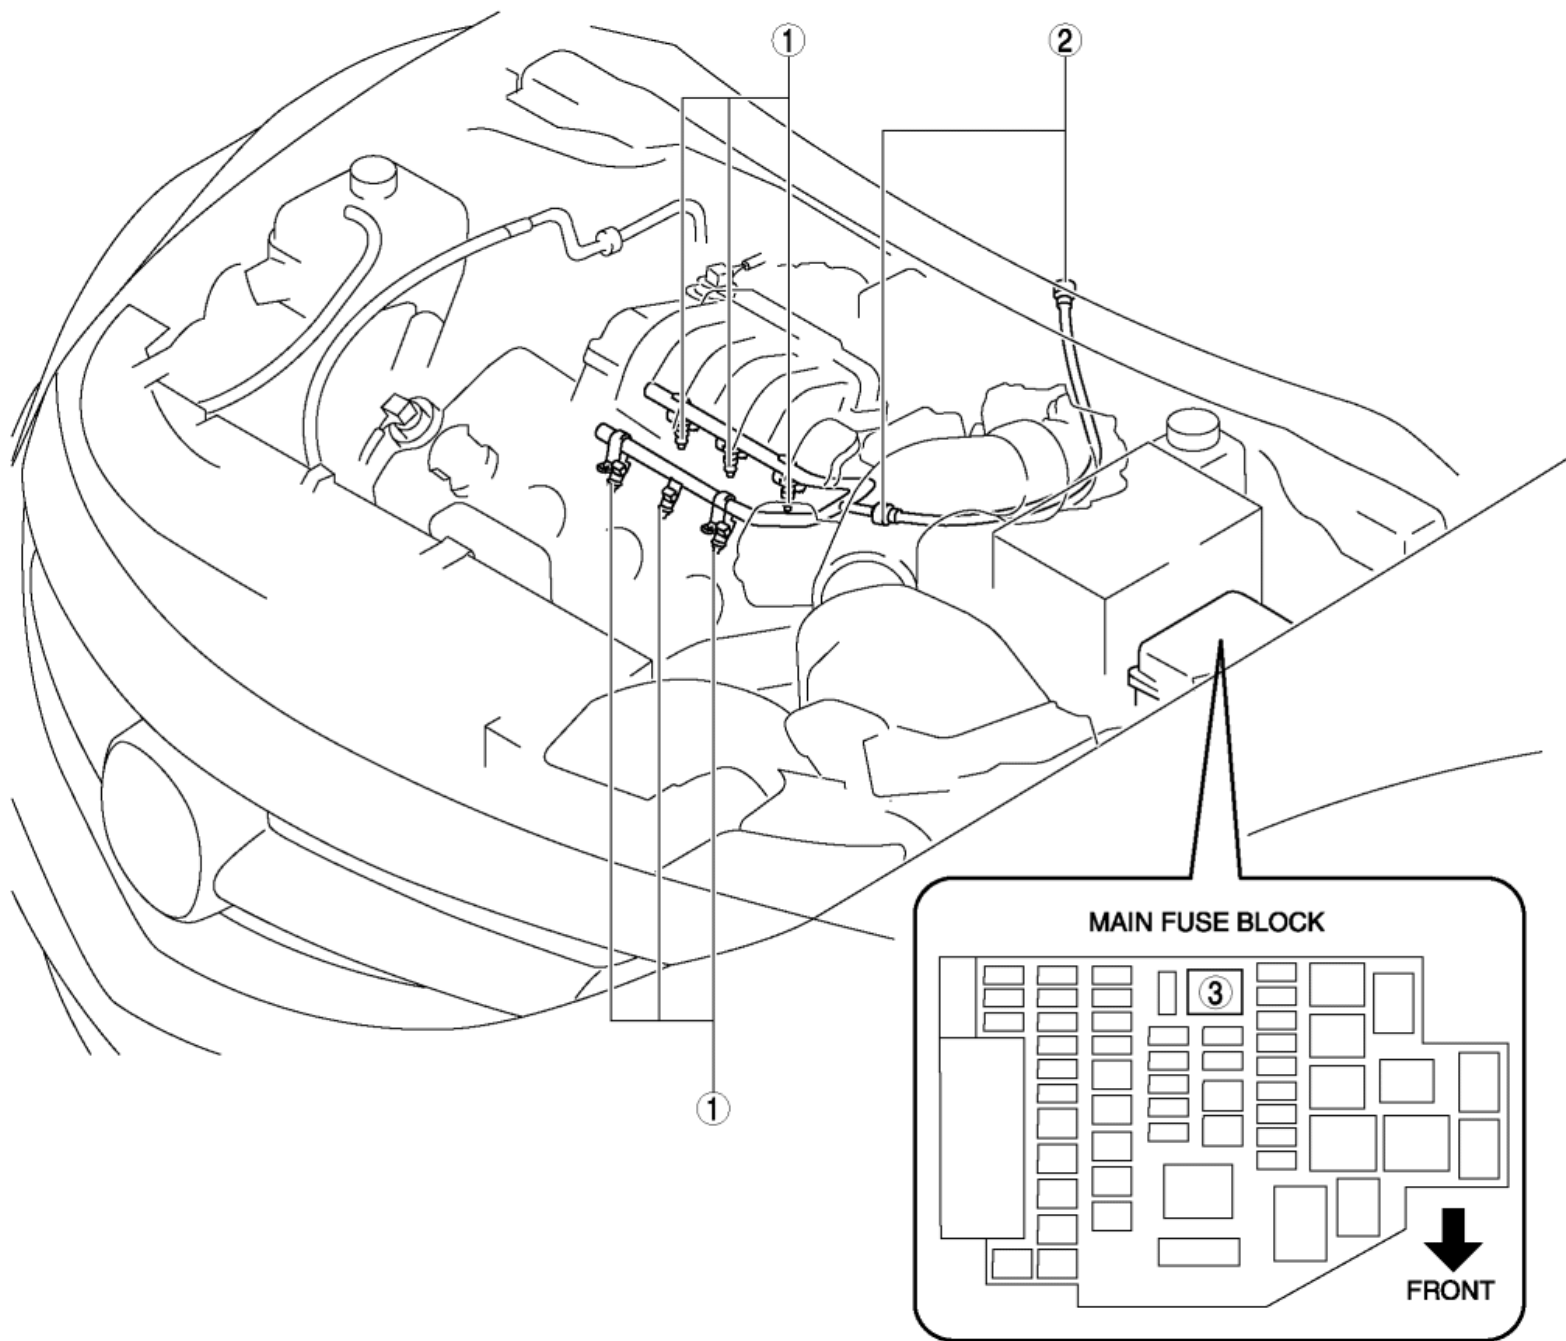


1 Fuel injector

(See [FUEL INJECTOR REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

(See [FUEL INJECTOR INSPECTION \[MZI 3.7 V6\]](#).)

2	Quick release connector
	(See QUICK RELEASE CONNECTOR REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
3	Fuel pump relay
	(See RELAY INSPECTION .)

Fuel Tank Side

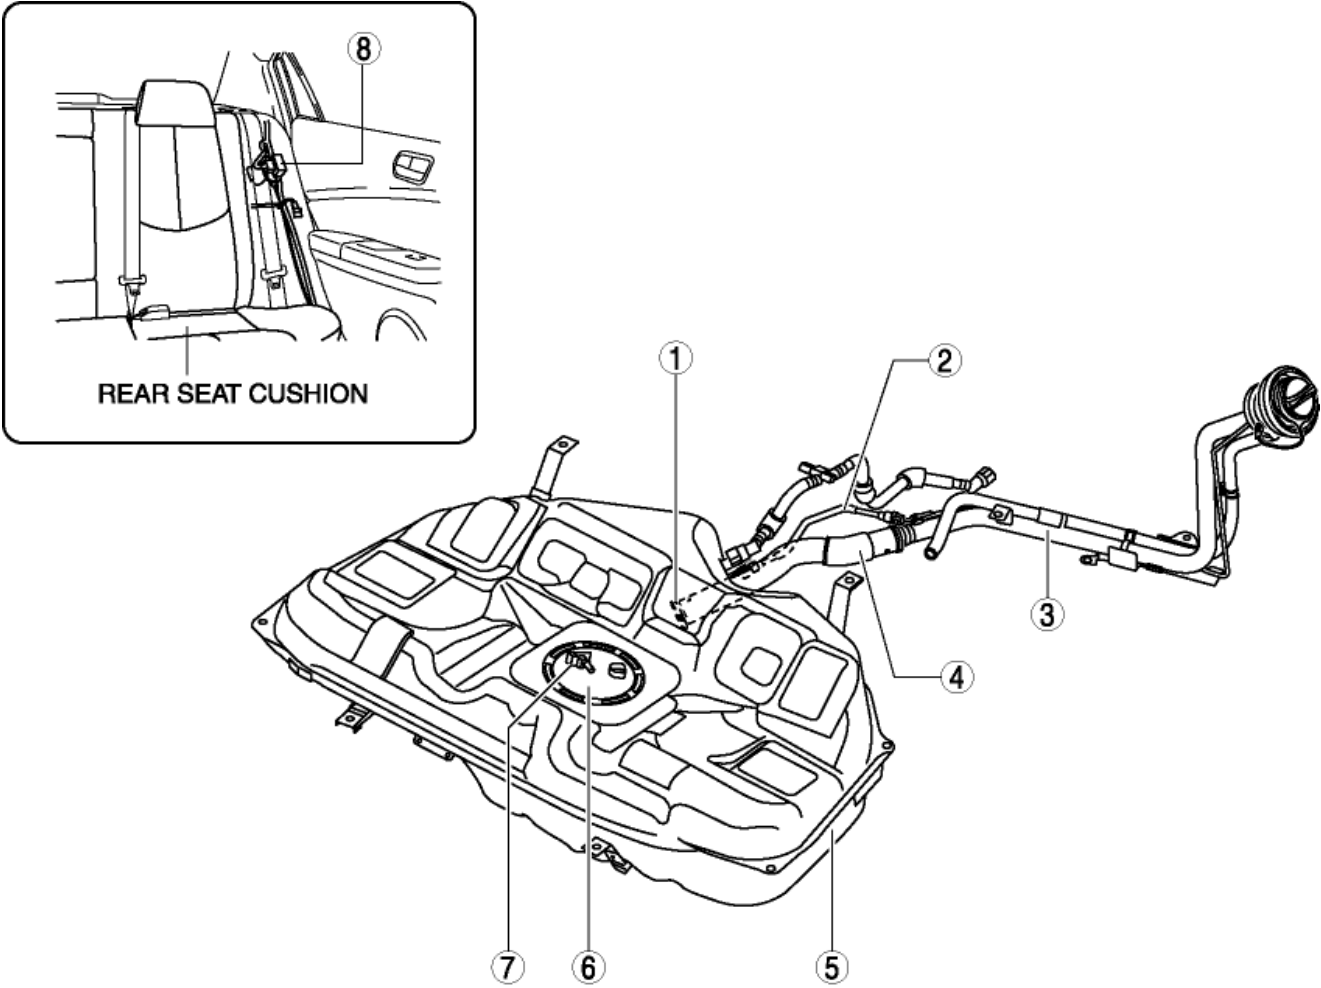

1	Non-return valve
	(See NON-RETURN VALVE INSPECTION [MZI 3.7 V6] .)
2	Breather hose
	(See FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
3	Fuel-filler pipe
	(See FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
4	Joint hose
	(See FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
5	Fuel tank


	(See FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See FUEL TANK INSPECTION [MZI 3.7 V6] .)
6	Fuel pump unit (See FUEL PUMP UNIT REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See FUEL PUMP UNIT DI SASSEMBLY/ ASSEMBLY [MZI 3.7 V6] .) (See FUEL PUMP UNIT INSPECTION [MZI 3.7 V6] .)
7	Quick release connector (See QUICK RELEASE CONNECTOR REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
8	Electronic fuel pump relay (See ELECTRONIC FUEL PUMP RELAY REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See RELAY INSPECTION .)

[< Previous](#) [Next >](#)

2012 - Mazda6 - Engine

FUEL SYSTEM LOCATION INDEX [MZI 3.7 V6]

Engine Compartment Side

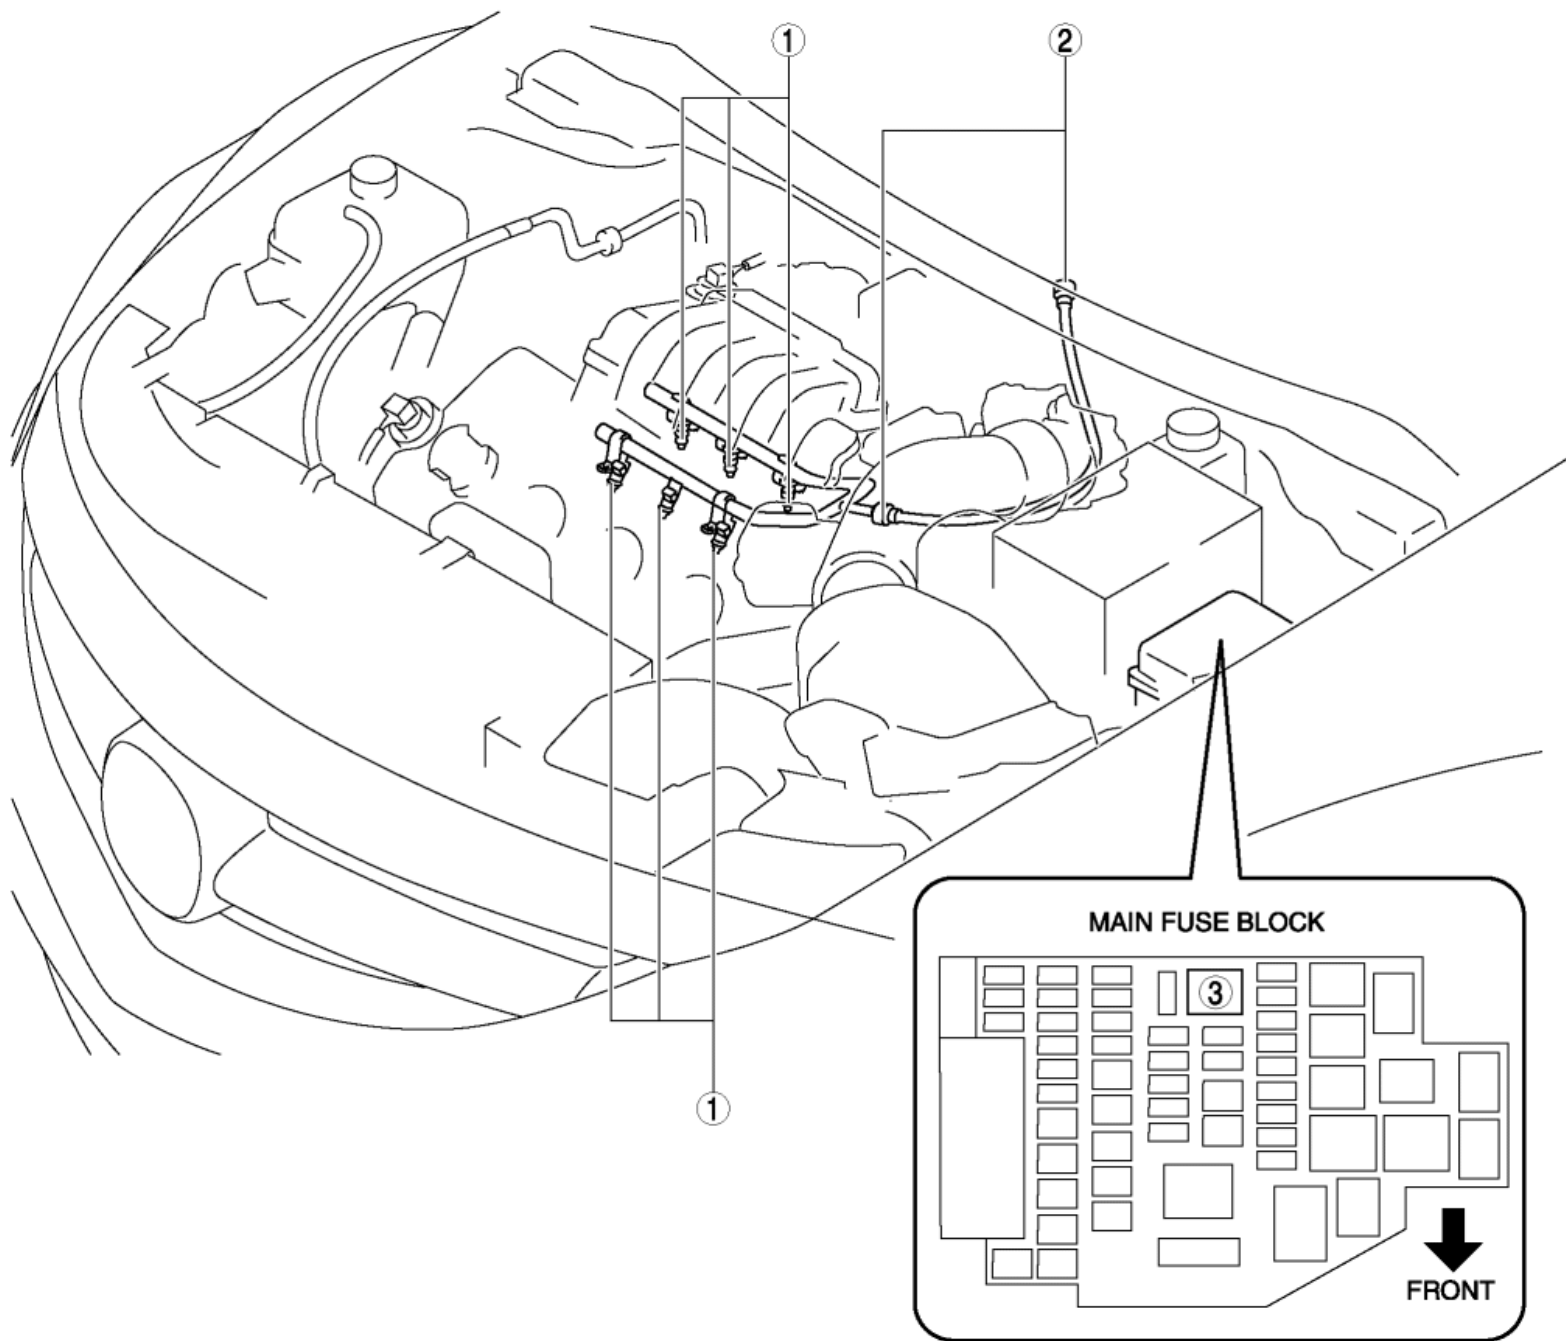


1 Fuel injector

(See [FUEL INJECTOR REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

(See [FUEL INJECTOR INSPECTION \[MZI 3.7 V6\]](#).)

2	Quick release connector
	(See QUICK RELEASE CONNECTOR REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
3	Fuel pump relay
	(See RELAY INSPECTION .)

Fuel Tank Side

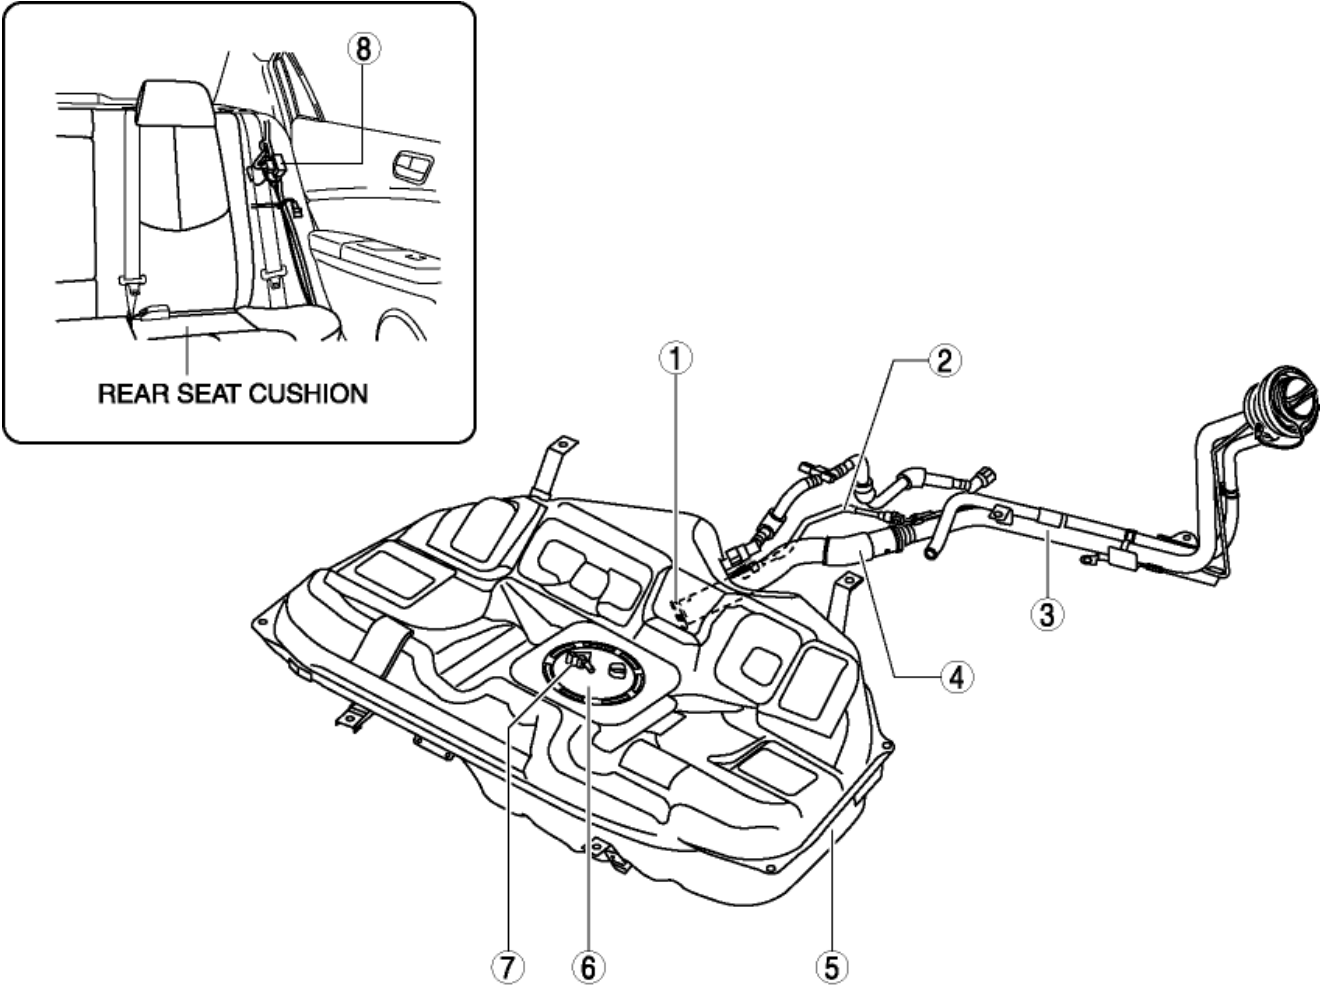

1	Non-return valve
	(See NON-RETURN VALVE INSPECTION [MZI 3.7 V6] .)
2	Breather hose
	(See FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
3	Fuel-filler pipe
	(See FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
4	Joint hose
	(See FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
5	Fuel tank

	(See FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See FUEL TANK INSPECTION [MZI 3.7 V6] .)
6	Fuel pump unit (See FUEL PUMP UNIT REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See FUEL PUMP UNIT DI SASSEMBLY/ ASSEMBLY [MZI 3.7 V6] .) (See FUEL PUMP UNIT INSPECTION [MZI 3.7 V6] .)
7	Quick release connector (See QUICK RELEASE CONNECTOR REMOVAL/ INSTALLATION [MZI 3.7 V6] .)
8	Electronic fuel pump relay (See ELECTRONIC FUEL PUMP RELAY REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See RELAY INSPECTION .)

[< Previous](#) [Next >](#)