

2012 - Mazda6 - Engine

FUEL PUMP UNIT INSPECTION [MZI 3.7 V6]

Continuity Inspection

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
2. Disconnect the fuel pump unit connector.
3. Inspect for continuity between fuel pump unit connector terminals B and D.

FUEL PUMP UNIT PUMP SIDE CONNECTOR



- If there is no continuity, replace the fuel pump unit. (See [FUEL PUMP UNIT REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)

2012 - Mazda6 - Engine

FUEL PUMP UNIT INSPECTION [MZI 3.7 V6]

Continuity Inspection

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
2. Disconnect the fuel pump unit connector.
3. Inspect for continuity between fuel pump unit connector terminals B and D.

FUEL PUMP UNIT PUMP SIDE CONNECTOR



- If there is no continuity, replace the fuel pump unit. (See [FUEL PUMP UNIT REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)