


2012 - Mazda6 - Engine

ELECTRONIC FUEL PUMP RELAY REMOVAL/ INSTALLATION [MZI 3.7 V6]

1. Complete the "BEFORE SERVICE PRECAUTION". (See [BEFORE SERVICE PRECAUTION \[MZI 3.7 V6\]](#).)
2. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
3. Remove the rear side seat back. (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION](#).)
4. Disconnect the electronic fuel pump relay connector.
5. Remove the electronic fuel pump relay.

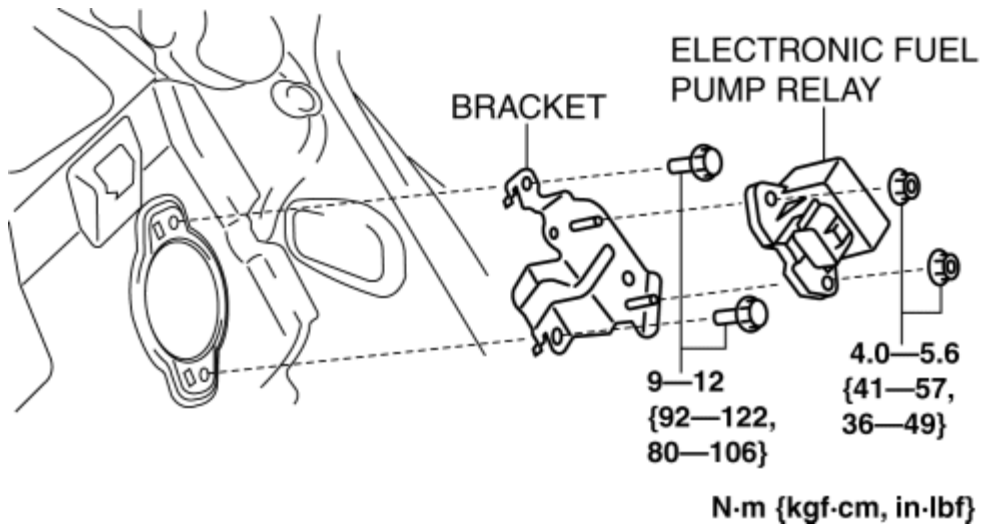


6. Install in the reverse order of removal.
7. Complete the "AFTER SERVICE PRECAUTION". (See [AFTER SERVICE PRECAUTION \[MZI 3.7 V6\]](#).)

2012 - Mazda6 - Engine

ELECTRONIC FUEL PUMP RELAY REMOVAL/ INSTALLATION [MZI 3.7 V6]

1. Complete the "BEFORE SERVICE PRECAUTION". (See [BEFORE SERVICE PRECAUTION \[MZI 3.7 V6\]](#).)
2. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
3. Remove the rear side seat back. (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION](#).)
4. Disconnect the electronic fuel pump relay connector.
5. Remove the electronic fuel pump relay.

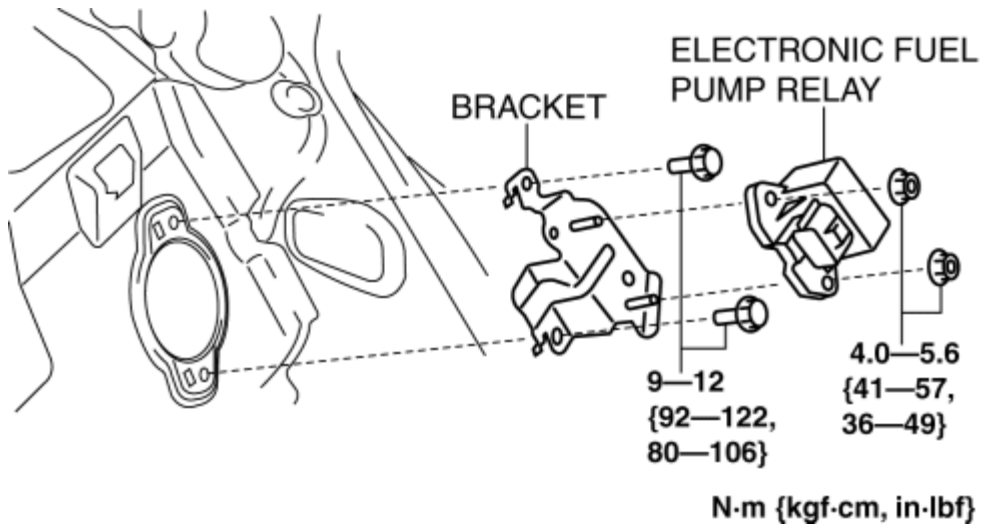

6. Install in the reverse order of removal.
7. Complete the "AFTER SERVICE PRECAUTION". (See [AFTER SERVICE PRECAUTION \[MZI 3.7 V6\]](#).)