


2012 - Mazda6 - Engine

FUEL INJECTOR INSPECTION [MZR 2.5]

Resistance Inspection

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Disconnect the fuel injector connector.
3. Inspect the resistance between fuel injector terminals A and B.

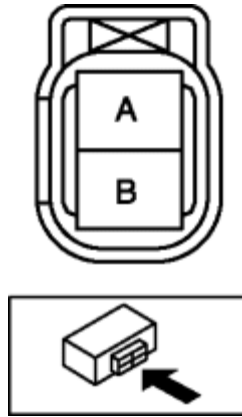

Fuel injector resistance


- 11.4—12.6 ohms [20 °C {68 °F}]
- If not within the specification, replace the fuel injector. (See [FUEL INJECTOR REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

2012 - Mazda6 - Engine

FUEL INJECTOR INSPECTION [MZR 2.5]

Resistance Inspection

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Disconnect the fuel injector connector.
3. Inspect the resistance between fuel injector terminals A and B.

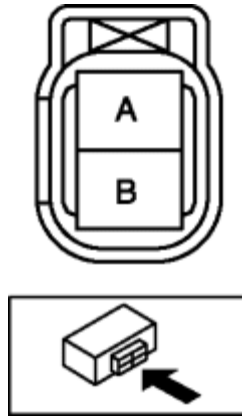

Fuel injector resistance

- 11.4—12.6 ohms [20 °C {68 °F}]
- If not within the specification, replace the fuel injector. (See [FUEL INJECTOR REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)