



2012 - Mazda6 - Engine

FUEL PUMP UNIT DISASSEMBLY/ ASSEMBLY [MZR 2.5]

1. Remove the fuel pump unit. (See [FUEL PUMP UNIT REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Disassemble in the order indicated in the table.
3. Assemble in the reverse order of disassembly.

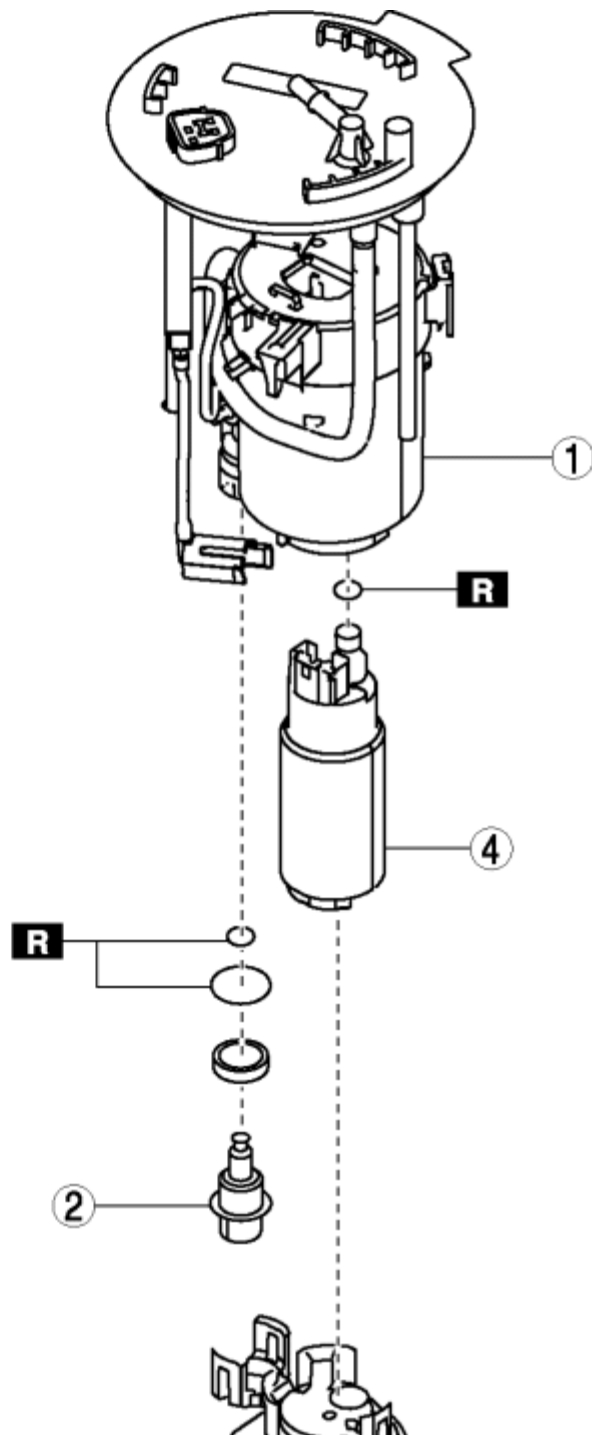

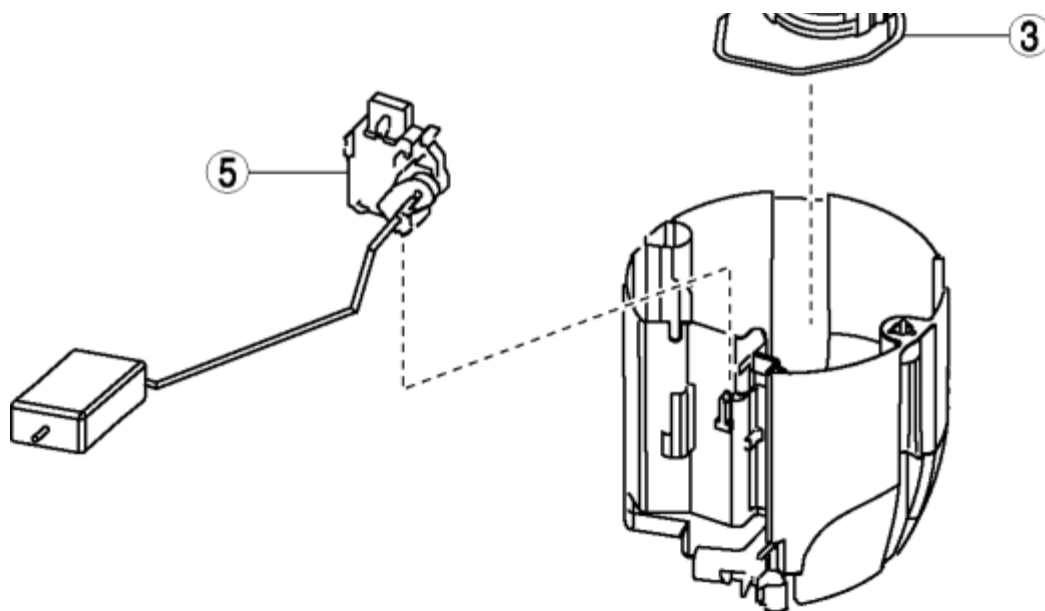

1	Fuel filter (high-pressure)
2	Pressure regulator
3	Fuel filter (low-pressure)
4	Fuel pump
5	Fuel gauge sender unit

[< Previous](#) [Next >](#)


[Back to Top](#)


© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Engine

FUEL PUMP UNIT DISASSEMBLY/ ASSEMBLY [MZR 2.5]

1. Remove the fuel pump unit. (See [FUEL PUMP UNIT REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Disassemble in the order indicated in the table.
3. Assemble in the reverse order of disassembly.

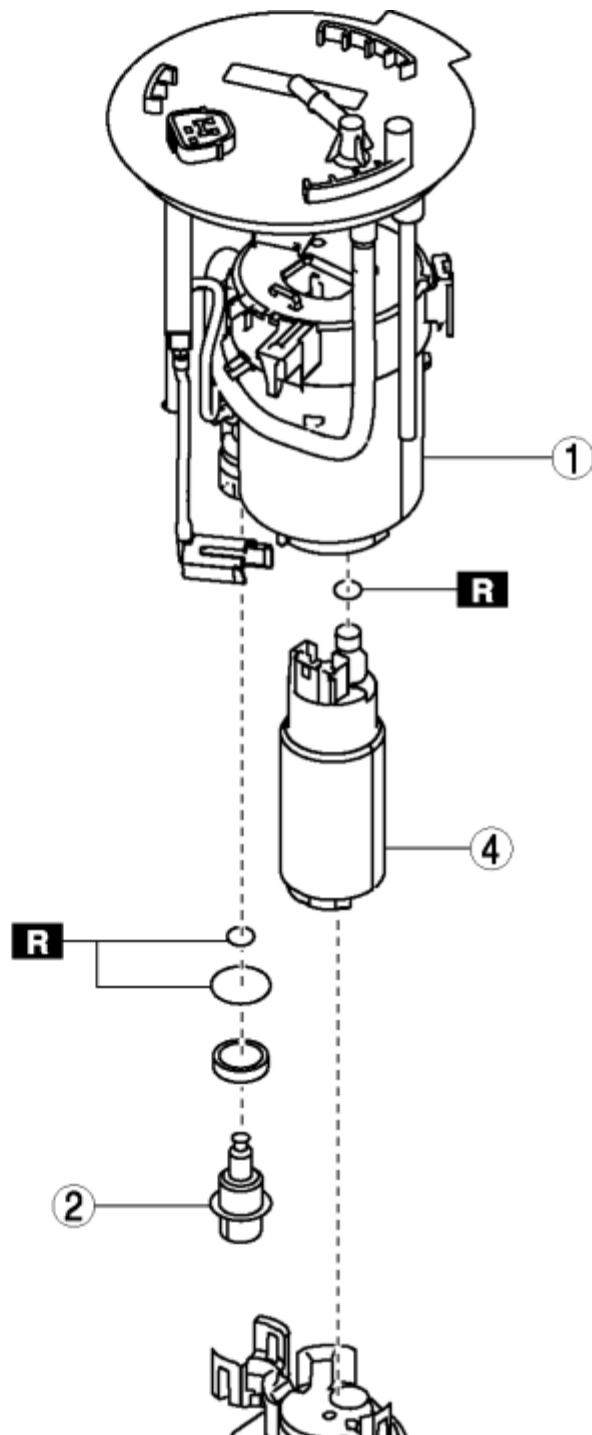

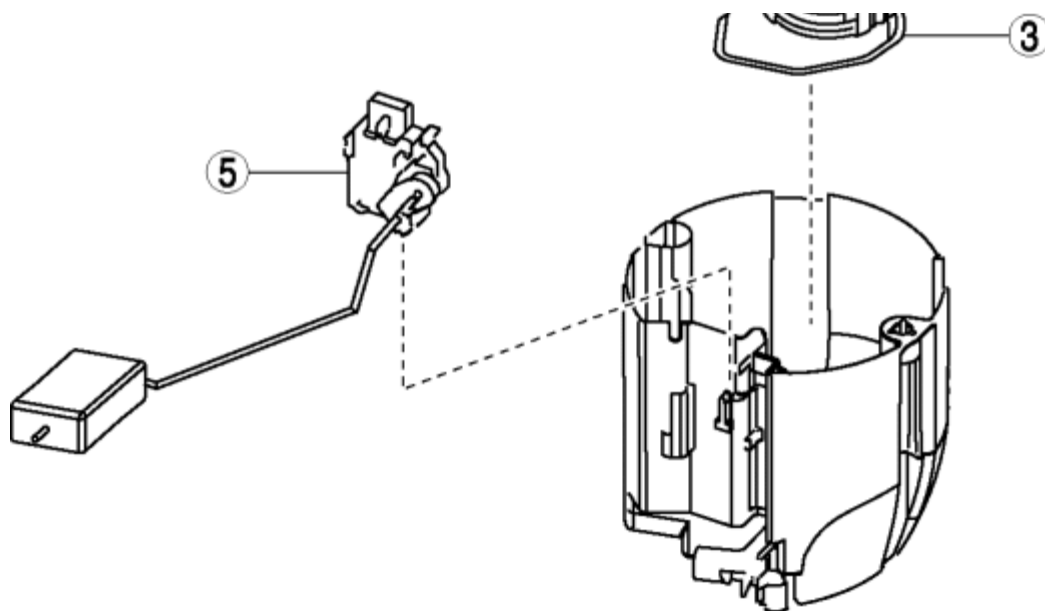

1	Fuel filter (high-pressure)
2	Pressure regulator
3	Fuel filter (low-pressure)
4	Fuel pump
5	Fuel gauge sender unit

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.