

## 2012 - Mazda6 - Engine

### FUEL PUMP UNIT INSPECTION [MZR 2.5]

#### Continuity Inspection

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Disconnect the fuel pump unit connector.
3. Inspect for continuity between fuel pump unit terminals B—D.

#### FUEL PUMP UNIT PUMP SIDE CONNECTOR



- If there is no continuity, replace the fuel pump. (See [FUEL PUMP UNIT REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

## 2012 - Mazda6 - Engine

### FUEL PUMP UNIT INSPECTION [MZR 2.5]

#### Continuity Inspection

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Disconnect the fuel pump unit connector.
3. Inspect for continuity between fuel pump unit terminals B—D.

#### FUEL PUMP UNIT PUMP SIDE CONNECTOR



- If there is no continuity, replace the fuel pump. (See [FUEL PUMP UNIT REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)