

2012 - Mazda6 - Engine


BEFORE SERVICE PRECAUTION [MZR 2.5]

WARNING:

- Fuel vapor is hazardous. It can very easily ignite, causing serious injury and damage. Always keep sparks and flames away from fuel.
- Fuel line spills and leakage from the pressurized fuel system are dangerous. Fuel can ignite and cause serious injury or death and damage. Fuel can also irritate skin and eyes. To prevent this, always complete the "Fuel Line Safety Procedure".
- A person charged with static electricity could cause a fire or explosion, resulting in death or serious injury. Before performing work on the fuel system, discharge static electricity by touching the vehicle body.

Fuel Line Safety Procedure

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Remove the fuel-filler cap to release the pressure inside the fuel tank.
3. Remove the fuse (FUEL PUMP 25A).

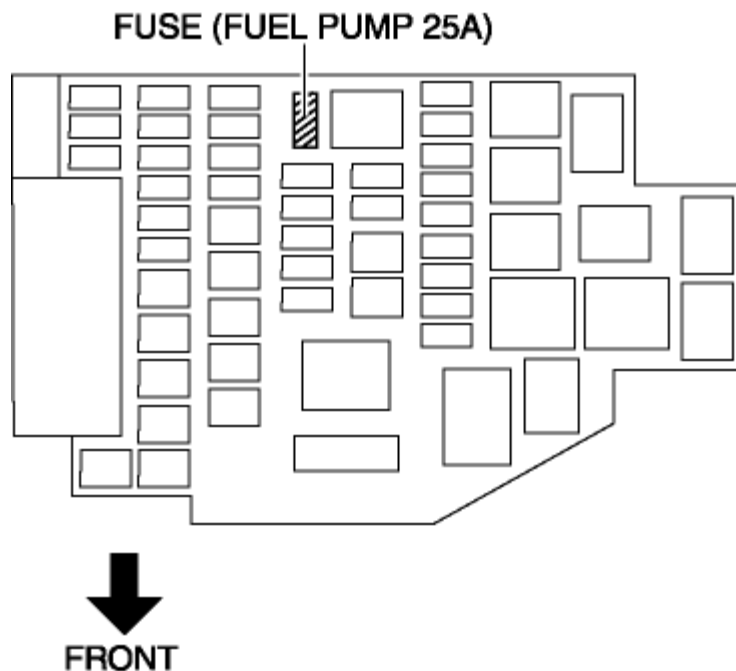

4. Connect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
5. Start the engine.
6. After the engine stalls, crank the engine **2—3 times**.

7. Switch the ignition to off.
8. Disconnect the negative battery cable. (See **BATTERY REMOVAL/ INSTALLATION [MZR 2.5]**.)
9. Install the fuse (FUEL PUMP 25A).

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Engine


BEFORE SERVICE PRECAUTION [MZR 2.5]

WARNING:

- Fuel vapor is hazardous. It can very easily ignite, causing serious injury and damage. Always keep sparks and flames away from fuel.
- Fuel line spills and leakage from the pressurized fuel system are dangerous. Fuel can ignite and cause serious injury or death and damage. Fuel can also irritate skin and eyes. To prevent this, always complete the "Fuel Line Safety Procedure".
- A person charged with static electricity could cause a fire or explosion, resulting in death or serious injury. Before performing work on the fuel system, discharge static electricity by touching the vehicle body.

Fuel Line Safety Procedure

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Remove the fuel-filler cap to release the pressure inside the fuel tank.
3. Remove the fuse (FUEL PUMP 25A).

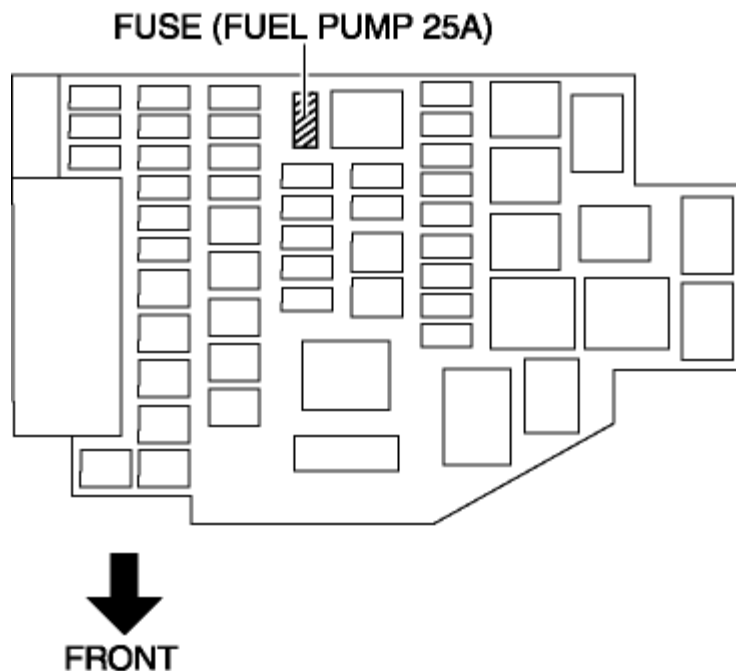

4. Connect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
5. Start the engine.
6. After the engine stalls, crank the engine **2—3 times**.

7. Switch the ignition to off.
8. Disconnect the negative battery cable. (See **BATTERY REMOVAL/ INSTALLATION [MZR 2.5]**.)
9. Install the fuse (FUEL PUMP 25A).

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.