


2012 - Mazda6 - Engine

PURGE SOLENOID VALVE INSPECTION [MZI 3.7 V6]

Airflow Inspection

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
- 2. Remove the purge solenoid valve. (See [PURGE SOLENOID VALVE REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
- 3. Verify that the airflow is as indicated in the table.

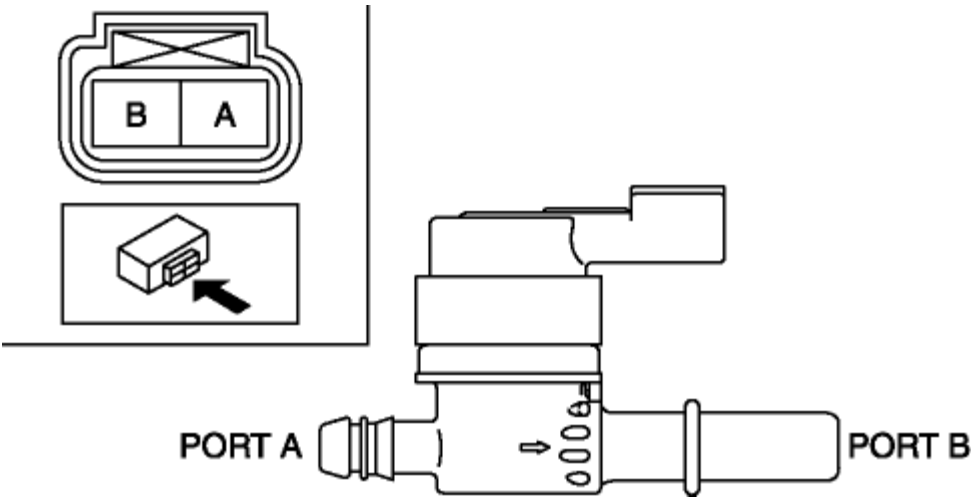

Measured condition	Continuity between A—B
When voltage is not applied between terminals A and B	No airflow
When voltage is applied between terminals A and B	Airflow detected


- If not as specified in the table, inspect the purge solenoid valve. (See [PURGE SOLENOID VALVE REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)

2012 - Mazda6 - Engine

PURGE SOLENOID VALVE INSPECTION [MZI 3.7 V6]

Airflow Inspection

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
- 2. Remove the purge solenoid valve. (See [PURGE SOLENOID VALVE REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
- 3. Verify that the airflow is as indicated in the table.

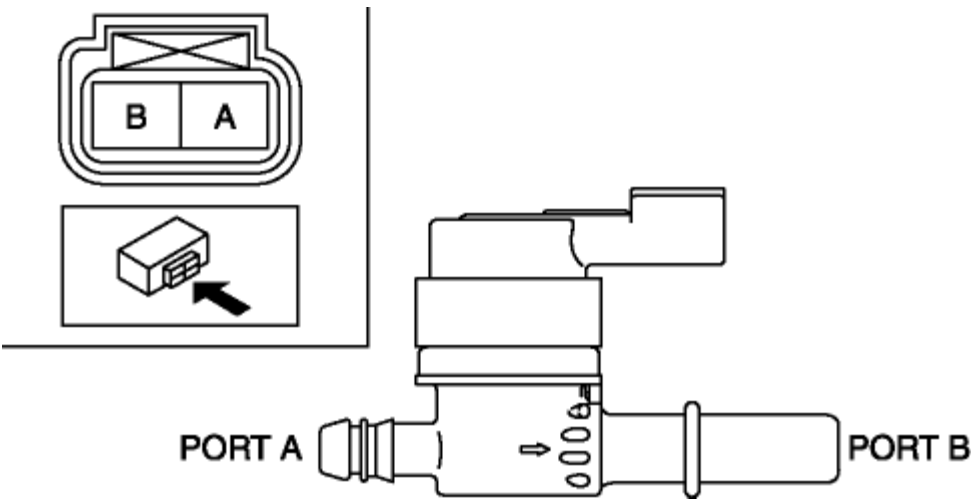

Measured condition	Continuity between A—B
When voltage is not applied between terminals A and B	No airflow
When voltage is applied between terminals A and B	Airflow detected

- If not as specified in the table, inspect the purge solenoid valve. (See [PURGE SOLENOID VALVE REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)