

[< Previous](#) [Next >](#)

2012 - Mazda6 - Engine

FUEL SHUT-OFF VALVE REMOVAL/ INSTALLATION [MZI 3.7 V6]

NOTE:

- The fuel shut-off valve cannot be removed as it is built into the fuel tank.
1. Remove the fuel tank. (See [FUEL TANK REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Engine

FUEL SHUT-OFF VALVE REMOVAL/ INSTALLATION [MZI 3.7 V6]

NOTE:

- The fuel shut-off valve cannot be removed as it is built into the fuel tank.
1. Remove the fuel tank. (See [FUEL TANK REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.