


2012 - Mazda6 - Engine

POSITIVE CRANKCASE VENTILATION (PCV) VALVE REMOVAL/ INSTALLATION [MZI 3.7 V6]

CAUTION:

- A new PCV valve must be installed if removed from the cylinder head cover.
 - Upon removal, damage will occur to the locking mechanism on the PCV valve.
1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
 2. Set the power steering fluid tank out of the way. (See [POWER STEERING OIL PUMP REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
 3. Remove in the order indicated in the table.

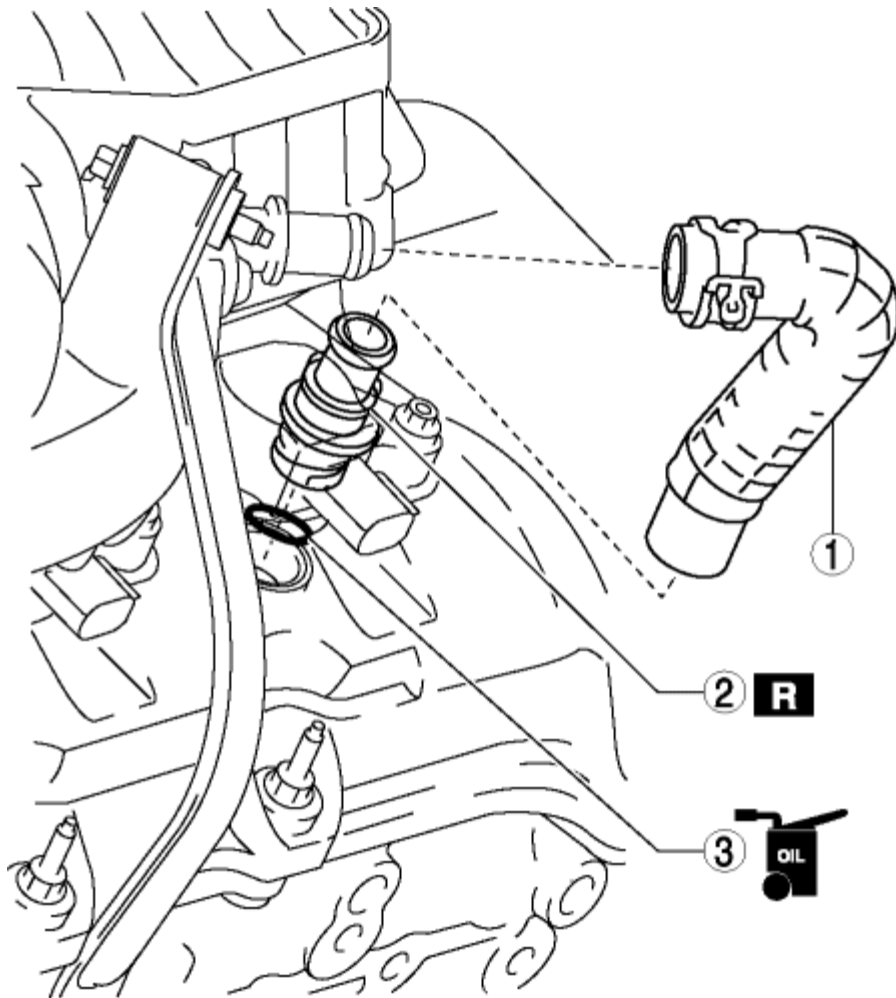

1PCV valve hose

2	PCV valve
3	O-ring

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)


© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Engine

POSITIVE CRANKCASE VENTILATION (PCV) VALVE REMOVAL/ INSTALLATION [MZI 3.7 V6]

CAUTION:

- A new PCV valve must be installed if removed from the cylinder head cover.
 - Upon removal, damage will occur to the locking mechanism on the PCV valve.
1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
 2. Set the power steering fluid tank out of the way. (See [POWER STEERING OIL PUMP REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
 3. Remove in the order indicated in the table.

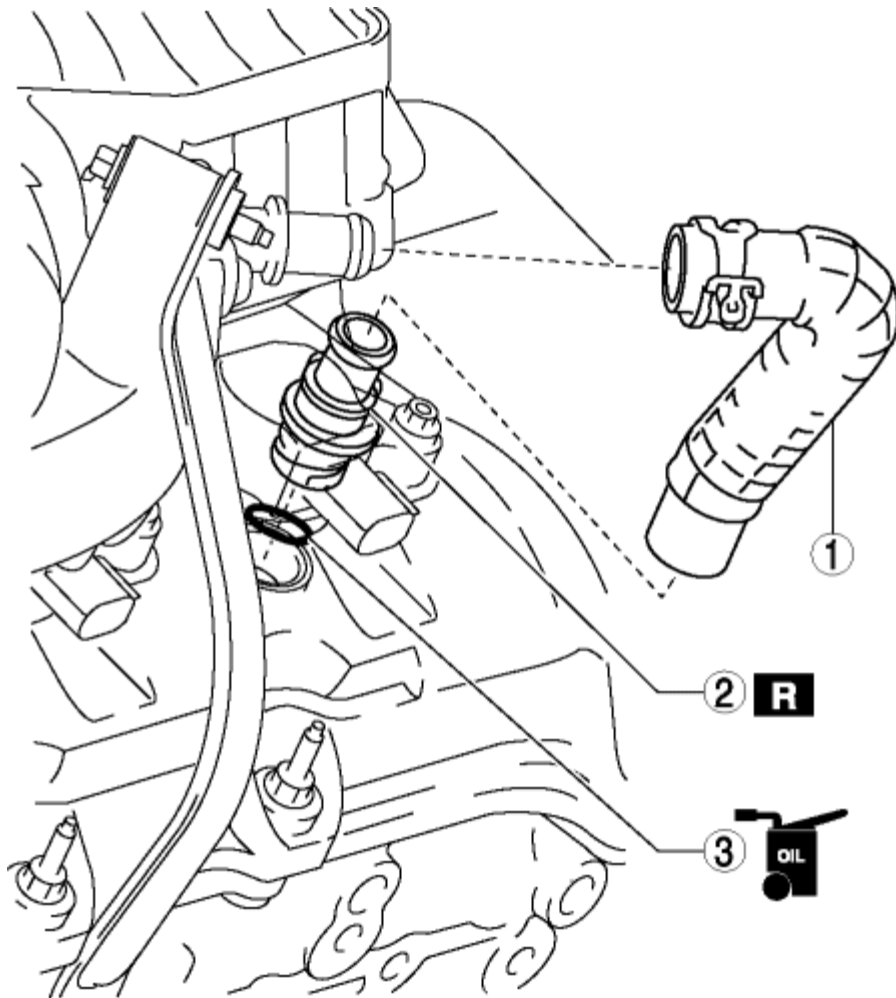

1PCV valve hose

2	PCV valve
3	O-ring

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.