


2012 - Mazda6 - Engine

CHARGING SYSTEM LOCATION INDEX [MZR 2.5]

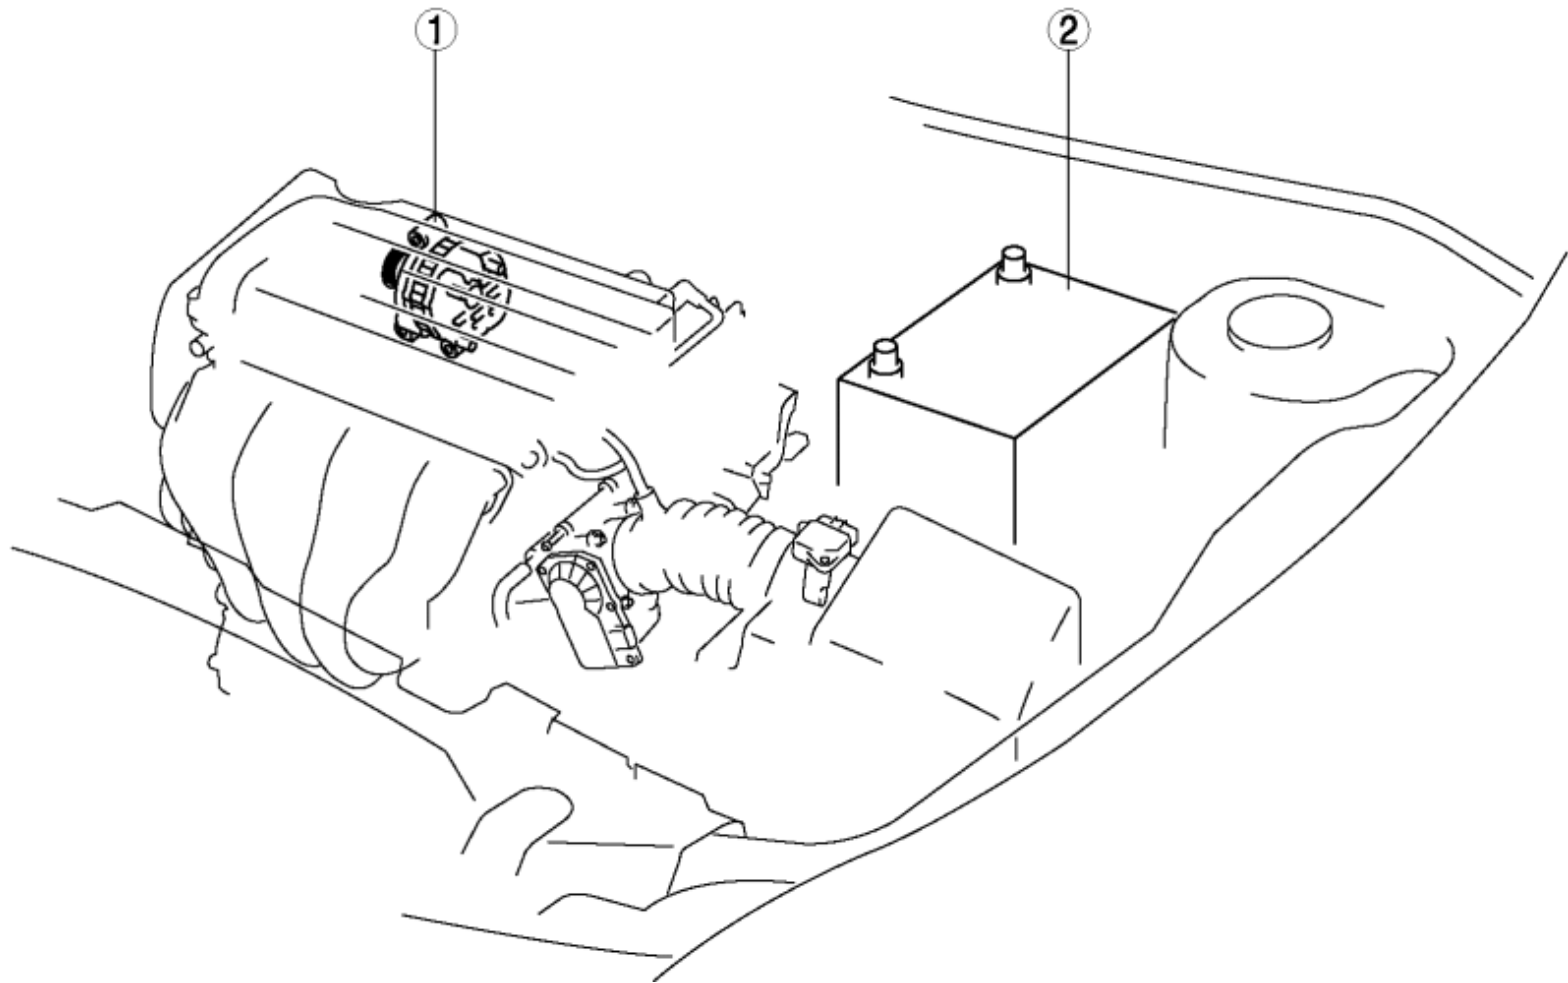

1 Generator

(See [GENERATOR REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

(See [GENERATOR INSPECTION \[MZR 2.5\]](#).)

(See [GENERATOR DI SASSEMBLY/ ASSEMBLY \[MZR 2.5\]](#).)

2 Battery


(See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

(See [BATTERY INSPECTION \[MZR 2.5\]](#).)

(See [BATTERY RECHARGING \[MZR 2.5\]](#).)

2012 - Mazda6 - Engine

CHARGING SYSTEM LOCATION INDEX [MZR 2.5]

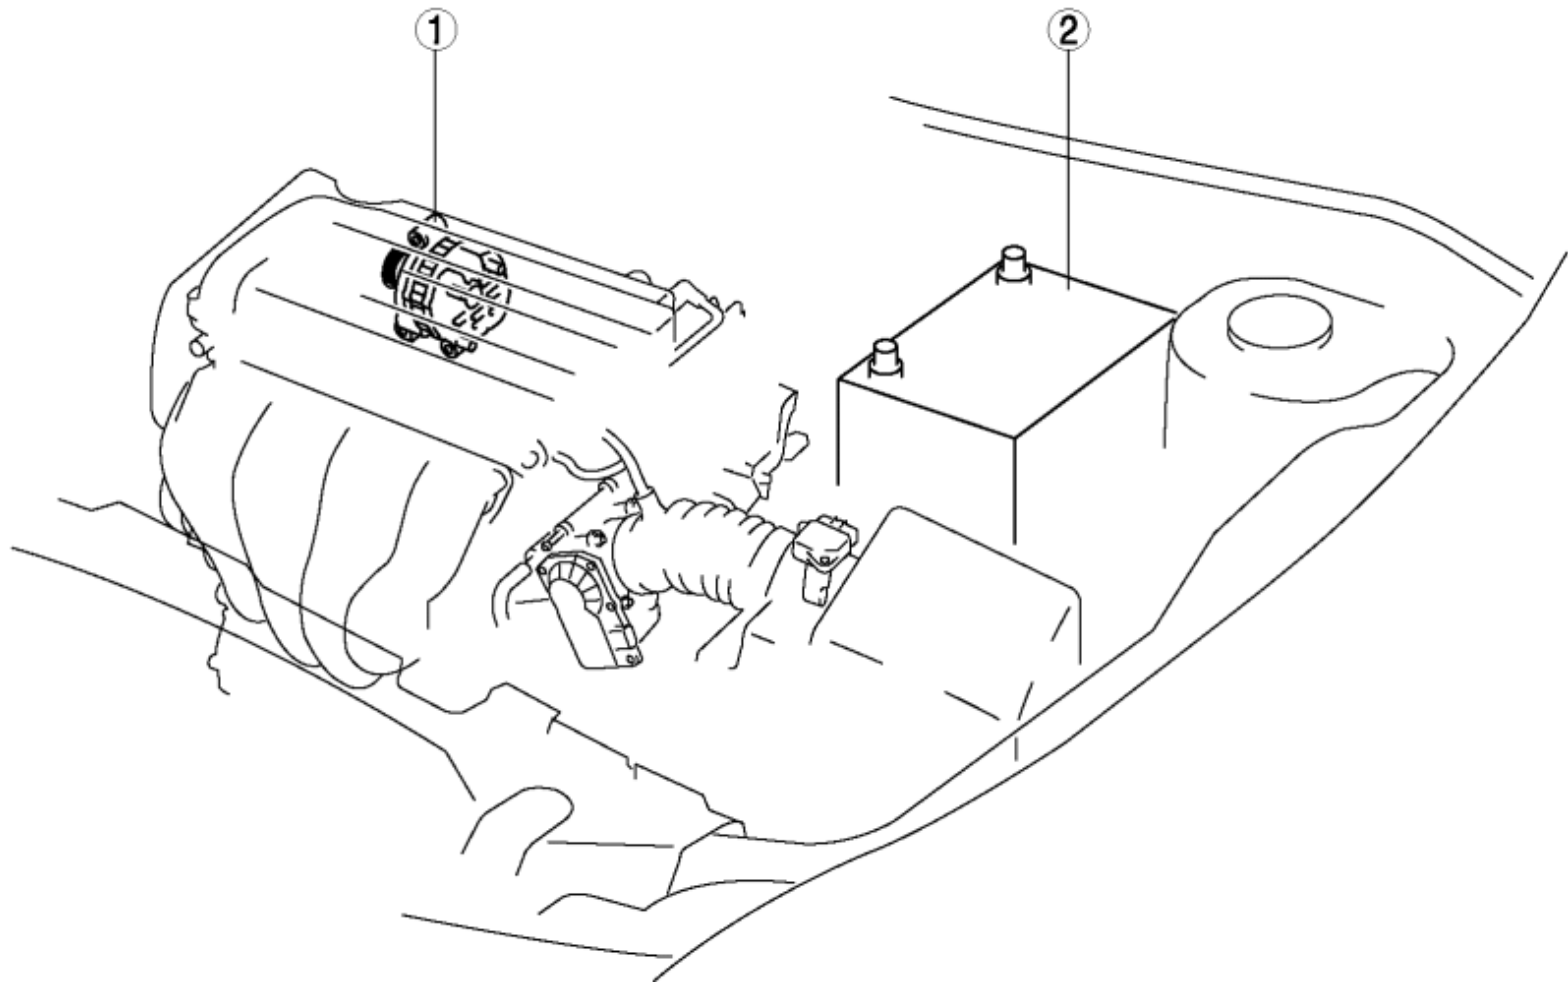

1 Generator

(See [GENERATOR REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

(See [GENERATOR INSPECTION \[MZR 2.5\]](#).)

(See [GENERATOR DI SASSEMBLY/ ASSEMBLY \[MZR 2.5\]](#).)

2 Battery

(See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

(See [BATTERY INSPECTION \[MZR 2.5\]](#).)

(See [BATTERY RECHARGING \[MZR 2.5\]](#).)

