


2012 - Mazda6 - Engine

BATTERY REMOVAL/ INSTALLATION [MZR 2.5]

- 1. Remove in the order indicated in the table.
- 2. Install in the reverse order of removal.

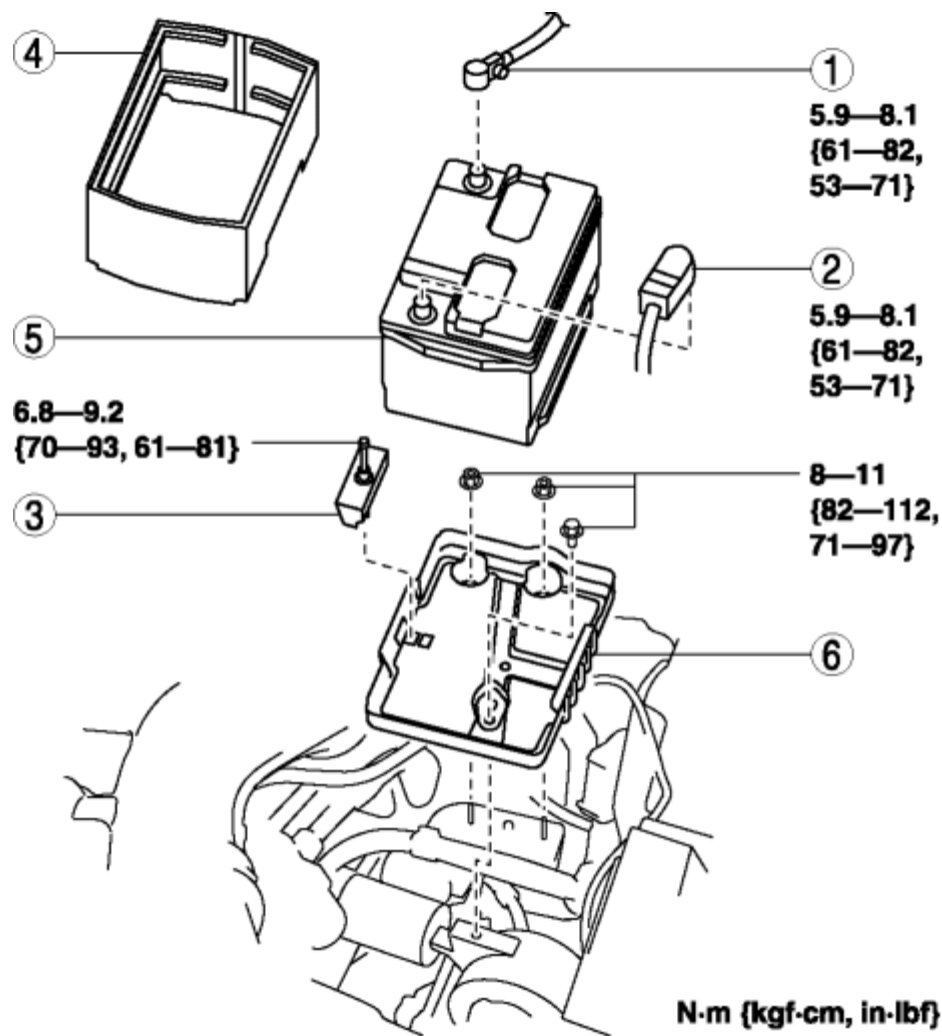


1	Negative battery cable
2	Positive battery cable
3	Battery clamp
	(See Battery Clamp Installation Note.)

4	Battery box
5	Battery
6	Battery tray

Battery Clamp Installation Note

1. Install the battery clamp with the lower bulge of the battery set against the battery tray tab.

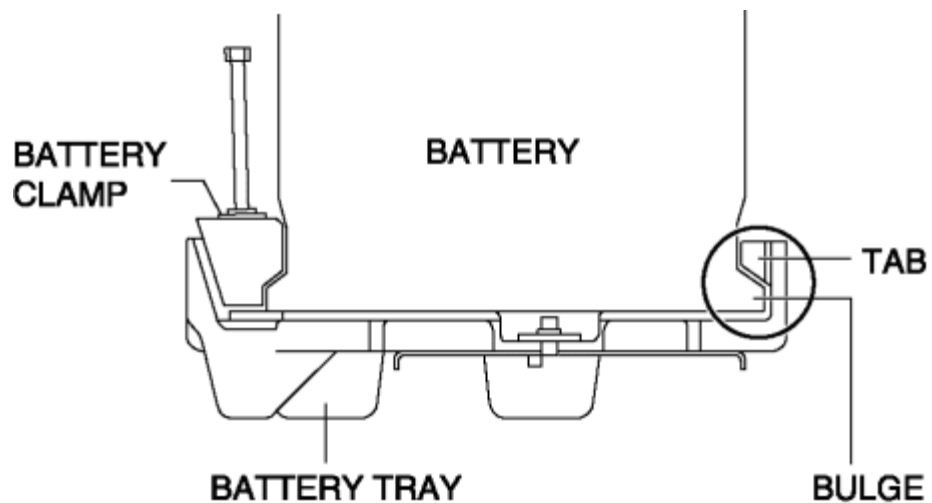

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Engine

BATTERY REMOVAL/ INSTALLATION [MZR 2.5]

- 1. Remove in the order indicated in the table.
- 2. Install in the reverse order of removal.

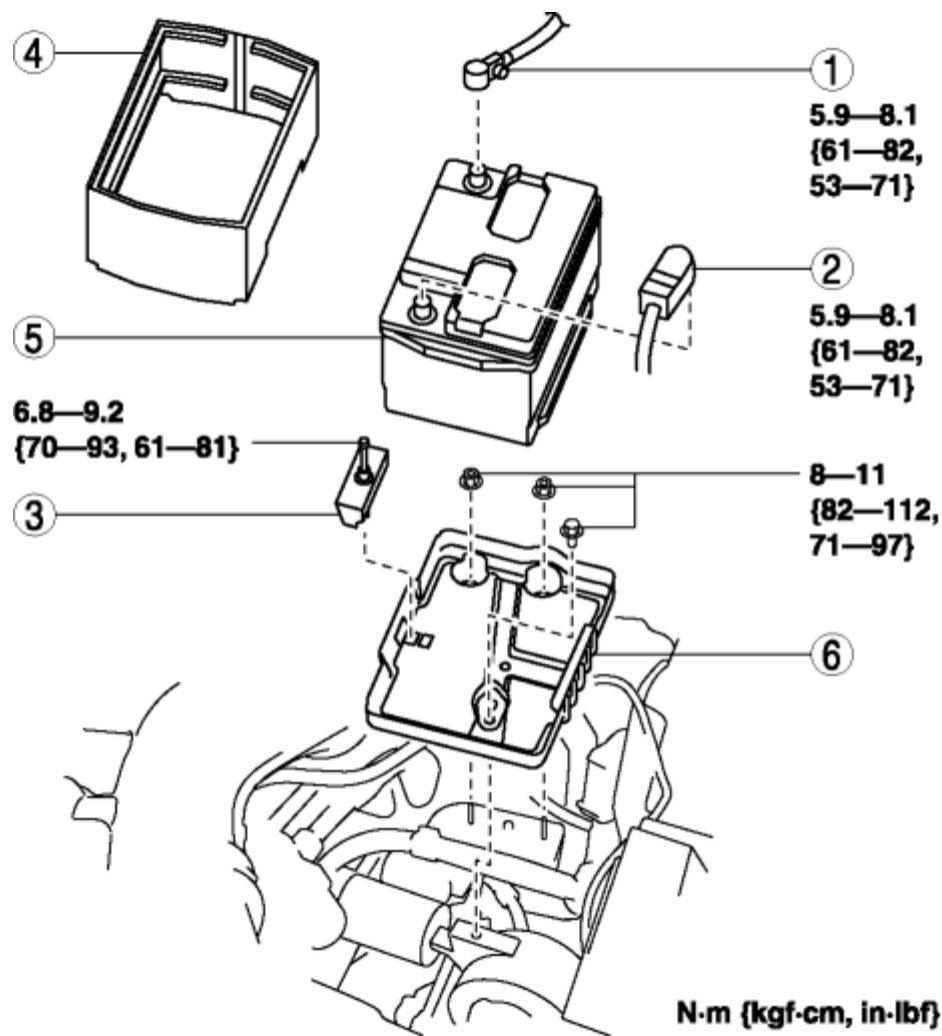


1	Negative battery cable
2	Positive battery cable
3	Battery clamp (See Battery Clamp Installation Note.)

4	Battery box
5	Battery
6	Battery tray

Battery Clamp Installation Note

1. Install the battery clamp with the lower bulge of the battery set against the battery tray tab.

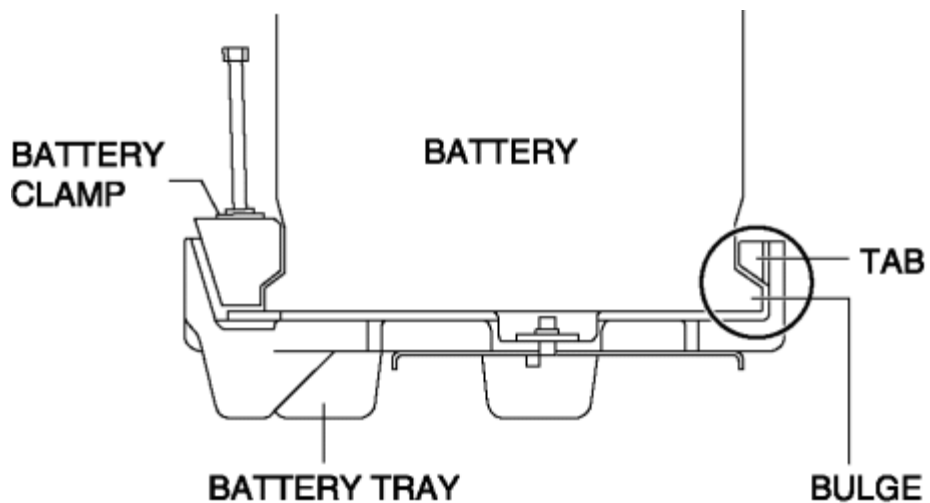

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.