


2012 - Mazda6 - Engine

IGNITION COIL REMOVAL/ INSTALLATION [MZR 2.5]

- 1. Disconnect the negative battery cable.
- 2. Remove the plug hole plate. (See [PLUG HOLE PLATE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 3. Remove in the order indicated in the table.
- 4. Install in the reverse order of removal.

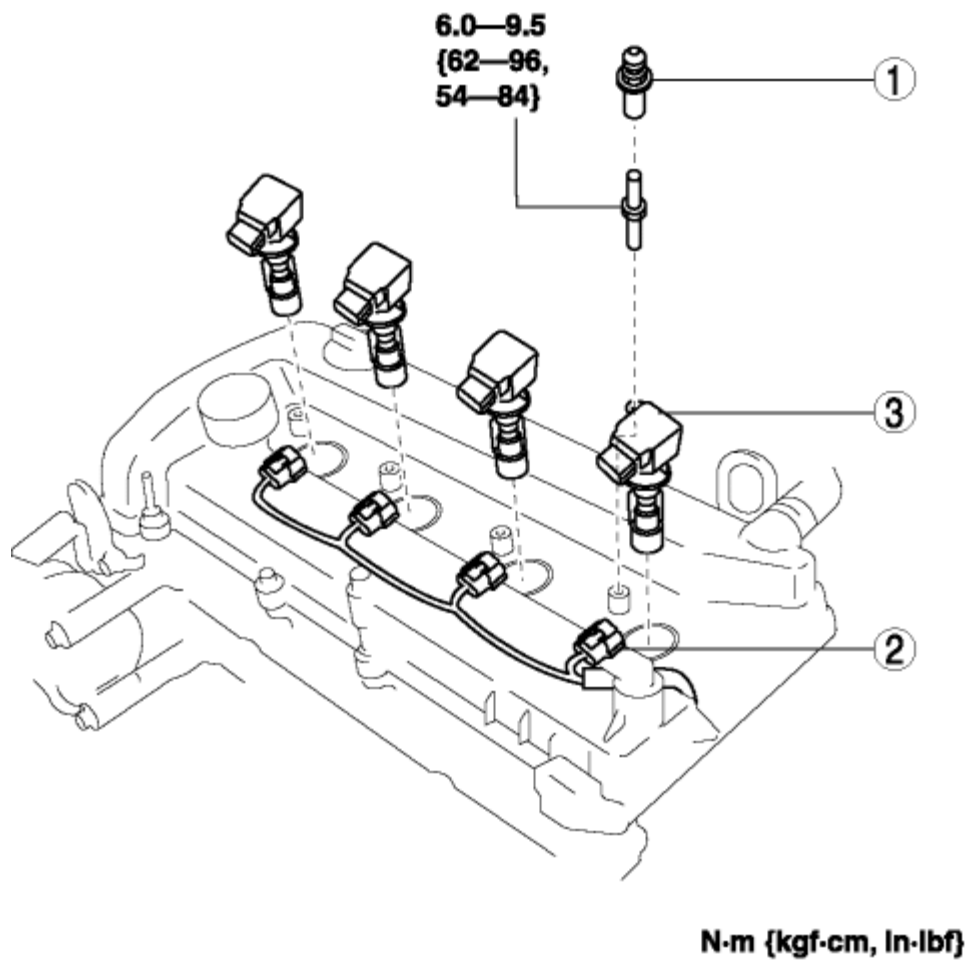


1	Plug hole plate bracket
2	Connector
3	Ignition coil

2012 - Mazda6 - Engine

IGNITION COIL REMOVAL/ INSTALLATION [MZR 2.5]

- 1. Disconnect the negative battery cable.
- 2. Remove the plug hole plate. (See [PLUG HOLE PLATE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 3. Remove in the order indicated in the table.
- 4. Install in the reverse order of removal.

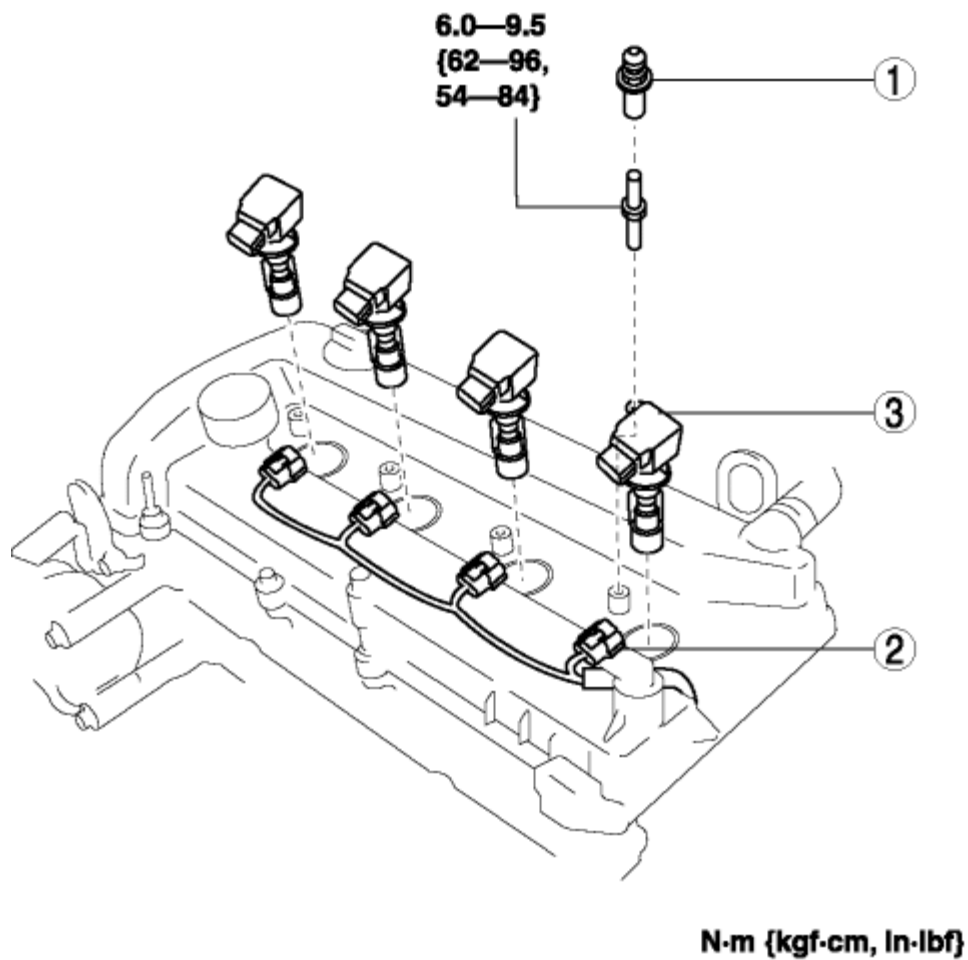

N·m {kgf·cm, In·lbf}

1	Plug hole plate bracket
2	Connector
3	Ignition coil

