


2012 - Mazda6 - Engine

IGNITION COIL INSPECTION [MZI 3.7 V6]

Secondary Coil Resistance Inspection

1. Remove the ignition coils. (See [IGNITION COIL REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
2. Using a tester, measure the resistance between the ignition coil terminal A and ignition coil boot socket.

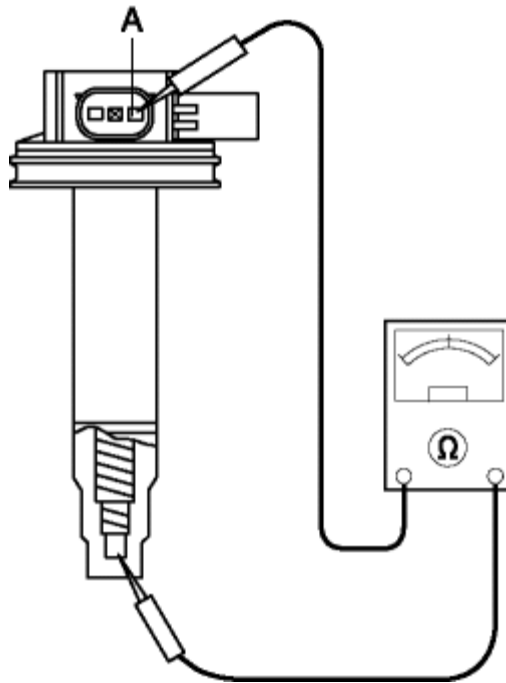

1. If not within specification, replace the ignition coil.

Ignition coil secondary coil resistance


- 5—6 kilohms

2012 - Mazda6 - Engine

IGNITION COIL INSPECTION [MZI 3.7 V6]

Secondary Coil Resistance Inspection

1. Remove the ignition coils. (See [IGNITION COIL REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
2. Using a tester, measure the resistance between the ignition coil terminal A and ignition coil boot socket.

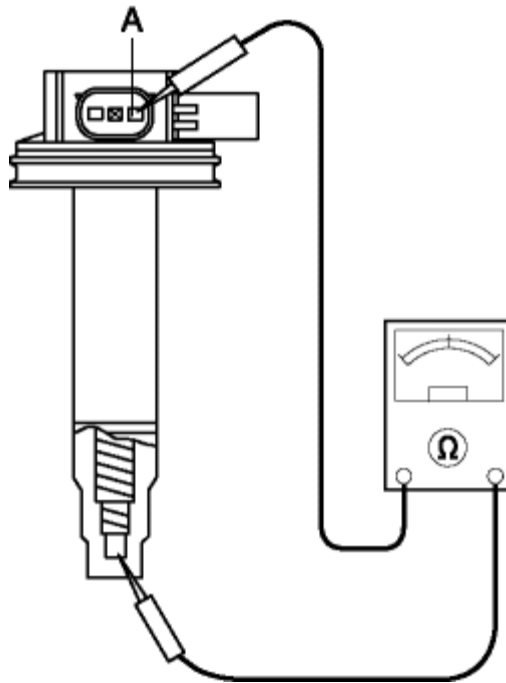

1. If not within specification, replace the ignition coil.

Ignition coil secondary coil resistance

- 5—6 kilohms