

2012 - Mazda6 - Engine

STARTER INTERLOCK SWITCH INSPECTION [MZR 2.5]

CAUTION:

1.

Do not reuse the starter interlock switch if it is removed from the vehicle even once.
Replace with a new starter interlock switch when installing.
1.


Disconnect the negative battery cable.
2.

Disconnect the starter interlock switch connector.
3.

Verify that the continuity is as indicated in the table using a tester.

○—○ : Continuity

Condition	Terminal	
	A	B
Clutch pedal is depressed	○—○	○—○
Clutch pedal is not depressed		

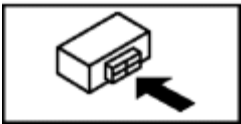

- If the continuity is not as indicated in the table, replace the starter interlock switch.

(See [CLUTCH PEDAL REMOVAL/ INSTALLATION \[G66M-R\]](#).)

2012 - Mazda6 - Engine

STARTER INTERLOCK SWITCH INSPECTION [MZR 2.5]

CAUTION:

1.

Do not reuse the starter interlock switch if it is removed from the vehicle even once.
Replace with a new starter interlock switch when installing.
1.


Disconnect the negative battery cable.
2.

Disconnect the starter interlock switch connector.
3.

Verify that the continuity is as indicated in the table using a tester.

○—○ : Continuity

Condition	Terminal	
	A	B
Clutch pedal is depressed	○—○	○—○
Clutch pedal is not depressed		

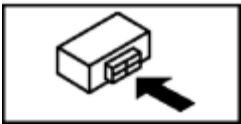

- If the continuity is not as indicated in the table, replace the starter interlock switch.

(See [CLUTCH PEDAL REMOVAL/ INSTALLATION \[G66M-R\]](#).)