


2012 - Mazda6 - Engine

STARTER DISASSEMBLY/ ASSEMBLY [MZR 2.5]

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

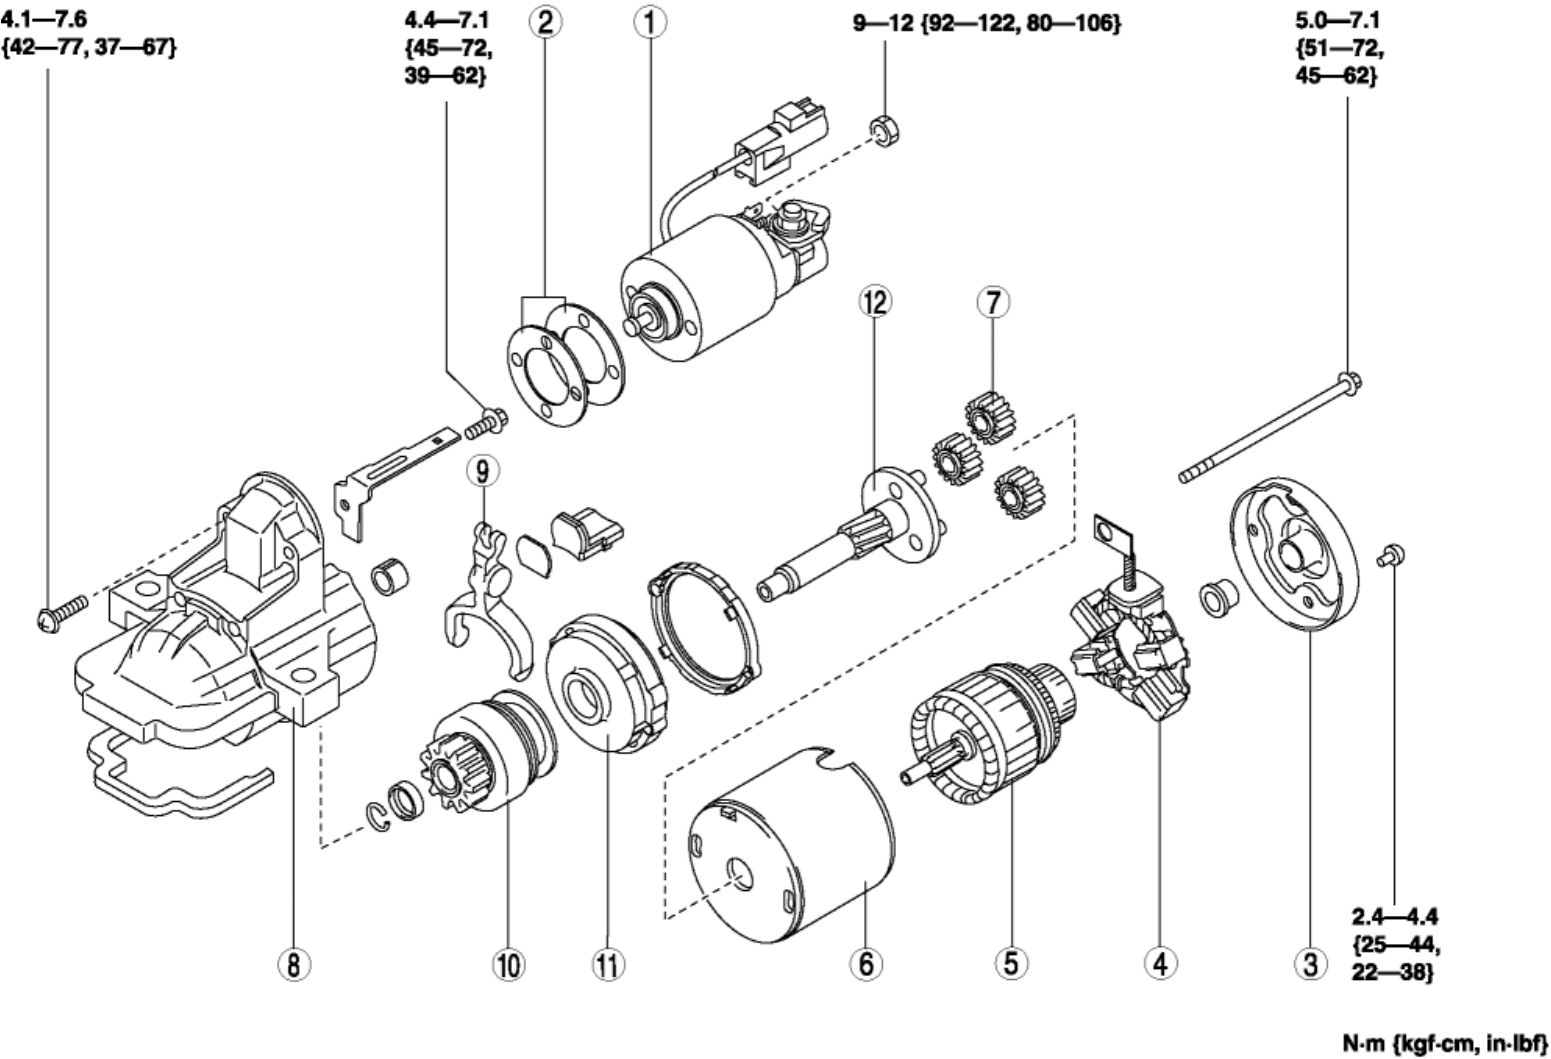


1	Magnetic switch
2	Adjustment washer
3	Rear housing
4	Brush and brush holder
5	Armature
6	Yoke

7	Planetary gear
8	Front cover
9	Lever
10	Drive pinion
11	Internal gear
12	Gear shaft

2012 - Mazda6 - Engine

STARTER DISASSEMBLY/ ASSEMBLY [MZR 2.5]

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

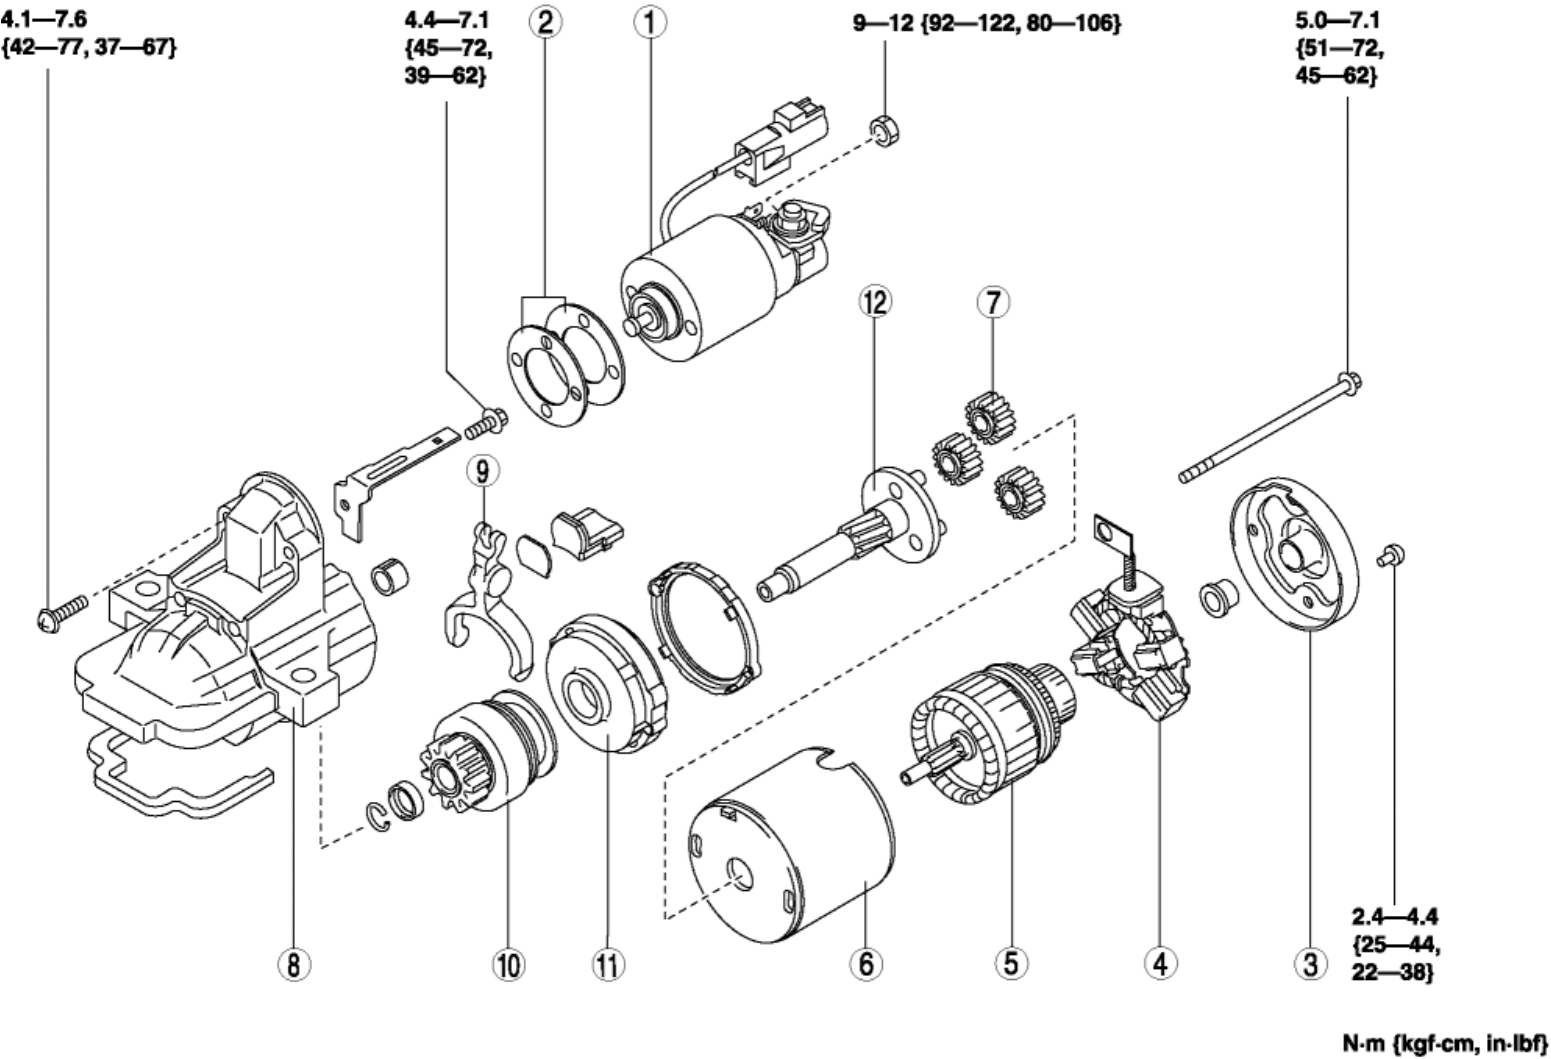

1	Magnetic switch
2	Adjustment washer
3	Rear housing
4	Brush and brush holder
5	Armature
6	Yoke

7	Planetary gear
8	Front cover
9	Lever
10	Drive pinion
11	Internal gear
12	Gear shaft