


[< Previous](#) [Next >](#)

2012 - Mazda6 - Engine

STARTING SYSTEM LOCATION INDEX [MZI 3.7 V6]

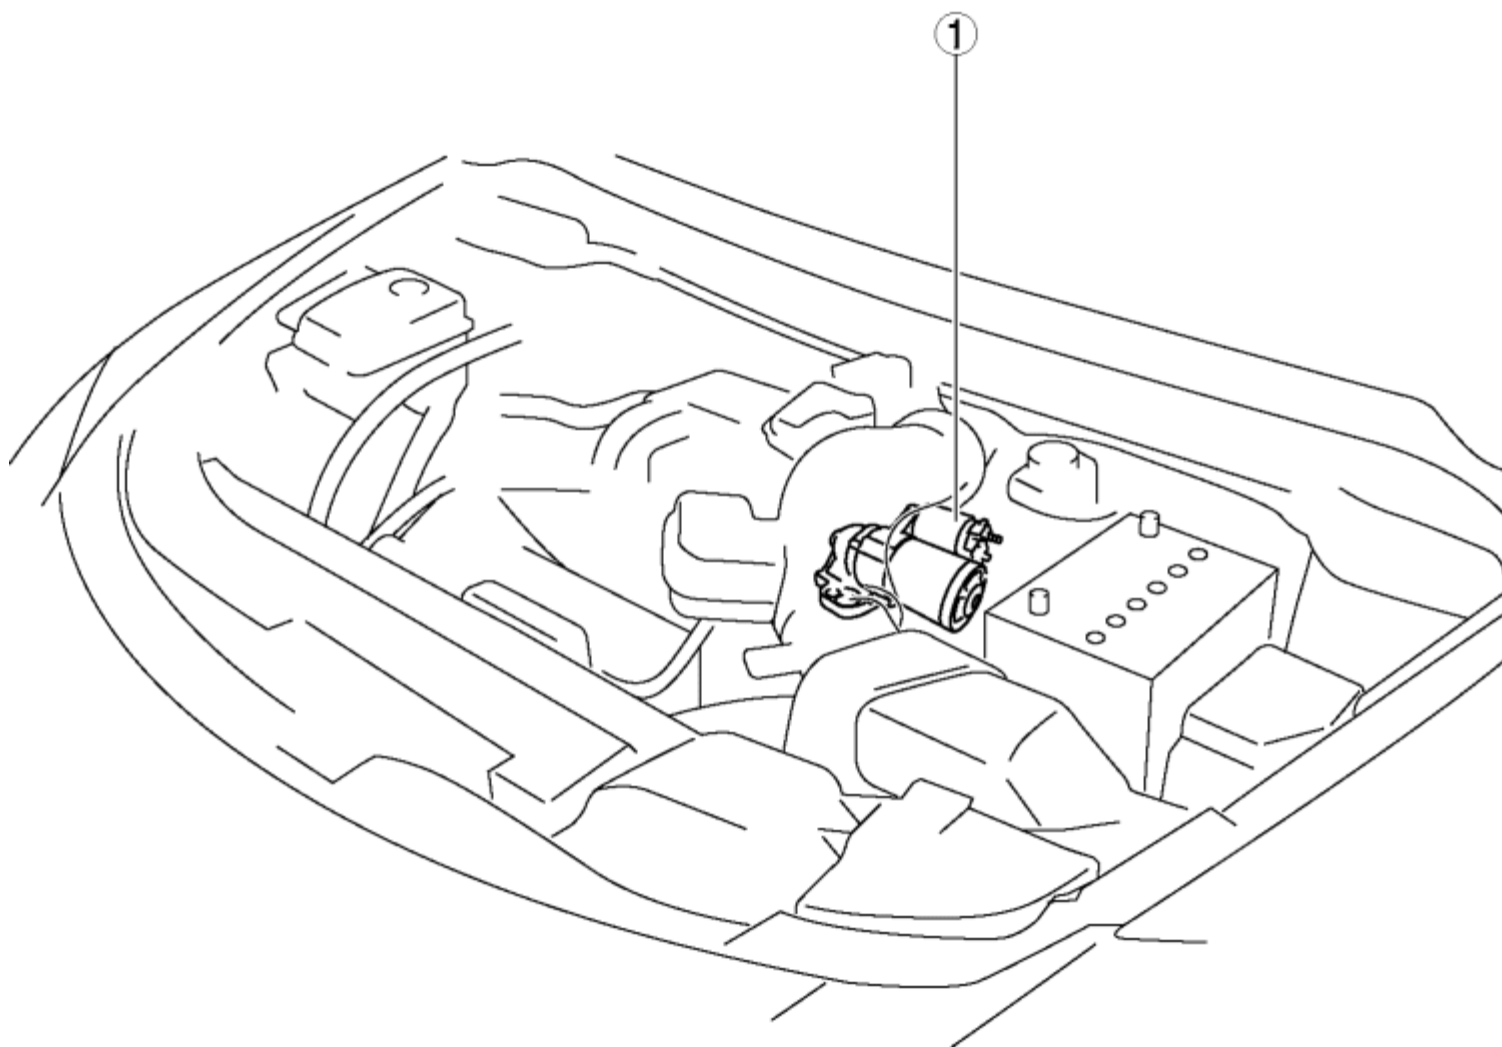

1 Starter

(See [STARTER REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)

(See [STARTER INSPECTION \[MZI 3.7 V6\]](#) .)

(See [STARTER DISASSEMBLY/ ASSEMBLY \[MZI 3.7 V6\]](#) .)


[< Previous](#) [Next >](#)

[Back to Top](#)

[< Previous](#) [Next >](#)

2012 - Mazda6 - Engine

STARTING SYSTEM LOCATION INDEX [MZI 3.7 V6]

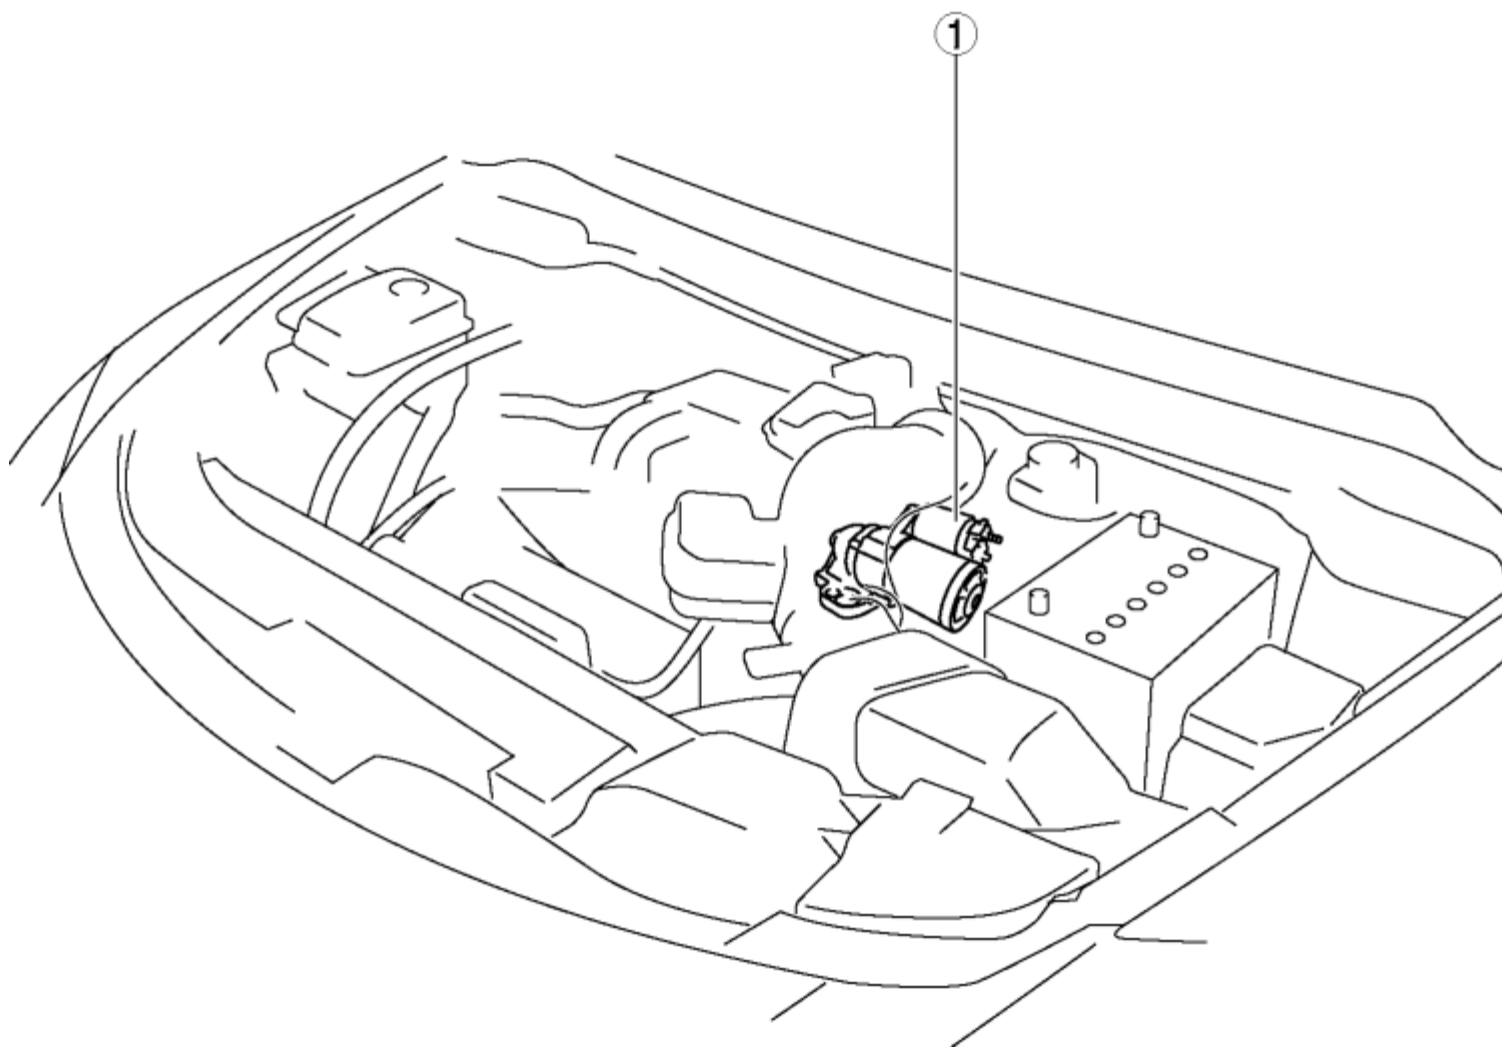

1 Starter

(See [STARTER REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)

(See [STARTER INSPECTION \[MZI 3.7 V6\]](#).)

(See [STARTER DISASSEMBLY/ ASSEMBLY \[MZI 3.7 V6\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)