


2012 - Mazda6 - Engine

STARTER DISASSEMBLY/ ASSEMBLY [MZI 3.7 V6]

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

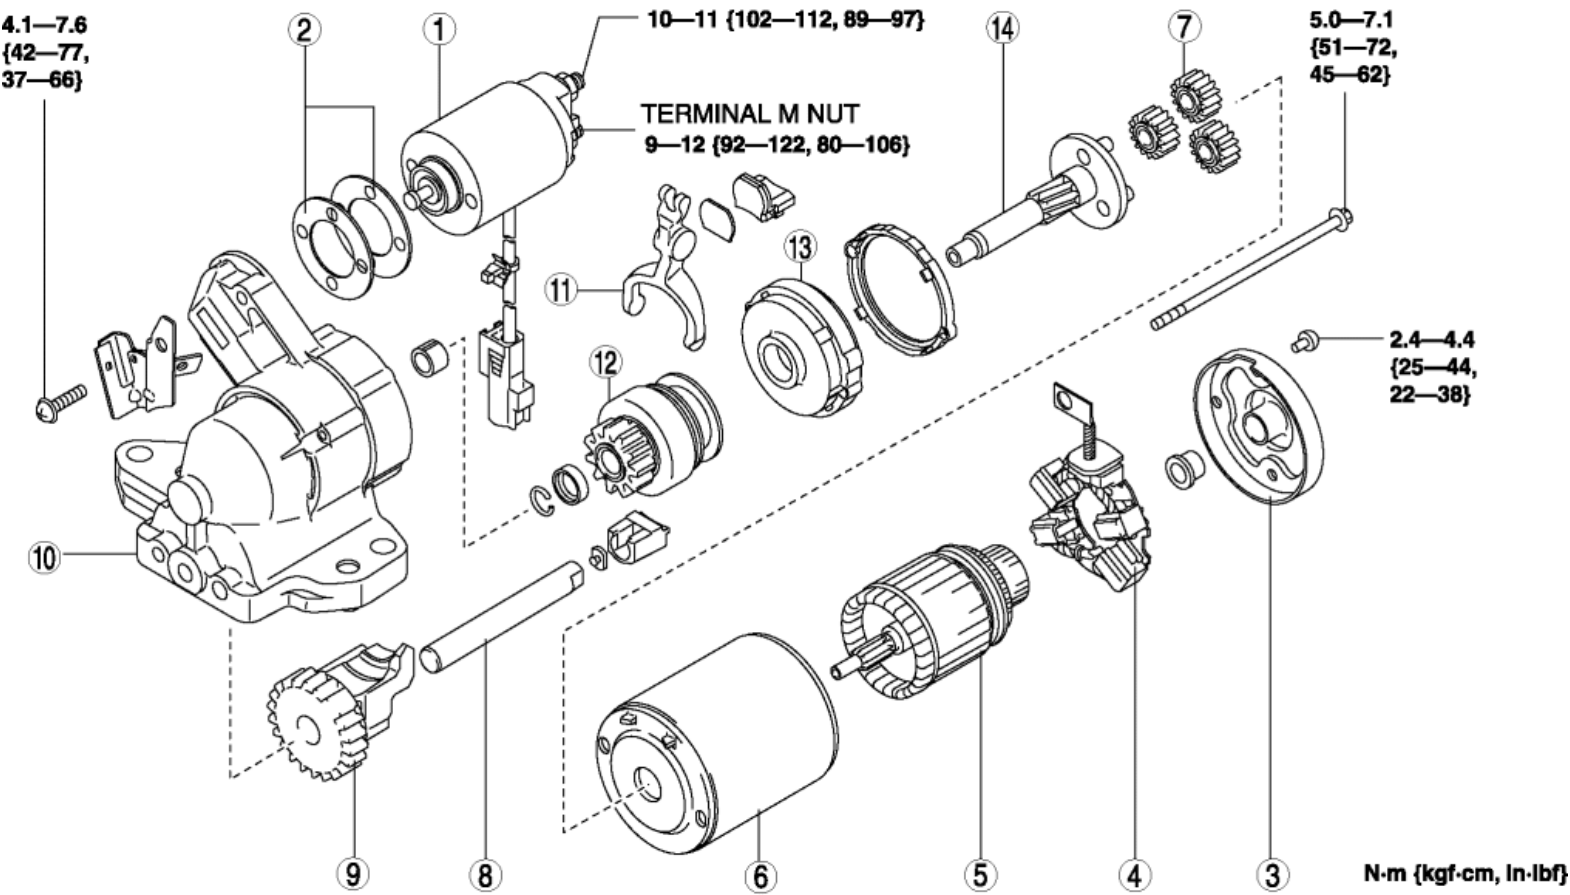


1	Magnetic switch
2	Adjustment washer
3	Rear housing
4	Brush and brush holder
5	Armature
6	Yoke
7	Planetary gear
8	Pinion shaft
9	Pinion

10	Front cover
11	Lever
12	Drive pinion
13	Internal gear
14	Gear shaft

2012 - Mazda6 - Engine

STARTER DISASSEMBLY/ ASSEMBLY [MZI 3.7 V6]

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

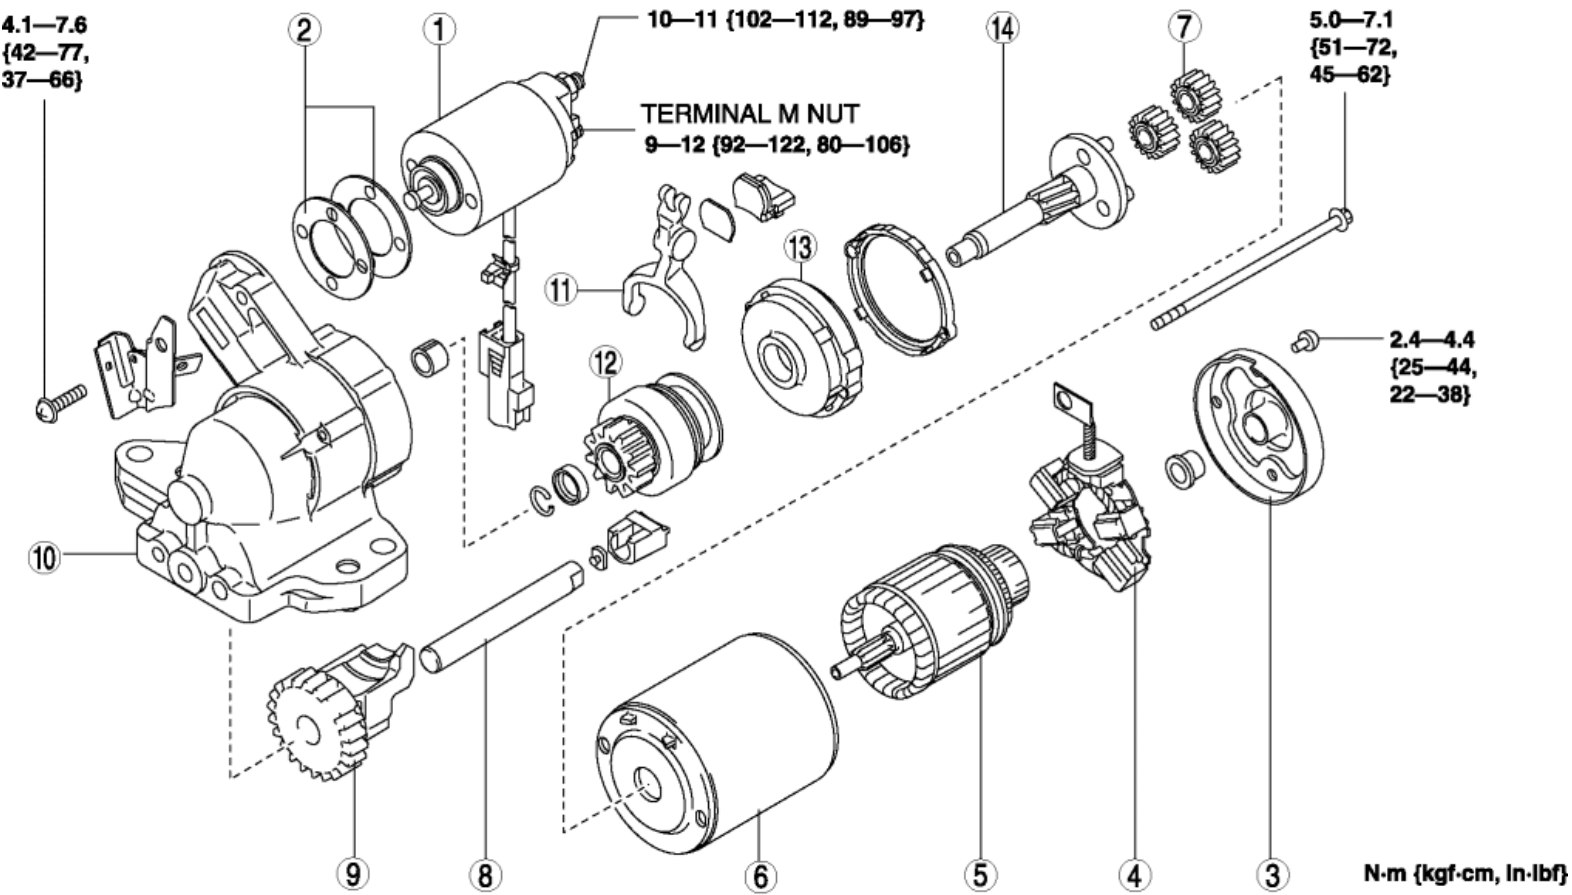

1	Magnetic switch
2	Adjustment washer
3	Rear housing
4	Brush and brush holder
5	Armature
6	Yoke
7	Planetary gear
8	Pinion shaft
9	Pinion

10	Front cover
11	Lever
12	Drive pinion
13	Internal gear
14	Gear shaft