


2012 - Mazda6 - Engine

NEUTRAL SWITCH INSPECTION [MZR 2.5]

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Disconnect the neutral switch connector. (See [NEUTRAL SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)
- 3. Remove the neutral switch. (See [NEUTRAL SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)
- 4. Inspect for continuity between neutral switch terminals A and B.

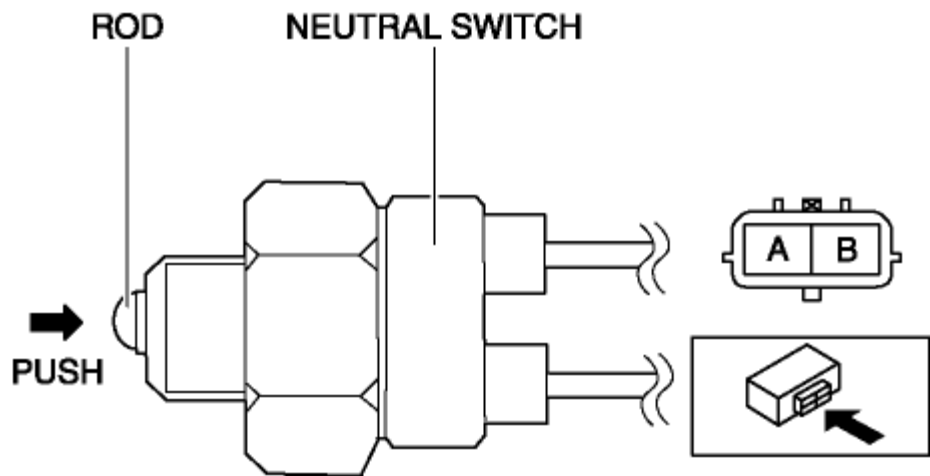

- If not as specified, replace the neutral switch. (See [NEUTRAL SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)


Neutral switch specification

Measured condition	Continuity
Rod pushed	Continuity detected
Except above	No continuity

2012 - Mazda6 - Engine

NEUTRAL SWITCH INSPECTION [MZR 2.5]

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Disconnect the neutral switch connector. (See [NEUTRAL SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)
- 3. Remove the neutral switch. (See [NEUTRAL SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)
- 4. Inspect for continuity between neutral switch terminals A and B.

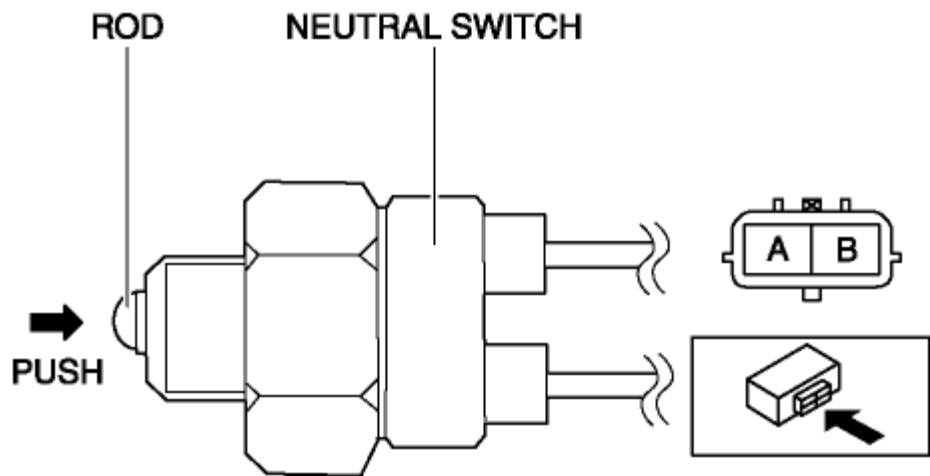

- If not as specified, replace the neutral switch. (See [NEUTRAL SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)

Neutral switch specification

Measured condition	Continuity
Rod pushed	Continuity detected
Except above	No continuity