


2012 - Mazda6 - Engine

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [MZR 2.5]

1. Connect the M-MDS to the DLC-2.

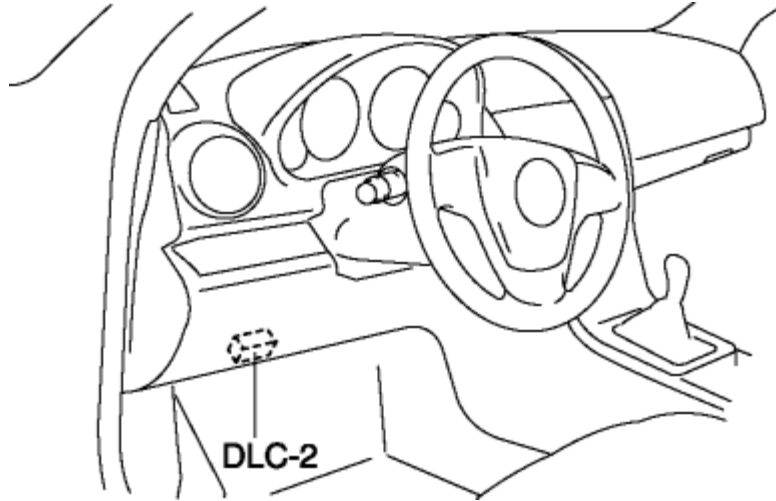


2. Switch the ignition to ON.
3. Verify that the MAP sensor output voltage (PID: MAP) within the specification. (See [ON-BOARD DIAGNOSTIC TEST \[MZR 2.5\]](#).) (See [PCM INSPECTION \[MZR 2.5\]](#).)
 - If not as specified, replace the MAP sensor. (See [MANIFOLD ABSOLUTE PRESSURE \(MAP\) SENSOR REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

2012 - Mazda6 - Engine

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [MZR 2.5]

1. Connect the M-MDS to the DLC-2.

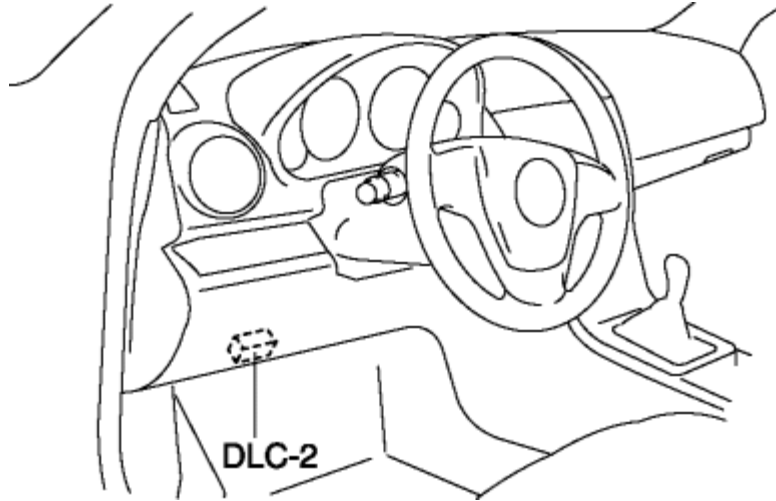

2. Switch the ignition to ON.
3. Verify that the MAP sensor output voltage (PID: MAP) within the specification. (See [ON-BOARD DIAGNOSTIC TEST \[MZR 2.5\]](#).) (See [PCM INSPECTION \[MZR 2.5\]](#).)
 - If not as specified, replace the MAP sensor. (See [MANIFOLD ABSOLUTE PRESSURE \(MAP\) SENSOR REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)