


2012 - Mazda6 - Engine

CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [MZR 2.5]

- 1. Verify that the CPP switch is installed properly.
- 2. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 3. Disconnect CPP switch connector. (See [CLUTCH PEDAL REMOVAL/ INSTALLATION \[G66M-R\]](#).)
- 4. Inspect for continuity between CPP switch terminals A and B.

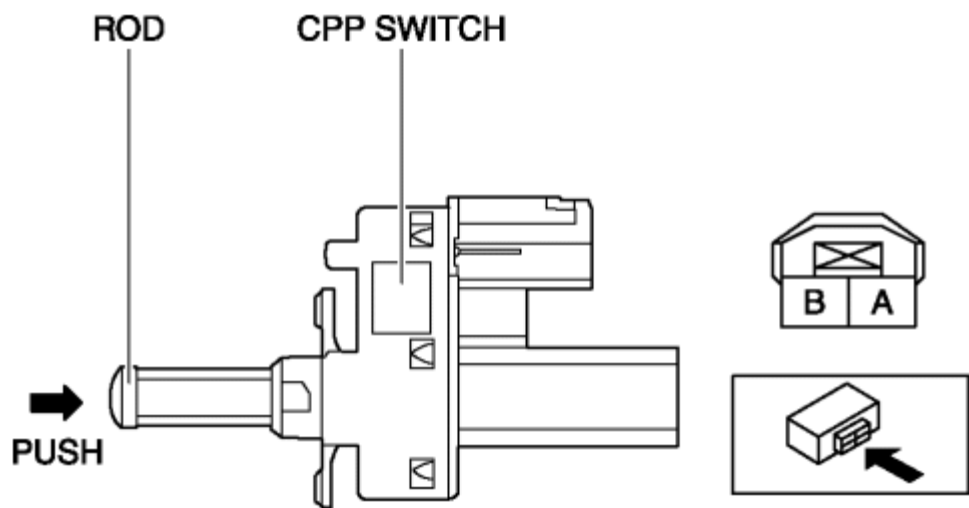

- If not as specified, replace the CPP switch. (See [CLUTCH PEDAL REMOVAL/ INSTALLATION \[G66M-R\]](#).)


CPP switch specification

Measured condition	Clutch pedal position	Continuity
Rod pushed	Clutch pedal released	Continuity detected
Except above	Clutch pedal depressed	No continuity

2012 - Mazda6 - Engine

CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [MZR 2.5]

- 1. Verify that the CPP switch is installed properly.
- 2. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 3. Disconnect CPP switch connector. (See [CLUTCH PEDAL REMOVAL/ INSTALLATION \[G66M-R\]](#).)
- 4. Inspect for continuity between CPP switch terminals A and B.

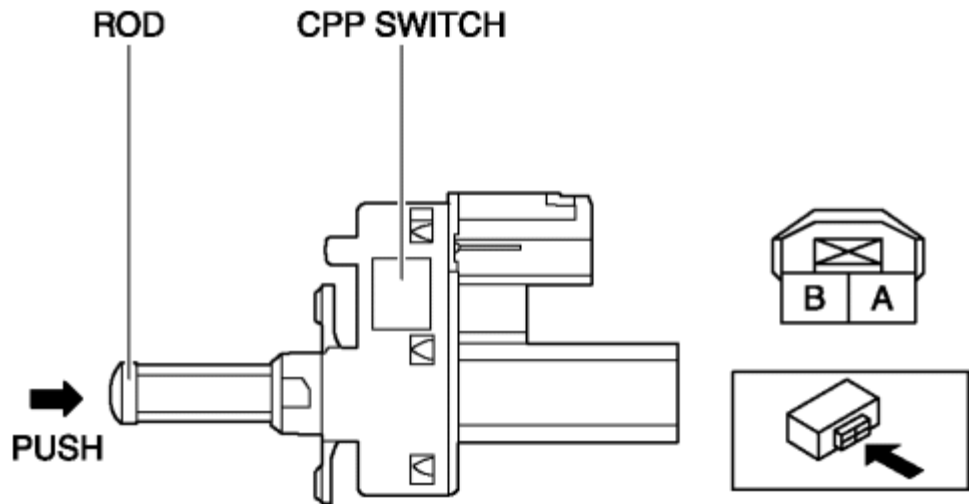

- If not as specified, replace the CPP switch. (See [CLUTCH PEDAL REMOVAL/ INSTALLATION \[G66M-R\]](#).)

CPP switch specification

Measured condition	Clutch pedal position	Continuity
Rod pushed	Clutch pedal released	Continuity detected
Except above	Clutch pedal depressed	No continuity