


2012 - Mazda6 - Engine

ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/ INSTALLATION [MZR 2.5]

WARNING:

- When the engine is hot, it can badly burn. Turn off the engine and wait until it is cool before removing the ECT sensor.
1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 2. Drain the engine coolant. (See [ENGINE COOLANT REPLACEMENT \[MZR 2.5\]](#).)
 3. Remove the battery and battery tray. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 4. Disconnect the ECT sensor connector.
 5. Remove the ECT sensor.

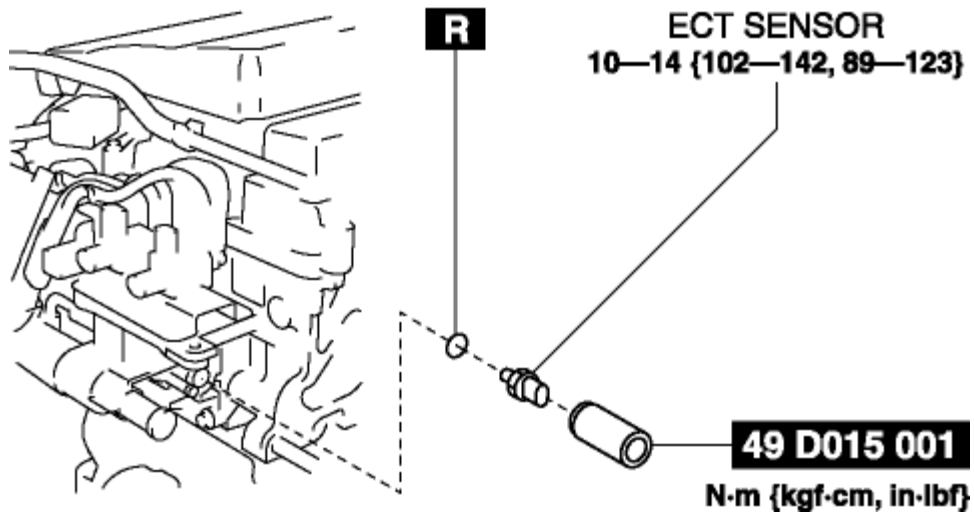


6. Install in the reverse order of removal.
7. Refill the engine coolant. (See [ENGINE COOLANT REPLACEMENT \[MZR 2.5\]](#).)

2012 - Mazda6 - Engine

ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/ INSTALLATION [MZR 2.5]

WARNING:

- When the engine is hot, it can badly burn. Turn off the engine and wait until it is cool before removing the ECT sensor.
1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 2. Drain the engine coolant. (See [ENGINE COOLANT REPLACEMENT \[MZR 2.5\]](#).)
 3. Remove the battery and battery tray. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 4. Disconnect the ECT sensor connector.
 5. Remove the ECT sensor.

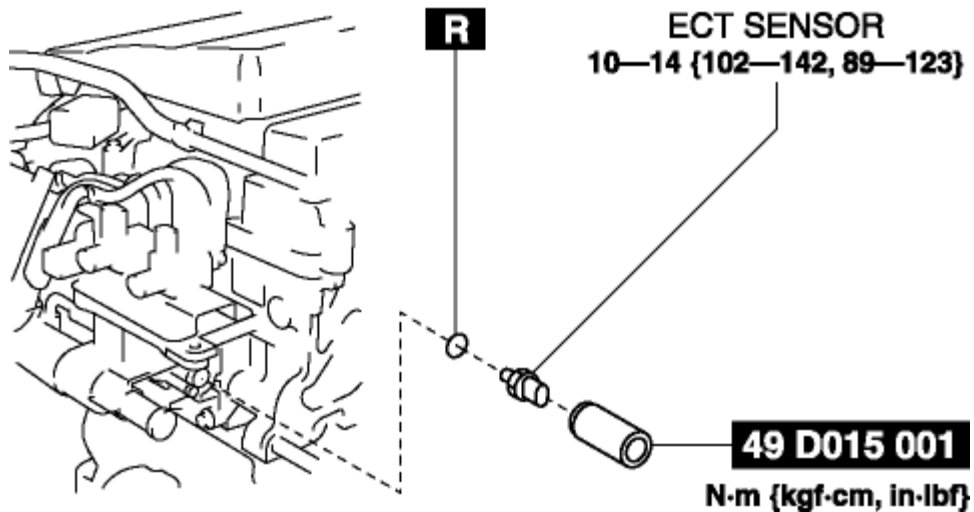

6. Install in the reverse order of removal.
7. Refill the engine coolant. (See [ENGINE COOLANT REPLACEMENT \[MZR 2.5\]](#).)