


2012 - Mazda6 - Engine

HEATED OXYGEN SENSOR (HO2S) REMOVAL/ INSTALLATION [MZR 2.5]

WARNING:

- A hot engine and exhaust system can cause severe burns. Turn off the engine and wait until they are cool before removing the exhaust system.
1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 2. Remove the plug hole plate. (See [PLUG HOLE PLATE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 3. Disconnect the HO2S connector.
 4. Remove the HO2S using the SST.

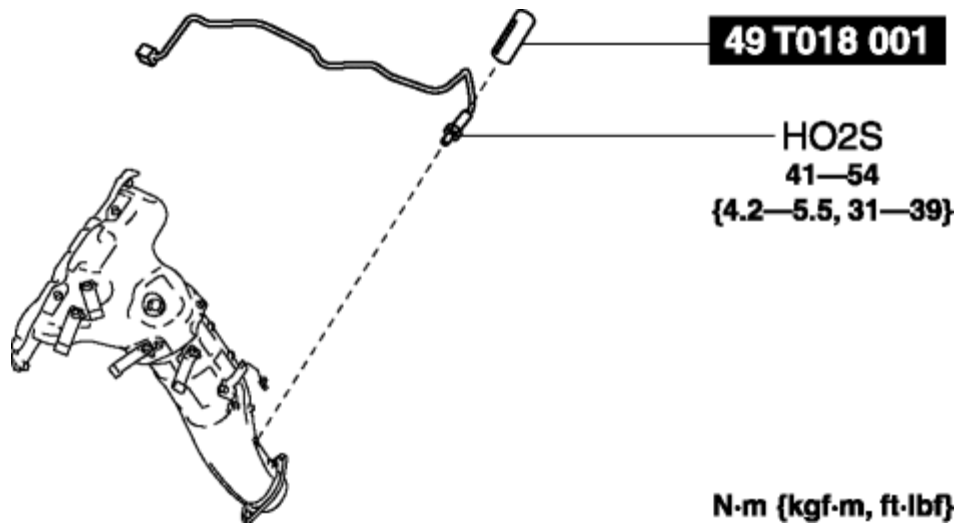


5. Install in the reverse order of removal.

2012 - Mazda6 - Engine

HEATED OXYGEN SENSOR (HO2S) REMOVAL/ INSTALLATION [MZR 2.5]

WARNING:

- A hot engine and exhaust system can cause severe burns. Turn off the engine and wait until they are cool before removing the exhaust system.
1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 2. Remove the plug hole plate. (See [PLUG HOLE PLATE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 3. Disconnect the HO2S connector.
 4. Remove the HO2S using the SST.

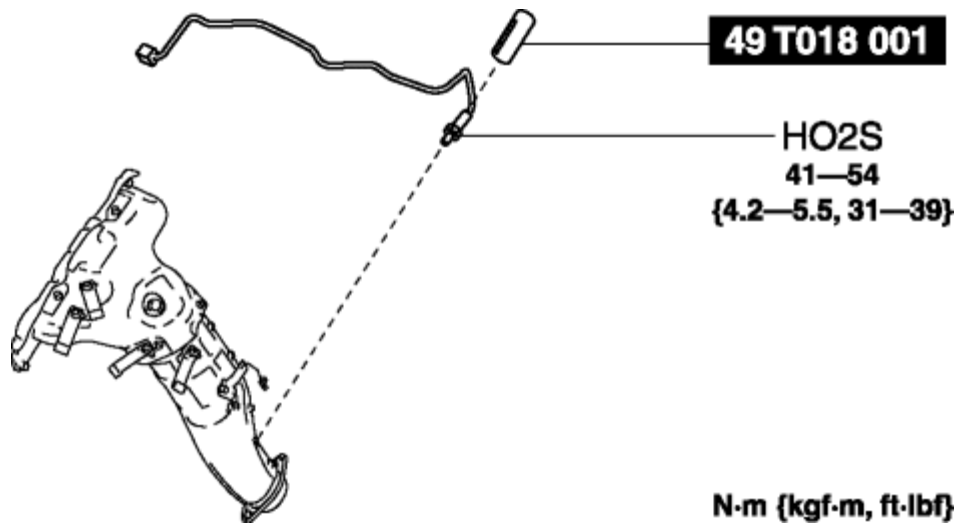

5. Install in the reverse order of removal.