
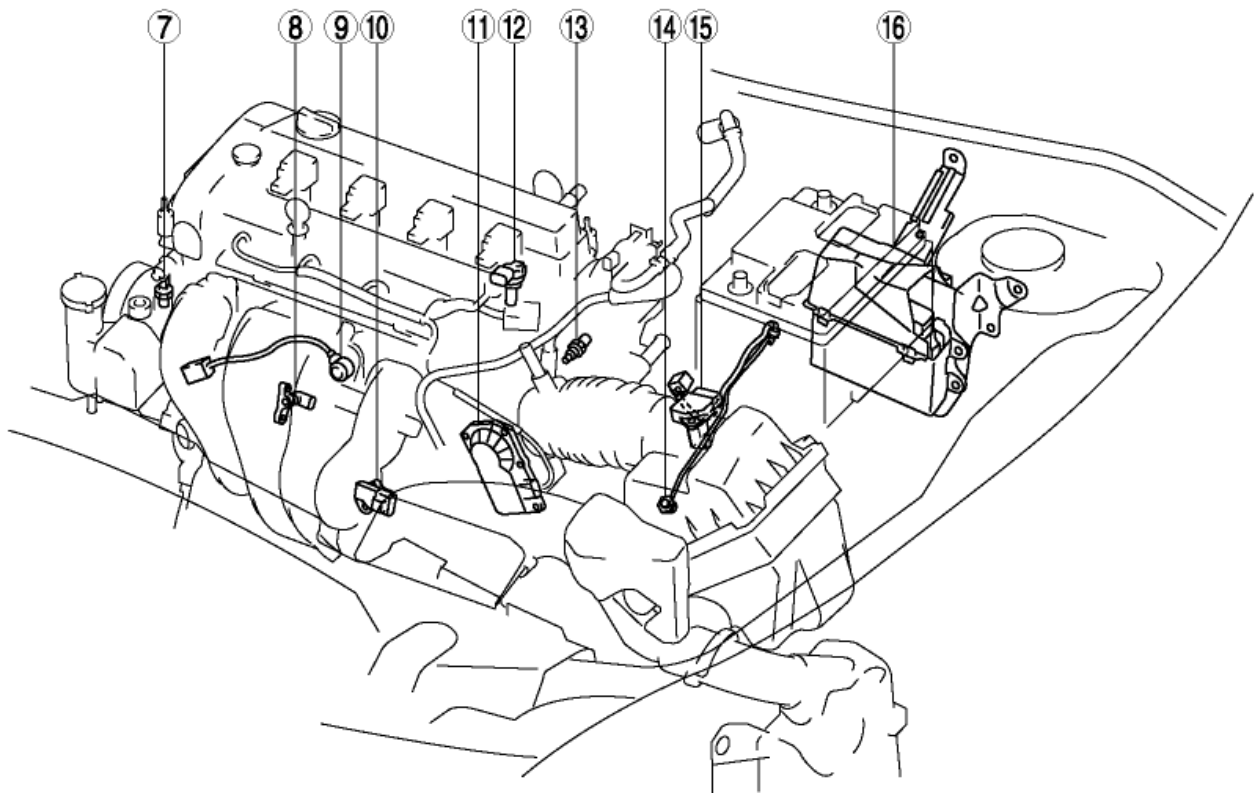
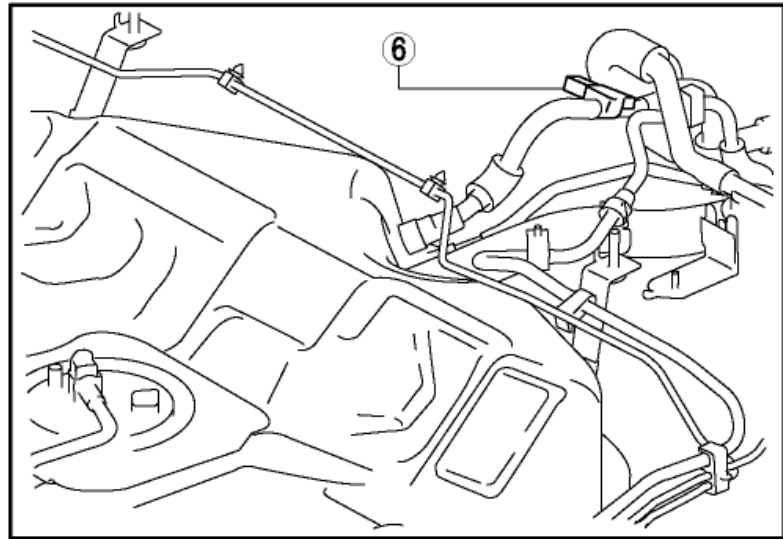
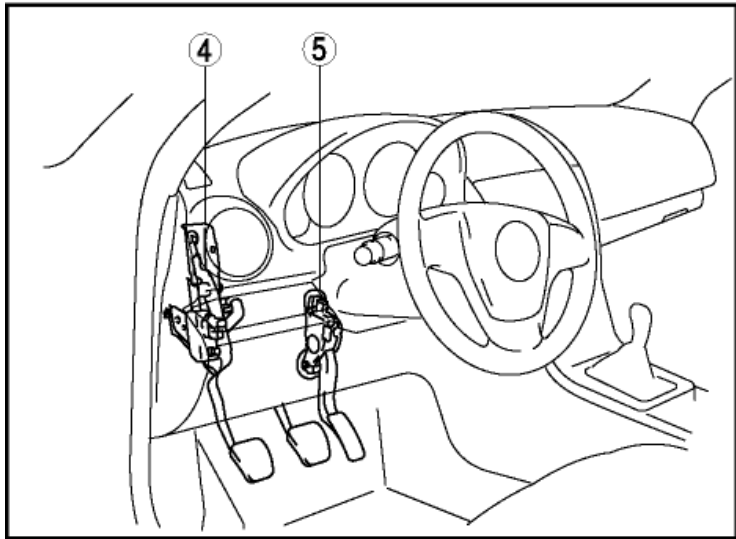
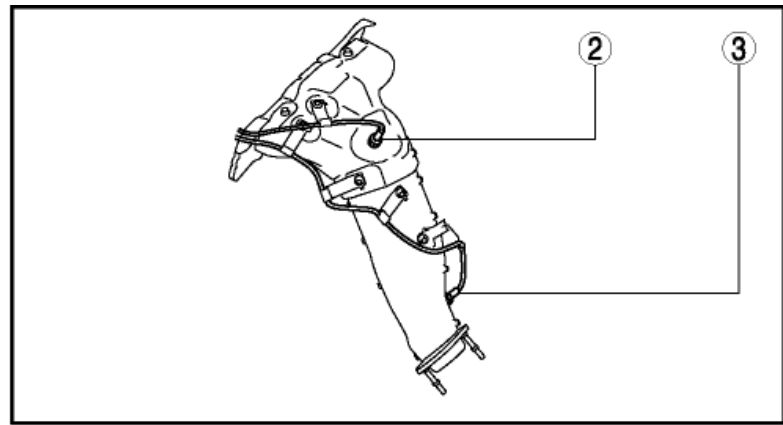


2012 - Mazda6 - Engine

CONTROL SYSTEM LOCATION INDEX [MZR 2.5]





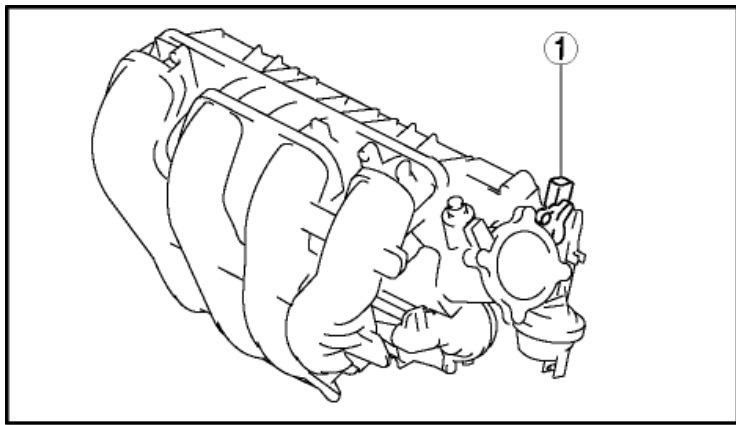


	(See VARIABLE TUMBLE SHUTTER VALVE POSITION SENSOR INSPECTION [MZR 2.5].) (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].)
2 A/F sensor	(See AIR FUEL RATIO (A/ F) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See AIR FUEL RATIO (A/ F) SENSOR INSPECTION [MZR 2.5].)
3 HO2S	(See HEATED OXYGEN SENSOR (HO2S) REMOVAL/ INSTALLATION [MZR 2.5].) (See HEATED OXYGEN SENSOR (HO2S) INSPECTION [MZR 2.5].)
4 CPP switch (MTX)	(See CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [MZR 2.5].) (See CLUTCH PEDAL REMOVAL/ INSTALLATION [G66M-R].)
5 APP sensor	(See ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [MZR 2.5].) (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION [MZR 2.5].)
6 Fuel tank pressure sensor	(See FUEL TANK PRESSURE SENSOR INSPECTION [MZR 2.5].) (See FUEL TANK REMOVAL/ INSTALLATION [MZR 2.5].)
7 PSP switch	(See POWER STEERING PRESSURE (PSP) SWITCH INSPECTION [MZR 2.5].) (See POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY [MZR 2.5].)
8 CKP sensor	(See CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See CRANKSHAFT POSITION (CKP) SENSOR INSPECTION [MZR 2.5].)
9 KS	(See KNOCK SENSOR (KS) REMOVAL/ INSTALLATION [MZR 2.5].) (See KNOCK SENSOR (KS) INSPECTION [MZR 2.5].)
10MAP sensor	(See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [MZR 2.5].)
11TP sensor	(See THROTTLE POSITION (TP) SENSOR INSPECTION [MZR 2.5].) (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].)
12CMP sensor	(See CAMSHAFT POSITION (CMP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See CAMSHAFT POSITION (CMP) SENSOR INSPECTION [MZR 2.5].)

13	ECT sensor (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION [MZR 2.5].)
14	Neutral switch (MTX) (See NEUTRAL SWITCH INSPECTION [MZR 2.5].) (See NEUTRAL SWITCH REMOVAL/ INSTALLATION [G66M-R].)
15	MAF/IAT sensor (See MASS AIR FLOW (MAF) SENSOR INSPECTION [MZR 2.5].) (See INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [MZR 2.5].) (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].)
16	PCM (BARO sensor) (See PCM REMOVAL/ INSTALLATION [MZR 2.5].) (See PCM INSPECTION [MZR 2.5].) (See PCM CONFIGURATION [MZR 2.5].) (See BAROMETRIC PRESSURE (BARO) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See BAROMETRIC PRESSURE (BARO) SENSOR INSPECTION [MZR 2.5].)

2012 - Mazda6 - Engine

CONTROL SYSTEM LOCATION INDEX [MZR 2.5]

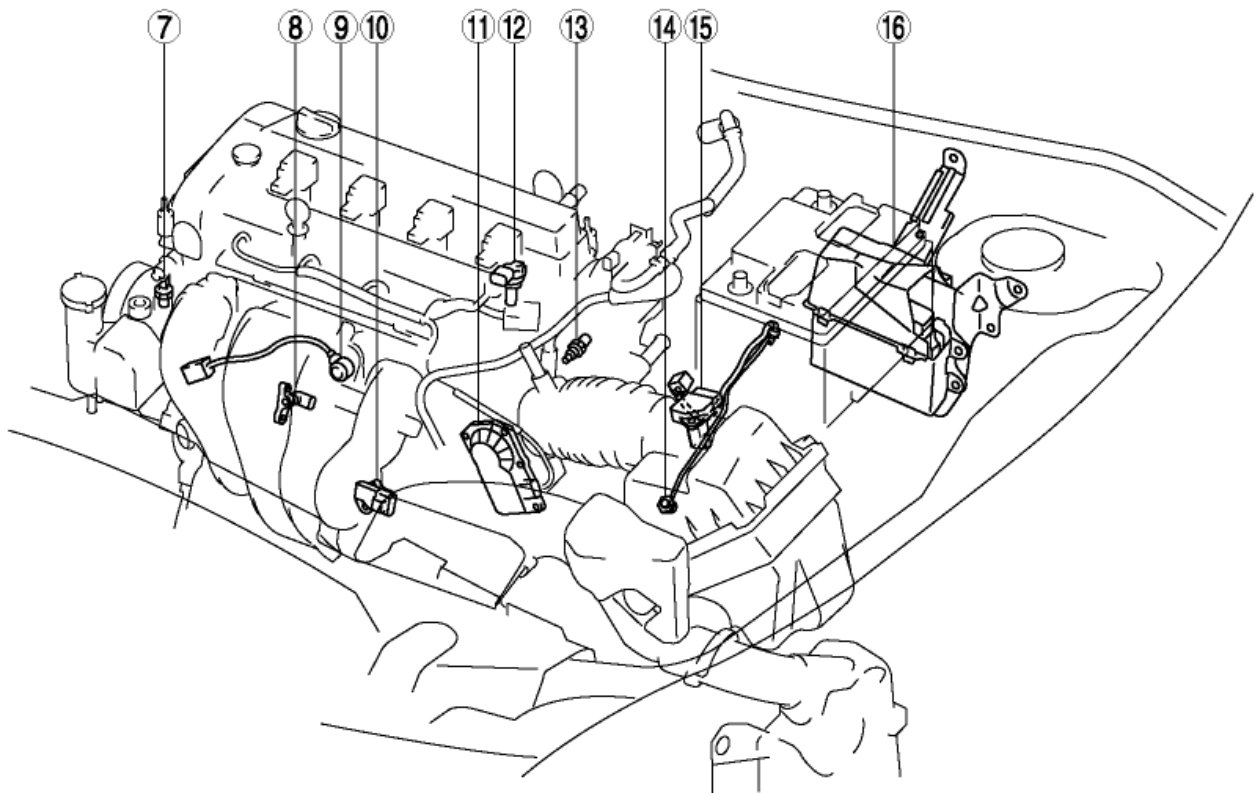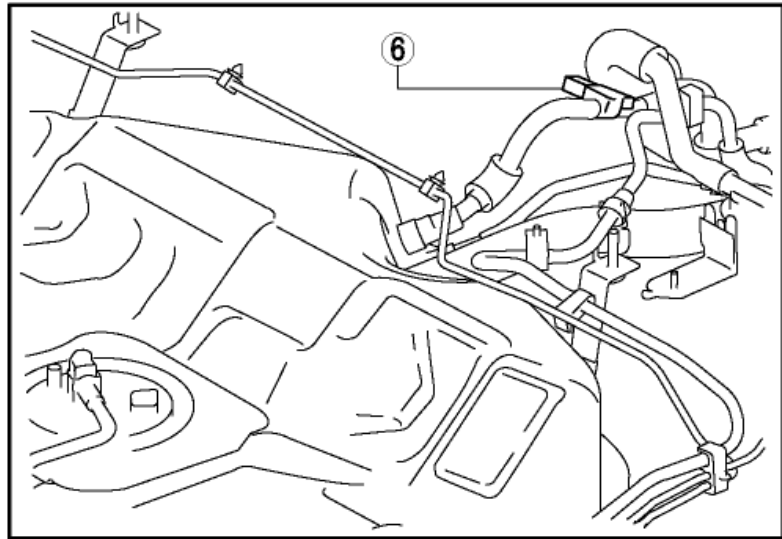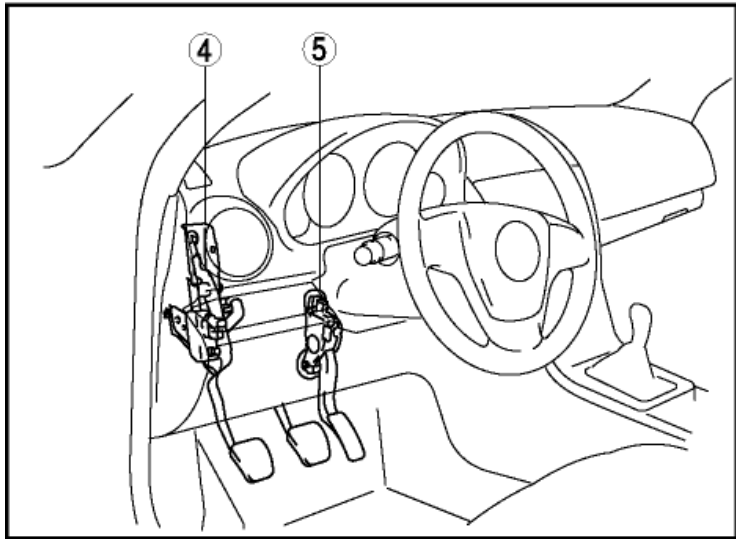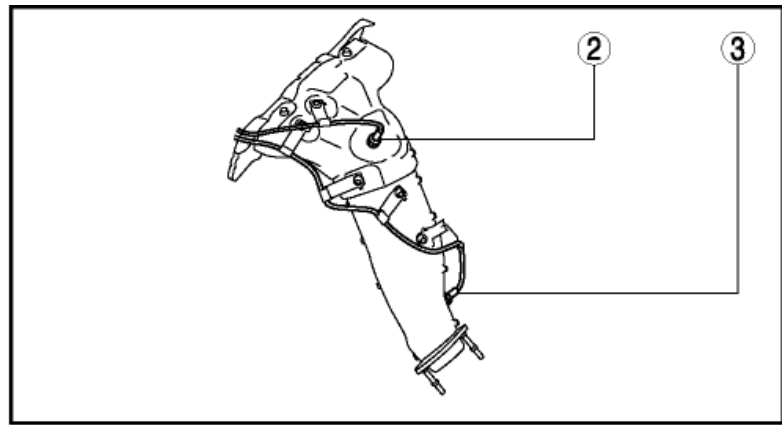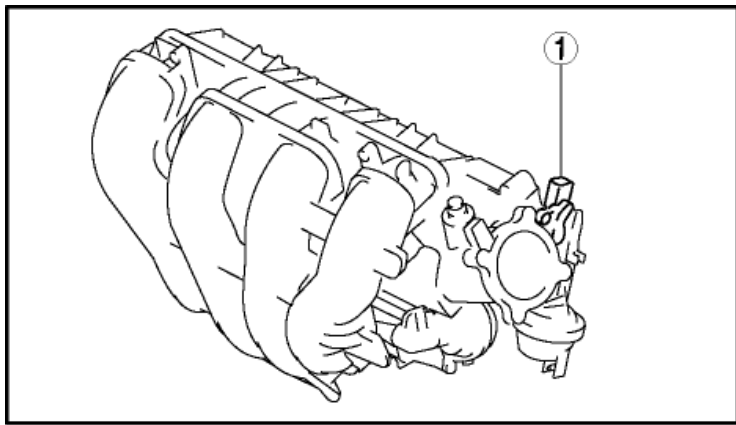

	(See VARIABLE TUMBLE SHUTTER VALVE POSITION SENSOR INSPECTION [MZR 2.5].) (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].)
2	A/F sensor (See AIR FUEL RATIO (A/ F) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See AIR FUEL RATIO (A/ F) SENSOR INSPECTION [MZR 2.5].)
3	HO2S (See HEATED OXYGEN SENSOR (HO2S) REMOVAL/ INSTALLATION [MZR 2.5].) (See HEATED OXYGEN SENSOR (HO2S) INSPECTION [MZR 2.5].)
4	CPP switch (MTX) (See CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [MZR 2.5].) (See CLUTCH PEDAL REMOVAL/ INSTALLATION [G66M-R].)
5	APP sensor (See ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [MZR 2.5].) (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION [MZR 2.5].)
6	Fuel tank pressure sensor (See FUEL TANK PRESSURE SENSOR INSPECTION [MZR 2.5].) (See FUEL TANK REMOVAL/ INSTALLATION [MZR 2.5].)
7	PSP switch (See POWER STEERING PRESSURE (PSP) SWITCH INSPECTION [MZR 2.5].) (See POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY [MZR 2.5].)
8	CKP sensor (See CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See CRANKSHAFT POSITION (CKP) SENSOR INSPECTION [MZR 2.5].)
9	KS (See KNOCK SENSOR (KS) REMOVAL/ INSTALLATION [MZR 2.5].) (See KNOCK SENSOR (KS) INSPECTION [MZR 2.5].)
10	MAP sensor (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [MZR 2.5].)
11	TP sensor (See THROTTLE POSITION (TP) SENSOR INSPECTION [MZR 2.5].) (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].)
12	CMP sensor (See CAMSHAFT POSITION (CMP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See CAMSHAFT POSITION (CMP) SENSOR INSPECTION [MZR 2.5].)

13	ECT sensor (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION [MZR 2.5].)
14	Neutral switch (MTX) (See NEUTRAL SWITCH INSPECTION [MZR 2.5].) (See NEUTRAL SWITCH REMOVAL/ INSTALLATION [G66M-R].)
15	MAF/IAT sensor (See MASS AIR FLOW (MAF) SENSOR INSPECTION [MZR 2.5].) (See INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [MZR 2.5].) (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].)
16	PCM (BARO sensor) (See PCM REMOVAL/ INSTALLATION [MZR 2.5].) (See PCM INSPECTION [MZR 2.5].) (See PCM CONFIGURATION [MZR 2.5].) (See BAROMETRIC PRESSURE (BARO) SENSOR REMOVAL/ INSTALLATION [MZR 2.5].) (See BAROMETRIC PRESSURE (BARO) SENSOR INSPECTION [MZR 2.5].)