


2012 - Mazda6 - Engine

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5]

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Remove the plug hole plate. (See [PLUG HOLE PLATE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
3. Disconnect the MAP sensor connector.
4. Remove the MAP sensor.

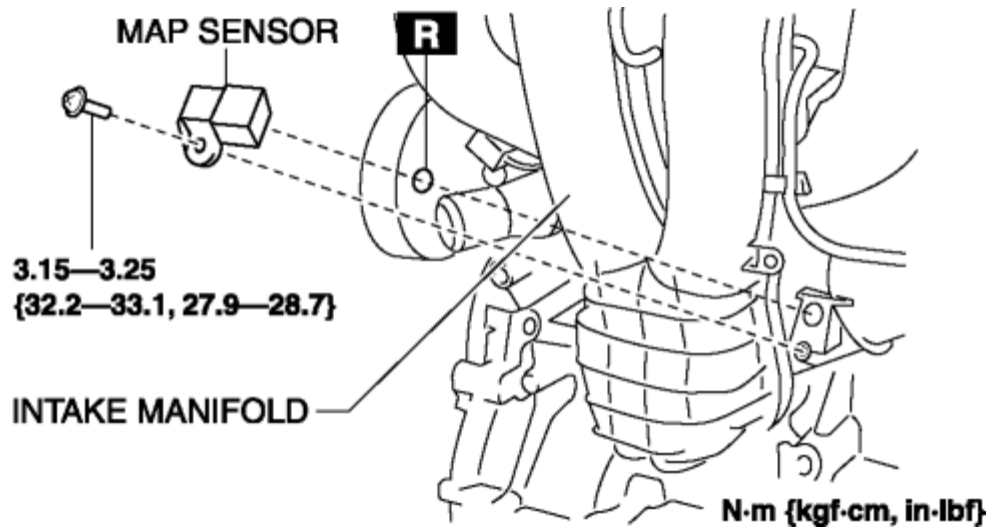


5. Install in the reverse order of removal.

2012 - Mazda6 - Engine

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5]

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Remove the plug hole plate. (See [PLUG HOLE PLATE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
3. Disconnect the MAP sensor connector.
4. Remove the MAP sensor.

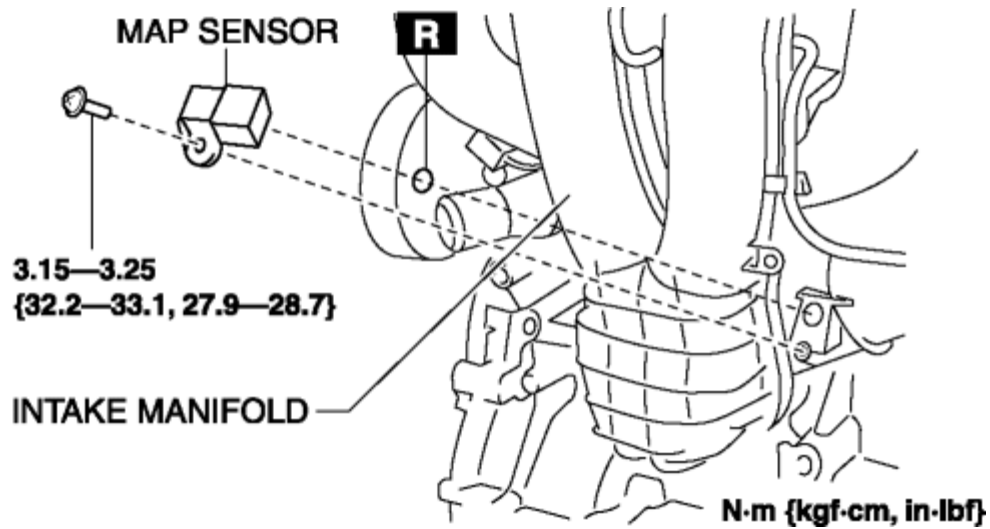

5. Install in the reverse order of removal.