

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
2. Remove the resonance chamber and air cleaner assy for easier access. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
3. Disconnect the CMP sensor connector
4. Remove the CMP sensor.



- [< Previous](#)   [Next >](#)

