


2012 - Mazda6 - Engine

POWER STEERING PRESSURE (PSP) SWITCH INSPECTION [MZI 3.7 V6]

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
2. Disconnect the PSP switch connector.
3. Reconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
4. Start the engine.
5. Verify no continuity between PSP switch terminal A and body ground while rotating the steering wheel.

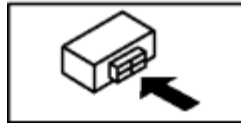


- If there is continuity, replace the PSP switch. (See [POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY \[MZI 3.7 V6\]](#) .)

2012 - Mazda6 - Engine

POWER STEERING PRESSURE (PSP) SWITCH INSPECTION [MZI 3.7 V6]

1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
2. Disconnect the PSP switch connector.
3. Reconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
4. Start the engine.
5. Verify no continuity between PSP switch terminal A and body ground while rotating the steering wheel.

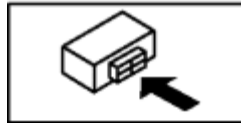

- If there is continuity, replace the PSP switch. (See [POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY \[MZI 3.7 V6\]](#) .)