


2012 - Mazda6 - Engine

CONTROL SYSTEM LOCATION INDEX [MZI 3.7 V6]

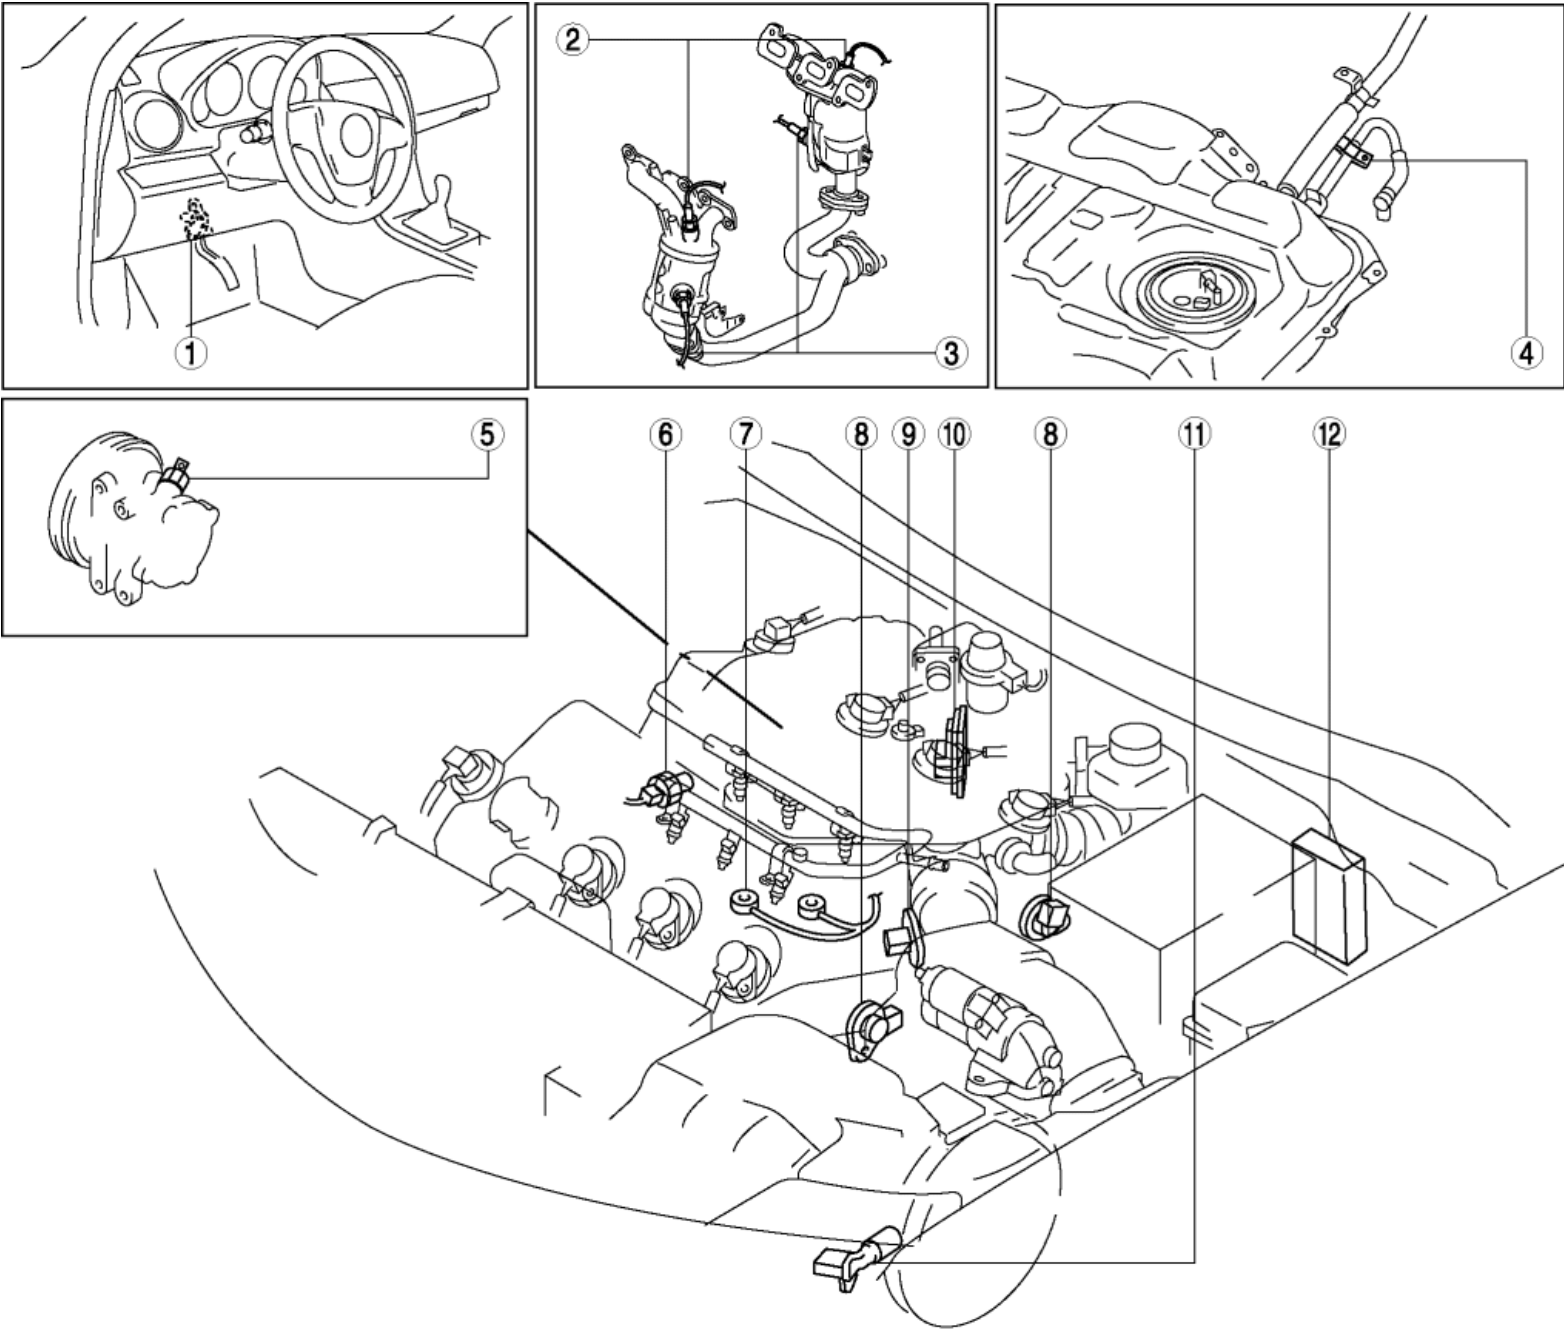


1	APP sensor (See ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [MZI 3.7 V6].) (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION [MZI 3.7 V6].)
2	A/F sensor (See AIR FUEL RATIO (A/ F) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6].)

	(See AIR FUEL RATIO (A/ F) SENSOR INSPECTION [MZI 3.7 V6].)
3 HO2S	(See HEATED OXYGEN SENSOR (HO2S) REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See HEATED OXYGEN SENSOR (HO2S) INSPECTION [MZI 3.7 V6].)
4 Fuel tank pressure sensor	(See FUEL TANK PRESSURE SENSOR INSPECTION [MZI 3.7 V6].) (See FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6].)
5 PSP switch	(See POWER STEERING PRESSURE (PSP) SWITCH INSPECTION [MZI 3.7 V6].) (See POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY [MZI 3.7 V6].)
6 CHT sensor	(See CYLINDER HEAD TEMPERATURE (CHT) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See CYLINDER HEAD TEMPERATURE (CHT) SENSOR INSPECTION [MZI 3.7 V6].)
7 KS	(See KNOCK SENSOR (KS) REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See KNOCK SENSOR (KS) INSPECTION [MZI 3.7 V6].)
8 CMP sensor	(See CAMSHAFT POSITION (CMP) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See CAMSHAFT POSITION (CMP) SENSOR INSPECTION [MZI 3.7 V6].)
9 MAF/IAT sensor	(See MASS AIR FLOW (MAF)/ INTAKE AIR TEMPERATURE (IAT) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See MASS AIR FLOW (MAF) SENSOR INSPECTION [MZI 3.7 V6].) (See INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [MZI 3.7 V6].)
10TP sensor	(See THROTTLE POSITION (TP) SENSOR INSPECTION [MZI 3.7 V6].) (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6].)
11CKP sensor	(See CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See CRANKSHAFT POSITION (CKP) SENSOR INSPECTION [MZI 3.7 V6].)
12PCM	(See PCM REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See PCM INSPECTION [MZI 3.7 V6].) (See PCM CONFIGURATI ON [MZI 3.7 V6].)

2012 - Mazda6 - Engine

CONTROL SYSTEM LOCATION INDEX [MZI 3.7 V6]

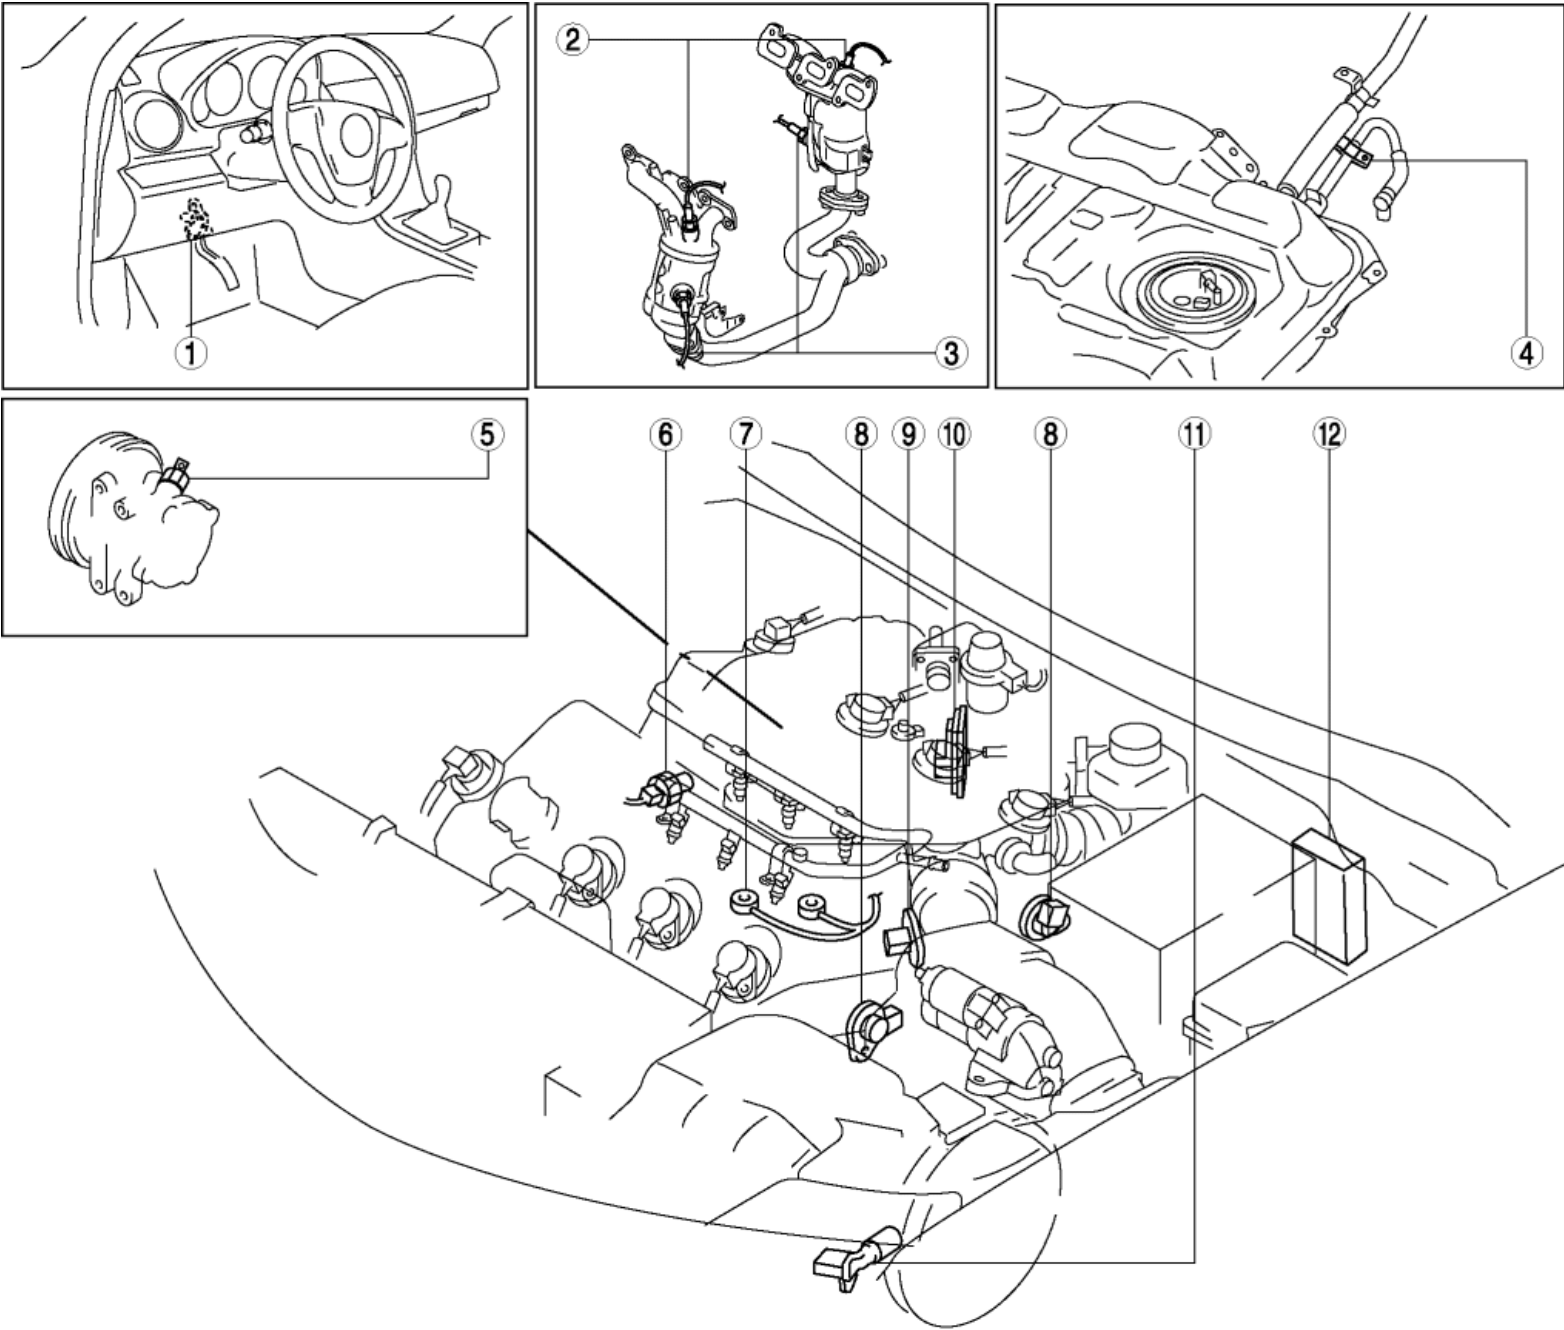

1	APP sensor (See ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [MZI 3.7 V6].) (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION [MZI 3.7 V6].)
2	A/F sensor (See AIR FUEL RATIO (A/ F) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6].)

	(See AIR FUEL RATIO (A/ F) SENSOR INSPECTION [MZI 3.7 V6].)
3 HO2S	(See HEATED OXYGEN SENSOR (HO2S) REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See HEATED OXYGEN SENSOR (HO2S) INSPECTION [MZI 3.7 V6].)
4 Fuel tank pressure sensor	(See FUEL TANK PRESSURE SENSOR INSPECTION [MZI 3.7 V6].) (See FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6].)
5 PSP switch	(See POWER STEERING PRESSURE (PSP) SWITCH INSPECTION [MZI 3.7 V6].) (See POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY [MZI 3.7 V6].)
6 CHT sensor	(See CYLINDER HEAD TEMPERATURE (CHT) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See CYLINDER HEAD TEMPERATURE (CHT) SENSOR INSPECTION [MZI 3.7 V6].)
7 KS	(See KNOCK SENSOR (KS) REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See KNOCK SENSOR (KS) INSPECTION [MZI 3.7 V6].)
8 CMP sensor	(See CAMSHAFT POSITION (CMP) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See CAMSHAFT POSITION (CMP) SENSOR INSPECTION [MZI 3.7 V6].)
9 MAF/IAT sensor	(See MASS AIR FLOW (MAF)/ INTAKE AIR TEMPERATURE (IAT) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See MASS AIR FLOW (MAF) SENSOR INSPECTION [MZI 3.7 V6].) (See INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [MZI 3.7 V6].)
10TP sensor	(See THROTTLE POSITION (TP) SENSOR INSPECTION [MZI 3.7 V6].) (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6].)
11CKP sensor	(See CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See CRANKSHAFT POSITION (CKP) SENSOR INSPECTION [MZI 3.7 V6].)
12PCM	(See PCM REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See PCM INSPECTION [MZI 3.7 V6].) (See PCM CONFIGURATI ON [MZI 3.7 V6].)