


2012 - Mazda6 - Suspension

FRONT SUSPENSION LOCATION INDEX

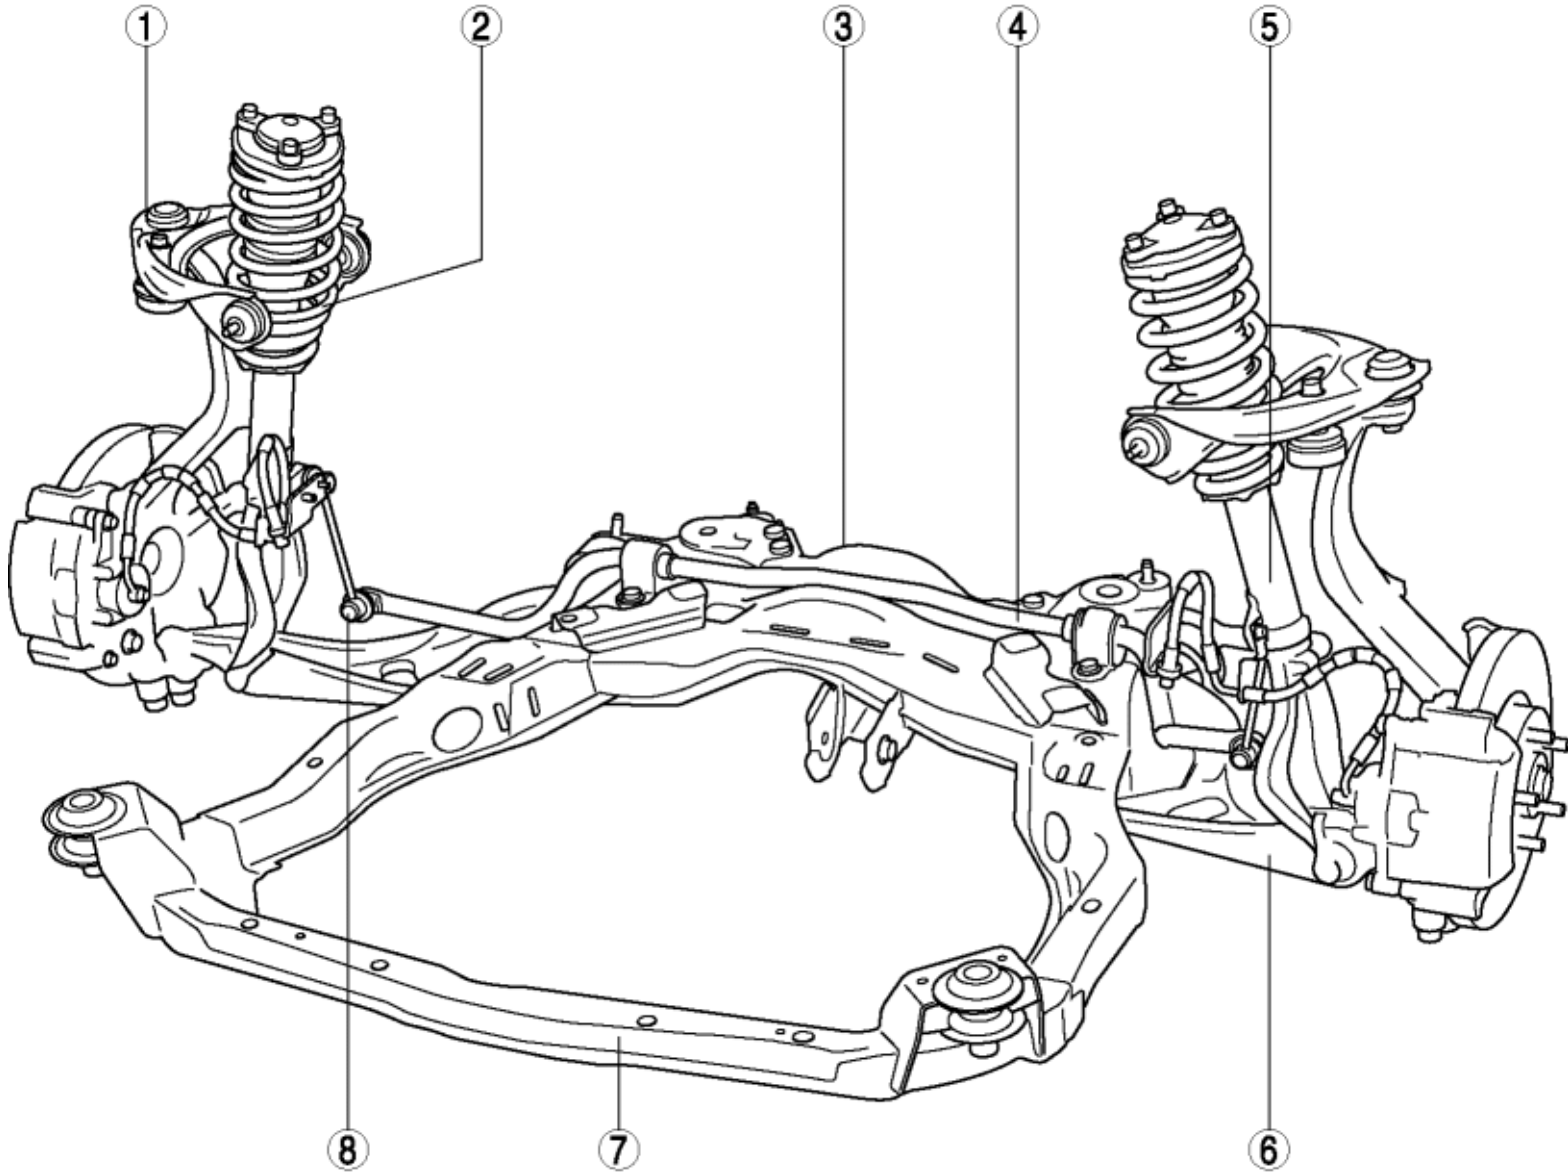

1 Front upper arm

(See [FRONT UPPER ARM REMOVAL/ INSTALLATION.](#))

(See [FRONT UPPER ARM INSPECTION.](#))


2 Front shock absorber and coil spring

(See [FRONT SHOCK ABSORBER AND COIL SPRING REMOVAL/ INSTALLATION.](#))

	(See FRONT SHOCK ABSORBER AND COIL SPRING DI SASSEMBLY/ ASSEMBLY.)
3	Transverse member (See TRANSVERSE MEMBER REMOVAL/ I NSTALLATI ON.)
4	Front stabilizer (See FRONT STABI LIZER CONTROL LINK I NSPECTI ON.)
5	Front shock absorber (See FRONT SHOCK ABSORBER I NSPECTI ON.) (See FRONT SHOCK ABSORBER DI SPOSAL.)
6	Front lower arm (See FRONT LOWER ARM REMOVAL/ I NSTALLATI ON.) (See FRONT LOWER ARM I NSPECTI ON.)
7	Front crossmember (See FRONT CROSSMEMBER REMOVAL/ I NSTALLATI ON [MZR 2.5] .) (See FRONT CROSSMEMBER REMOVAL/ I NSTALLATI ON [MZI 3.7 V6] .)
8	Stabilizer control link (See FRONT STABI LIZER CONTROL LINK I NSPECTI ON.)

2012 - Mazda6 - Suspension

FRONT SUSPENSION LOCATION INDEX

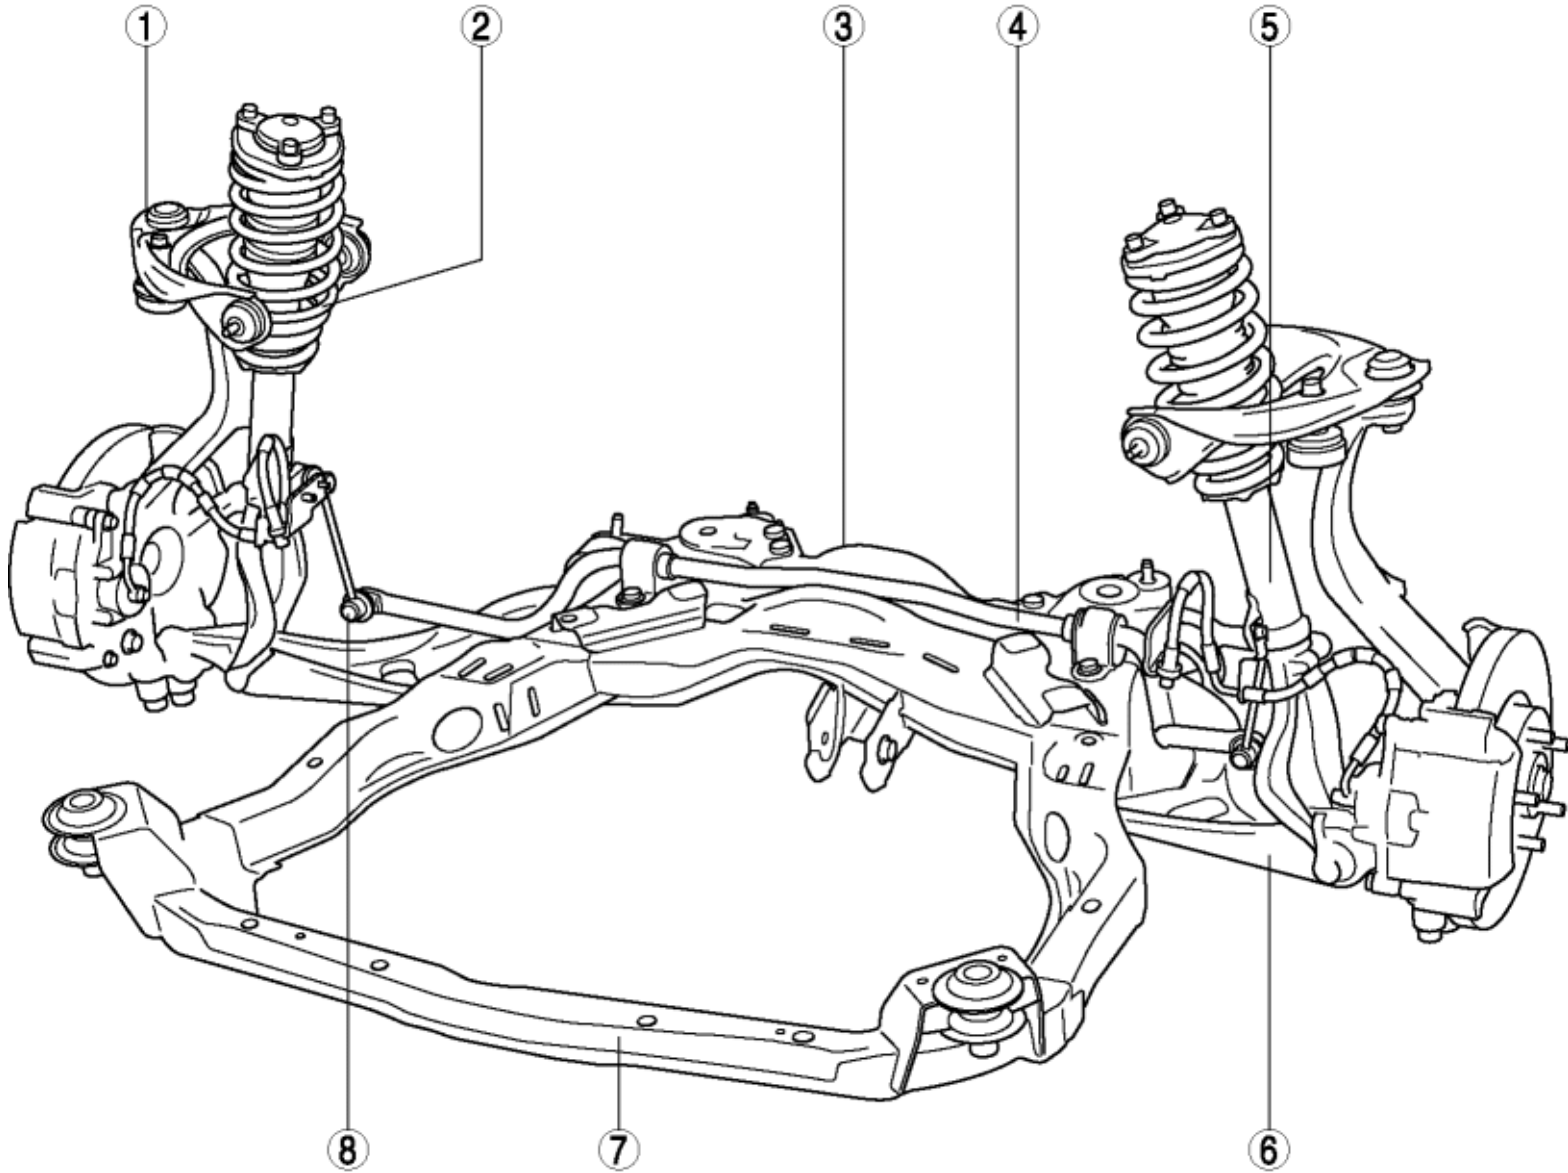

1 Front upper arm

(See [FRONT UPPER ARM REMOVAL/ INSTALLATION.](#))

(See [FRONT UPPER ARM INSPECTION.](#))

2 Front shock absorber and coil spring

(See [FRONT SHOCK ABSORBER AND COIL SPRING REMOVAL/ INSTALLATION.](#))

	(See FRONT SHOCK ABSORBER AND COIL SPRING DI SASSEMBLY/ ASSEMBLY.)
3	Transverse member (See TRANSVERSE MEMBER REMOVAL/ I NSTALLATI ON.)
4	Front stabilizer (See FRONT STABI LIZER CONTROL LINK I NSPECTI ON.)
5	Front shock absorber (See FRONT SHOCK ABSORBER I NSPECTI ON.) (See FRONT SHOCK ABSORBER DI SPOSAL.)
6	Front lower arm (See FRONT LOWER ARM REMOVAL/ I NSTALLATI ON.) (See FRONT LOWER ARM I NSPECTI ON.)
7	Front crossmember (See FRONT CROSSMEMBER REMOVAL/ I NSTALLATI ON [MZR 2.5] .) (See FRONT CROSSMEMBER REMOVAL/ I NSTALLATI ON [MZI 3.7 V6] .)
8	Stabilizer control link (See FRONT STABI LIZER CONTROL LINK I NSPECTI ON.)